

Intel® RAID Software User's Guide:

- Intel® Embedded Server RAID Technology II
- Intel® Integrated Server RAID
- Intel® RAID Controllers using the Intel® RAID Software Stack 3

Revision 8.0

August, 2008

Intel Order Number: D29305-08

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL(R) PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER, AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT. Intel products are not intended for use in medical, life saving, life sustaining applications. Intel may make changes to specifications and product descriptions at any time, without notice.

Intel is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 2008 by Intel Corporation. Portions Copyright 2005-2008 by LSI Logic Corporation. All rights reserved.

Contents

1 Overview	1
Supported Hardware	1
Software	2
RAID Terminology	3
Fault Tolerance	3
Enclosure Management	5
Performance	5
2 RAID Levels	7
Summary of RAID Levels	7
Selecting a RAID Level	7
RAID 0 - Data Striping	8
RAID 1 - Disk Mirroring/Disk Duplexing	8
RAID 5 - Data Striping with Striped Parity	9
RAID 6 - Distributed Parity and Disk Striping	10
RAID 10 - Combination of RAID 1 and RAID 0	11
RAID 50 - Combination of RAID 5 and RAID 0	12
RAID 60 - Combination of RAID 0 and RAID 6	13
RAID Configuration Strategies	16
Maximizing Fault Tolerance	16
Maximizing Performance	17
Maximizing Storage Capacity	19
RAID Availability	19
RAID Availability Concept	19
Spare Drives	20
Rebuilding	20
Configuration Planning	20
Number of Physical Disks	20
Array Purpose	21
3 RAID Utilities	23
Intel® Embedded Server RAID Technology II BIOS Configuration Utility	23
Intel® RAID BIOS Console 2 Configuration Utility for Intelligent RAID	23
Intel® RAID Web Console 2 Configuration and Monitoring Utility	24
Drive Hierarchy within the RAID Firmware	24
Intel® Intelligent RAID Controller Features	25
Enterprise Features	25
Fault Tolerant Features	26
Cache Options and Settings	26
Background Tasks	27
Error Handling	27
Audible Alarm	28
4 Intel® RAID Drivers	29
RAID Driver Installation for Microsoft Windows*	29
RAID Driver Installation in a New Microsoft Windows* Operating System	29
RAID Driver Installation in an Existing Microsoft Windows* Operating System	30

RAID Driver Installation for Red Hat* Enterprise Linux	30
RAID Driver Installation for SuSE* Linux	31
RAID Driver Installation for Novell NetWare*	31
Installation in a New Novell Netware* System	31
Installation in or Update for an Existing Novell Netware* System	33
RAID Driver Installation for Solaris* 10	33
Installation in a New Solaris* System	33
Installation in an Existing Solaris* System	33
5 Intel® Embedded Server RAID BIOS Configuration Utility	35
Creating, Adding or Modifying a Virtual Drive Configuration	37
Setting the Write Cache and Read Ahead Policies	38
Working with a Global Hotspare Drive	39
Adding a Hot Spare Drive	39
Removing a Hot Spare Drive	39
Rebuilding a Drive	40
Auto Rebuild and Auto Resume	40
Checking Data Consistency	40
Viewing and Changing Device Properties	41
Forcing a Drive Online or Offline	41
Configuring a Bootable Virtual Drive	41
Deleting (Clearing) a Storage Configuration	42
6 Intel® RAID BIOS Console 2 Utility	43
Quick Configuration Steps	43
Detailed Configuration Steps using the Intel® RAID BIOS Console 2	44
Start the Intel® RAID BIOS Console 2 Utility	44
Screen and Option Descriptions	44
Configuration Wizard	50
Creating RAID 0, 1, 5, or 6 through Intel® RAID BIOS Console 2 (detailed)	52
RAID 10, RAID 50, and RAID 60 Creation Using the Intel® RAID BIOS Console 2	56
Setting Drive Parameters	63
Creating a Hot Spare	64
Viewing Event Details	69
7 Intel® RAID Web Console 2	71
Configuration Functions	71
Monitoring Functions	71
Maintenance Functions	71
Hardware and Software Requirements	72
Installing the Intel® RAID Web Console 2 on a Microsoft Windows* Operating System	72
Installing the Intel® RAID Web Console 2 on Linux or SUSE SLES	74
Startup, Overview, and Setup of Intel® RAID Web Console 2	75
Intel® RAID Web Console 2 Screens	76
Physical/Virtual View Panel	78
Properties/Operations/Graphical View Panel	79
Event Log Panel	81
Menu Bar / File Menu	81
Menu Bar / Operations Menu	81
File Menu / Group Operations Menu	82
File Menu / Log Menu	82

File Menu / Help Menu	82
Drive Configuration Tasks	82
Configuration Wizards	82
Creating a New Configuration	83
Guided Configuration	92
Creating a Spanned Disk Group	95
Creating Hot Spares	97
Setting Adjustable Task Rates	100
Adding a Drive to a Virtual Disk	102
Removing a Drive from a Virtual Disk	105
Changing the RAID Level of a Virtual Disk	109
Changing Virtual Disk Properties	110
Deleting a Virtual Disk	110
Managing Configurations	111
Saving a Configuration to Disk	111
Clearing a Configuration from a Controller	113
Adding a Configuration from a File	114
Monitoring System Events and Devices	115
Monitoring System Events	115
Monitoring Controllers	117
Monitoring Disk Drives and Other Physical Devices	118
Monitoring Virtual Disks	121
Monitoring Enclosures	122
Monitoring Battery Backup Units	123
Monitoring Rebuilds and Other Processes	124
Maintaining and Managing Storage Configurations	125
Initializing a Virtual Disk	125
Running a Consistency Check	126
Scanning for New Drives	127
Rebuilding a Drive	127
Removing a Drive	129
Flashing the Firmware	129
Appendix 8 Configuring RAID 0, 1, 5, or 6 using Custom Configuration	131
Appendix A Events and Messages	139

Figures

Figure 1. RAID 0 - Data Striping	8
Figure 2. RAID 1 - Disk Mirroring/Disk Duplexing.....	9
Figure 3. RAID 5 - Data Striping with Striped Parity	10
Figure 4. Example of Distributed Parity across Two Blocks in a Stripe (RAID 6)	11
Figure 5. RAID 10 - Combination of RAID 1 and RAID 0	12
Figure 6. RAID 50 - Combination of RAID 5 and RAID 0	13
Figure 7. RAID 60 Level Virtual Drive	15
Figure 8. Intel® Embedded Server RAID BIOS Configuration Utility Screen	36
Figure 9. Intel® RAID BIOS Console 2 Menu	45
Figure 10. Adapter Properties.....	46
Figure 11. Additional Adapter Properties.....	47
Figure 12. Intel® RAID BIOS Console 2 - Adapter Selection.....	49
Figure 13. Intel® RAID BIOS Console 2 - Configuration Types.....	50
Figure 14. Intel® RAID BIOS Console 2 - Configuration Methods.....	51
Figure 15. Intel® RAID BIOS Console 2 - Add Physical Drives to Array.....	52
Figure 16. Intel® RAID BIOS Console 2 - Set Array Properties.....	53
Figure 17. Intel® RAID BIOS Console 2 - Confirm Configuration	54
Figure 18. Intel® RAID BIOS Console 2 - Initialization Speed Setting.....	55
Figure 19. Intel® RAID BIOS Console 2 Utility – Multiple Disk Groups for RAID 10, 50, or 60	57
Figure 20. Intel® RAID BIOS Console 2 – Spanning Multiple Arrays	58
Figure 21. Intel® RAID BIOS Console 2 – Viewing Completed Settings	59
Figure 22. Intel® RAID BIOS Console 2 – Initialization Settings.....	60
Figure 23. Intel® RAID BIOS Console 2 – RAID 10 Final Screen.....	61
Figure 24. Intel® RAID BIOS Console 2 – RAID 10 Properties Screen	62
Figure 25. Intel® RAID BIOS Console 2 – RAID 50 Properties Screen	63
Figure 26. Intel® RAID BIOS Console 2 – Choosing a Hot Spare Drive.....	65
Figure 27. Intel® RAID BIOS Console 2 – Setting a Hot Spare Drive.....	66
Figure 28. Intel® RAID BIOS Console 2 – Viewing Hot Spare.....	67
Figure 29. Intel® RAID BIOS Console 2 – Main Screen showing Hot Spare Drive	68
Figure 30. Intel® RAID BIOS Console 2 – Event Information Screen.....	69
Figure 31. Intel® RAID BIOS Console 2 – Selecting Events to View.....	70
Figure 32. Intel® RAID BIOS Console 2 – Viewing an Event.....	70
Figure 33. Intel® RAID Web Console 2 – Customer Information Screen.....	73
Figure 34. Setup Type Screen.....	74
Figure 35. Intel® RAID Web Console 2 – Select Server Screen.....	76
Figure 36. Intel® RAID Web Console 2 – Login Screen	77
Figure 37. Intel® RAID Web Console 2 – Main Screen	78
Figure 38. Intel® RAID Web Console 2 – Operations Tab.....	79
Figure 39. Intel® RAID Web Console 2 – Graphical Tab	81
Figure 40. Intel® RAID Web Console 2 – Starting Configuration Wizard.....	83
Figure 41. Intel® RAID Web Console 2 – Selecting Type of Configuration	84
Figure 42. Intel® RAID Web Console 2 – Auto Configuration Screen	85
Figure 43. Intel® RAID Web Console 2 – First Manual Configuration Screen	86
Figure 44. Intel® RAID Web Console 2 – Selecting Drive for Hotspare.....	87
Figure 45. Intel® RAID Web Console 2 – New Disk Group with Hotspare	88
Figure 46. Intel® RAID Web Console 2 – Defining a Virtual Disk	89

Figure 47. Manual Configuration – New Configuration	90
Figure 48. Manual Configuration – Virtual Disk Summary	91
Figure 49. First Guided Configuration Screen	92
Figure 50. Guided Configuration – Parameters	93
Figure 51. Final Guided Configuration Screen	94
Figure 52. Defining the Spanned Array	95
Figure 53. New Spanned Array	96
Figure 54. Make Global Hotspare	97
Figure 55. Creating a Dedicated Hotspare	98
Figure 56. Select Hotspare Drive.....	99
Figure 57. Set Adjustable Task Rates	100
Figure 58. Starting Reconstruction Wizard	102
Figure 59. Reconstruction Wizard	103
Figure 60. Selecting Drives to Add	103
Figure 61. Drive Selected for Virtual Disk.....	104
Figure 62. Changing RAID Level.....	105
Figure 63. Select Drives to Remove from a Virtual Drive	106
Figure 64. Drive Selected for Removal from a Virtual Drive	107
Figure 65. Select RAID Level	107
Figure 66. Selecting RAID Level.....	109
Figure 67. Set Virtual Disk Properties.....	110
Figure 68. Save Configuration to File	111
Figure 69. Save Configuration Dialog Box.....	112
Figure 70. Clear Configuration.....	113
Figure 71. Add Saved Configuration.....	114
Figure 72. Event Information Window.....	115
Figure 73. Controller Information	117
Figure 74. Physical Drive Information	118
Figure 75. Locating a Physical Drive	119
Figure 76. Patrol Read Configuration	120
Figure 77. Virtual Disk Properties	121
Figure 78. Enclosure Information - Graphical View	122
Figure 79. Battery Backup Unit Information	123
Figure 80. Group Show Progress Window	124
Figure 81. Selecting Initialize.....	125
Figure 82. Group Consistency Check Window	126
Figure 83. Scan for Foreign Configuration.....	127
Figure 84. Preparing Drive for Removal	128
Figure 85. Flashing the Firmware	129
Figure 86. Starting Configuration Wizard.....	131
Figure 87. Selecting Manual Configuration.....	132
Figure 88. Selecting Drives for RAID 0	133
Figure 89. Drives Selected for RAID 0.....	134
Figure 90. Configure RAID 0 Parameters.....	135
Figure 91. Accepting RAID 0 Parameters.....	136
Figure 92. Completing RAID 0 Configuration	137
Figure 93. RAID 0 in Virtual Tab.....	138

1 Overview

This document describes the software and utilities, available RAID (Redundant Array of Independent (or Inexpensive) Disks) modes, and instructions for configuring and maintaining RAID arrays. The software described in this document is designed for use only with Intel® RAID controllers that use the Intel® RAID Software Stack 3 (software names begin with “ir3-” or “esrt2”).

Supported Hardware

This manual covers the software stack that is shared by multiple Intel® server products:

- Intel® Embedded Server RAID Technology II on the Intel® Enterprise South Bridge 2 (ESB2) in the chipset used in Intel® Server Boards based on the S5000 and S7000 chipsets, and on Intel® Server Boards that include the LSI* 1064e SAS (Serially attached SCSI) controller and some that include the LSI 1068 SAS controller, on Intel® Server Boards S3200SH and X38ML, and on Intel® RAID Controller SASMF8I.

Intel® Embedded Server RAID Technology II provides firmware-based RAID modes 0, 1, and 10 with an optional RAID 5 mode provided by the Intel® RAID Activation Key AXXRAKSW5 on the ESB2 and LSI* 1064e on some models of Intel® server boards. ESB2 supports SATA only.

LSI* SAS 1064e and 1068 provide SATA (Serial ATA) and SAS support. Not all 1068 SAS boards provide Intel® Embedded Server RAID Technology II modes.

Intel® Embedded Server RAID Technology II must be enabled in the server system BIOS before it is available. Intel® Embedded Server RAID Technology II is limited to a maximum of eight drives including hot spare(s).

- Intel® Integrated RAID Technology on the Intel® ROMB solutions. Server boards and systems include:

- Intel® Server Board S5000PSL (product code S5000PSLROMB)
- Intel® Server System SR1550AL (product code SR1550ALSAS)
- Intel® Server System SR2500 (product code SR2500LX)
- Intel® Server System SR4850HW4s
- Intel® Server System SR6850HW4s
- Intel® Server System S7000FC4UR with a SAS riser card.

Systems using the Intel® RAID Controller SROMBSAS18E provide XOR RAID modes 0, 1, 5, 10, and 50 when the optional Intel® RAID Activation Key AXXRAK18E and a DDR2 400 MHz ECC DIMM are installed.

Systems using the Intel® RAID Controller SROMBSASFC or SROMBSASMP2 require the optional Intel® RAID Activation Key AXXRAKSAS2 and a DDR2 667 MHz ECC DIMM to provide RAID modes 0, 1, 5, 6, 10, 50, and 60.

Note: This manual does not include the software RAID modes provided by the SAS riser card on the Intel® Server System S7000FC4UR. This manual does not include the RAID modes provided by the FALSASMP2 without Intel® RAID Activation Key AXXRAKSAS2.

- Intel® Intelligent RAID used on the discrete Intel® RAID Controller SRCAS18E, SRCAS144E, SRCATAWB, SRCASRB, SRCASJV, SRCASBB8I, SRCASLS4I, and SRCASPH16I. The first generation SAS controllers provide XOR RAID modes 0, 1, 5, 10, and 50 through the LSI* 1068 SAS controller and Intel® IOP333 chipset. The second generation SAS controller (LSI* 1078 ROC) provides XOR RAID modes 0, 1, 5, 6, 10, 50, and 60. For more details, refer to the Technical Product Specification (TPS) for the RAID controllers.

Notes: *This manual does not include information about native SATA or SAS-only modes of the RAID controllers.*

Caution: *Some levels of RAID are designed to increase the availability of data and some to provide data redundancy. However, installing a RAID controller is not a substitute for a reliable backup strategy. It is highly recommended you back-up data regularly via a tape drive or other backup strategy to guard against data loss. It is especially important to back-up all data before working on any system components and before installing or changing the RAID controller or configuration.*

Software

Intel® Embedded Server RAID Technology II and Intel® Integrated Server RAID controllers include a set of software tools to configure and manage RAID systems. These include:

- Intel® RAID controller software and utilities: The firmware installed on the RAID controller provides pre-operating system configuration.
 - For Intel® Embedded Server RAID Technology II, press <Ctrl> + <E> during the server boot to enter the BIOS configuration utility.
 - For Intel Integrated Server RAID, press <Ctrl> + <G> during the server boot to enter the RAID BIOS Console II.
- Intel® RAID Controller Drivers: Intel provides software drivers for the following operating systems.
 - Microsoft Windows 2000*, Microsoft Windows XP*, and Microsoft Windows Server 2003* (32-bit and 64-bit editions)
 - Red Hat* Enterprise Linux 3.0, 4.0, and 5.0 (X86 and X86-64)
 - SuSE* Linux Enterprise Server 9.0 with service packs 1 to 3, and SuSE* Linux Enterprise Server 10 (X86 and X86-64)

Note: *Only the combinations of controller, driver, and Intel® Server Board or System listed in the Tested Hardware and Operating System List (THOL) were tested. Check the supported operating system list for both your RAID controller and your server board to verify operating system support and compatibility.*

- Intel® RAID Web Console 2: A full-featured graphical user interface (GUI) utility is provided to monitor, manage, and update the RAID configuration.

RAID Terminology

RAID is a group of physical disks put together to provide increased I/O (Input/Output) performance (by allowing multiple, simultaneous disk access), fault tolerance, and reliability (by reconstructing failed drives from remaining data). The physical drive group is called an array, and the partitioned sets are called virtual disks. A virtual disk can consist of a part of one or more physical arrays, and one or more entire arrays.

Using two or more configured RAID arrays in a larger virtual disk is called spanning. It is represented by a double digit in the RAID mode/type (10, 50, 60).

Running more than one array on a given physical drive or set of drives is called a sliced configuration.

The only drive that the operating system works with is the virtual disk, which is also called a virtual drive. The virtual drive is used by the operating system as a single drive (lettered storage device in Microsoft Windows*).

The RAID controller is the mastermind that must configure the physical array and the virtual disks, and initialize them for use, check them for data consistency, allocate the data between the physical drives, and rebuild a failed array to maintain data redundancy. The features available per controller are highlighted later in this document and in the hardware guide for the RAID controller.

The common terms used when describing RAID functions and features can be grouped into two areas: fault tolerance (data protection and redundancy) and performance.

Fault Tolerance

Fault tolerance describes a state in which even with a drive failure, the data on the virtual drive is still complete and the system is available after the failure and during repair of the array. Most RAID modes are able to endure a physical disk failure without compromising data integrity or processing capability of the virtual drive.

RAID mode 0 is not fault tolerant. With RAID 0, if a drive fails, then the data is no longer complete and no longer available. Backplane fault tolerance can be achieved by a spanned array where the arrays are on different backplanes.

True fault tolerance includes the automatic ability to restore the RAID array to redundancy so that another drive failure will not destroy its usability.

Hot Spare

True fault tolerance requires the availability of a spare disk that the controller can add to the array and use to rebuild the array with the data from the failed drive. This spare disk is called a hot spare. It must be a part of the array before a disk failure occurs. A hot-spare drive is a physical drive that is maintained by the RAID controller but not actually used for data storage in the array unless another drive fails. Upon failure of one of the array's physical drives, the hot-spare drive is used to hold the recreated data and restore data redundancy.

Hot-spare drives can be global (available to any array on a controller) or dedicated (only usable by one array). There can be more than one hot spare per array and the drive of the closest capacity is used. If both dedicated and global hot-spare drives are available, then the dedicated drive is used first. If the hot swap rebuild fails, then that hot spare is also marked failed. Since RAID 0 is not redundant, there is no hot spare value.

If a hot-spare drive is not an option, then it is possible to perform a hot or cold swap of the failed drive to provide the new drive for rebuild after the drive failure. A swap is the manual substitution of a replacement drive in a disk subsystem. If a swap is performed while the system is running, it is a hot swap. A hot swap can only be performed if the backplane and enclosure support it. If the system does not support hot-swap drives, then the system must be powered down before the drive swap occurs. This is a cold swap.

In all cases (hot spare, hot swap, or cold swap), the replacement drive must be at least as large as the drive it replaces. In all three cases, the failed drive is removed from the array. If using a hot spare, then the failed drive can remain in the system. When a hot spare is available and an automatic rebuild starts, the failed drive may be automatically removed from the array before the utilities detect the failure. Only the event logs show what happened.

If the system is shut down during the rebuild, all rebuilds should automatically restart on reboot.

Note: If running a sliced configuration (RAID 0, RAID 5, and RAID 6 on the same set of physical drives), then the rebuild of the spare will not occur until the RAID 0 array is deleted.

Data Redundancy

Data redundancy is provided by mirroring or by disk striping with parity stripes.

- Disk mirroring is found only in RAID 1 and 10. With mirroring, the same data simultaneously writes to two disks. If one disk fails, the contents of the other disk can be used to run the system and reconstruct the failed array. This provides 100% data redundancy but uses the most drive capacity, since 50% of the total capacity is available. Until a failure occurs, both mirrored disks contain the same data at all times. Either drive can act as the operational drive.
- Parity is the ability to recreate data by using a mathematical calculation derived from multiple data sets. Parity is basically a checksum of all the data known as the “ABCsum”. When drive A fails, the controller uses the ABCsum to calculate what remains on drives B+C. The remainder must be recreated onto new drive A.

Parity can be dedicated (all parity stripes are placed on the same drive) or distributed (parity stripes are spread across multiple drives). Calculating and writing parity slows the write process but provides redundancy in a much smaller space than mirroring. Parity checking is also used to detect errors in the data during consistency checks and patrol reads.

RAID 5 uses distributed parity and RAID 6 uses dual distributed parity (two different sets of parity are calculated and written to different drives each time.) RAID modes 1 and 5 can survive a single disk failure, although performance may be degraded, especially during the rebuild. RAID modes 10 and 50 can survive multiple disk failures across the spans, but only one failure per array. RAID mode 6 can survive up to two disk failures. RAID mode 60 can sustain up to two failures per array.

Data protection is also provided by running calculations on the drives to make sure data is consistent and that drives are good. The controller uses consistency checks, background initialization, and patrol reads. You should include these in regular maintenance schedules.

- The consistency check operation verifies that data in the array matches the redundancy data (parity or checksum). This is not provided in RAID 0 in which there is no fault tolerance.
- Background initialization is a consistency check that is forced five minutes after the creation of a virtual disk. Background initialization also checks for media errors on physical drives and ensures that striped data segments are the same on all physical drives in an array.
- Patrol read checks for physical disk errors that could lead to drive failure. These checks usually include an attempt at corrective action. Patrol read can be enabled or disabled with automatic or manual activation. This process starts only when the RAID controller is idle for a defined period of time and no other background tasks are active, although a patrol read check can continue to run during heavy I/O processes.

Enclosure Management

Enclosure management is the intelligent monitoring of the disk subsystem by software or hardware usually within a disk enclosure. It increases the ability for the user to respond to a drive or power supply failure by monitoring those sub systems.

Performance

Performance improvements come from multiple areas including disk striping and disk spanning, accessing multiple disks simultaneously, and setting the percentage of processing capability to use for a task.

Disk Striping

Disk striping writes data across all of the physical disks in the array into fixed size partitions or stripes. In most cases, the stripe size is user-defined. Stripes do not provide redundancy but improve performance since striping allows multiple physical drives to be accessed at the same time. These stripes are interleaved in a repeated sequential manner and the controller knows where data is stored. The same stripe size should be kept across RAID arrays.

Terms used with strip sizing are listed below.

- Strip size: One disk section
- Stripe size: Total of one set of strips across all data disks, not including parity stripes
- Stripe width: The number of disks involved

Disk Spanning

Disk spanning allows more than one array to be combined into a single virtual drive. The spanned arrays must have the same stripe size and must be contiguous. Spanning alone does not provide redundancy but RAID modes 10, 50, and 60 all have redundancy provided in their pre-spanned arrays through RAID 1, 5, or 6.

Note: *Spanning two contiguous RAID 0 drives does not produce a new RAID level or add fault tolerance. It does increase the size of the virtual volume and improves performance by doubling the number of spindles. Spanning for RAID 10, RAID 50, and RAID 60 requires two to eight arrays of RAID 1, 5, or 6 with the same stripe size and that always uses the entire drive.*

CPU Usage

Resource allocation provides the user with the option to set the amount of compute cycles to devote to various tasks, including the rate of rebuilds, initialization, consistency checks, and patrol read. Setting resource to 100% gives total priority to the rebuild. Setting it at 0% means the rebuild will only occur if the system is not doing anything else. The default rebuild rate is 30%.

2 RAID Levels

The RAID controller supports RAID levels 0, 1, 5, 6, 10, 50, and 60. The supported RAID levels are summarized in the following section. In addition, it supports independent drives (configured as RAID 0). The following sections describe the RAID levels in detail.

Note: RAID 6 and 60 are only available on LSI 1078 ROC controllers.*

Summary of RAID Levels

- **RAID 0:** Uses striping to provide high data throughput, especially for large files in an environment that does not require fault tolerance.
- **RAID 1:** Uses mirroring so that data written to one disk drive simultaneously writes to another disk drive. This is good for small databases or other applications that require small capacity but complete data redundancy.
- **RAID 5:** Uses disk striping and parity data across all drives (distributed parity) to provide high data throughput, especially for small random access.
- **RAID 6:** Uses distributed parity, with two independent parity blocks per stripe, and disk striping. A RAID 6 virtual disk can survive the loss of two disks without losing data.
- **RAID 10:** A combination of RAID 0 and RAID 1, consists of striped data across mirrored spans. It provides high data throughput and complete data redundancy but uses a larger number of spans.
- **RAID 50:** A combination of RAID 0 and RAID 5, uses distributed parity and disk striping and works best with data that requires high reliability, high request rates, high data transfers, and medium-to-large capacity.

Note: It is not recommended to have a RAID 0, RAID 5, and RAID 6 virtual disk in the same physical array. If a drive in the physical array has to be rebuilt, the RAID 0 virtual disk will cause a failure during the rebuild.

- **RAID 60:** A combination of RAID 0 and RAID 6, uses distributed parity, with two independent parity blocks per stripe in each RAID set, and disk striping. A RAID 60 virtual disk can survive the loss of two disks in each of the RAID 6 sets without losing data. It works best with data that requires high reliability, high request rates, high data transfers, and medium-to-large capacity.

Selecting a RAID Level

To ensure the best performance, select the optimal RAID level when the system drive is created. The optimal RAID level for a disk array depends on a number of factors:

- The number of physical drives in the disk array
- The capacity of the physical drives in the array
- The need for data redundancy

- The disk performance requirements

RAID 0 - Data Striping

RAID 0 provides disk striping across all drives in the RAID array. RAID 0 does not provide any data redundancy, but does offer the best performance of any RAID level. RAID 0 breaks up data into smaller segments, and then stripes the data segments across each drive in the array. The size of each data segment is determined by the stripe size. RAID 0 offers high bandwidth.

Note: RAID level 0 is not fault tolerant. If a drive in a RAID 0 array fails, the whole virtual disk (all physical drives associated with the virtual disk) will fail.

By breaking up a large file into smaller segments, the RAID controller can use both SAS drive and SATA drives to read or write the file faster. RAID 0 involves no parity calculations to complicate the write operation. This makes RAID 0 ideal for applications that require high bandwidth but do not require fault tolerance.

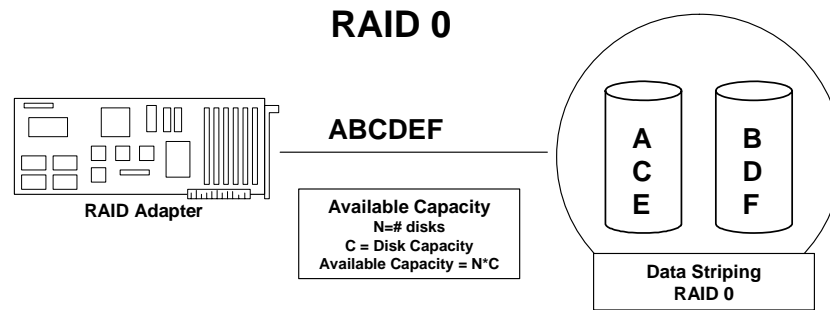


Figure 1. RAID 0 - Data Striping

Table 1. RAID 0 Overview

Uses	Provides high data throughput, especially for large files. Any environment that does not require fault tolerance.
Strong Points	Provides increased data throughput for large files. No capacity loss penalty for parity.
Weak Points	Does not provide fault tolerance or high bandwidth. If any drive fails, all data is lost.
Drives	1 to 32

RAID 1 - Disk Mirroring/Disk Duplexing

In RAID 1, the RAID controller duplicates all data from one drive to a second drive. RAID 1 provides complete data redundancy, but at the cost of doubling the required data storage capacity. Table 2 provides an overview of RAID 1.

Table 2. RAID 1 Overview

Uses	Use RAID 1 for small databases or any other environment that requires fault tolerance but small capacity.
Strong Points	Provides complete data redundancy. RAID 1 is ideal for any application that requires fault tolerance and minimal capacity.
Weak Points	Requires twice as many disk drives. Performance is impaired during drive rebuilds.
Drives	2

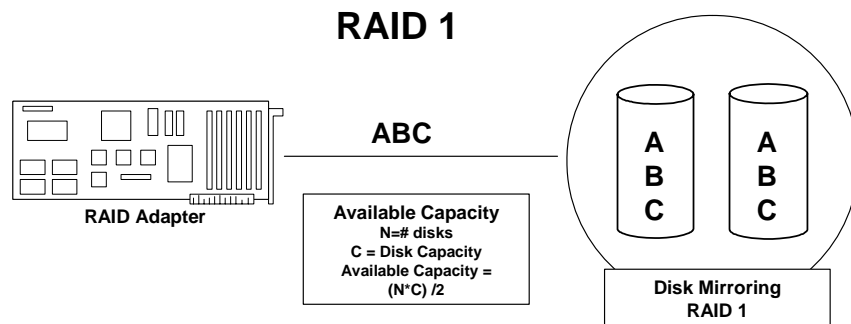


Figure 2. RAID 1 - Disk Mirroring/Disk Duplexing

RAID 5 - Data Striping with Striped Parity

RAID 5 includes disk striping at the block level and parity. Parity is the data's property of being odd or even, and parity checking detects errors in the data. In RAID 5, the parity information is written to all drives. RAID 5 is best suited for networks that perform a lot of small I/O transactions simultaneously.

RAID 5 addresses the bottleneck issue for random I/O operations. Because each drive contains both data and parity, numerous writes can take place concurrently.

Table 2.1 provides an overview of RAID 5.

Table 2.1 RAID 5 Overview

Uses	Provides high data throughput, especially for large files. Use RAID 5 for transaction processing applications because each drive can read and write independently. If a drive fails, the RAID controller uses the parity drive to recreate all missing information. Use also for office automation and online customer service that requires fault tolerance. Use for any application that has high read request rates but low write request rates.
Strong Points	Provides data redundancy, high read rates, and good performance in most environments. Provides redundancy with lowest loss of capacity.

Table 2.1 RAID 5 Overview

Weak Points	Not well suited to tasks requiring lot of writes. Suffers more impact if no cache is used (clustering). If a drive is being rebuilt, disk drive performance is reduced. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.
Drives	3 to 32

5.

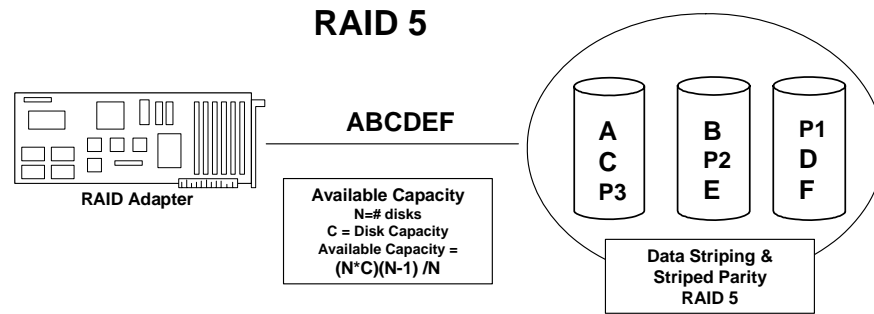


Figure 3. RAID 5 - Data Striping with Striped Parity

RAID 6 - Distributed Parity and Disk Striping

RAID 6 is similar to RAID 5 (disk striping and parity), but instead of one parity block per stripe, there are two. With two independent parity blocks, RAID 6 can survive the loss of two disks in a virtual disk without losing data.


Table 3. RAID 6

Uses	<p>Provides a high level of data protection through the use of a second parity block in each stripe. Use RAID 6 for data that requires a high level of protection from loss.</p> <p>In the case of a failure of one drive or two drives in a virtual disk, the RAID controller uses the parity blocks to recreate the missing information. If two drives in a RAID 6 virtual disk fail, two drive rebuilds are required, one for each drive. These rebuilds do not occur at the same time. The controller rebuilds one failed drive at a time.</p> <p>Use for office automation and online customer service that requires fault tolerance. Use for any application that has high read request rates but low write request rates.</p>
Strong Points	<p>Provides data redundancy, high read rates, and good performance in most environments. Can survive the loss of two drives or the loss of a drive while another drive is being rebuilt. Provides the highest level of protection against drive failures of all of the RAID levels. Read performance is similar to that of RAID 5.</p>

Table 3. RAID 6

Weak Points	Not well suited to tasks requiring lot of writes. A RAID 6 virtual disk has to generate two sets of parity data for each write operation, which results in a significant decrease in performance during writes. Disk drive performance is reduced during a drive rebuild. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes. RAID 6 costs more because of the extra capacity required by using two parity blocks per stripe.
Drives	3 to 32

The following figure shows a RAID 6 data layout. The second set of parity drives are denoted by *Q*. The *P* drives follow the RAID 5 parity scheme.

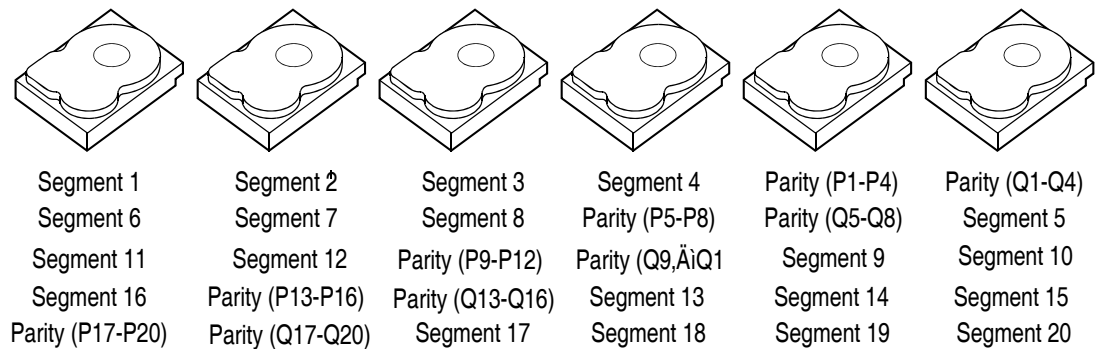

Parity is distributed across all drives in the array. When only three hard drives are available for RAID 6, the situation has to be that P equals Q equals original data, which means that the original data has three copies across the three hard drives.

Figure 4. Example of Distributed Parity across Two Blocks in a Stripe (RAID 6)

RAID 10 - Combination of RAID 1 and RAID 0

RAID 10 is a combination of RAID 0 and RAID 1. RAID 10 consists of stripes across mirrored drives. RAID 10 breaks up data into smaller blocks and then mirrors the blocks of data to each RAID 1 RAID set. Each RAID 1 RAID set then duplicates its data to its other drive. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set. RAID 10 supports up to eight spans.

Table 2.2 provides an overview of RAID 10.

Table 2.2 RAID 10 Overview

Uses	Appropriate when used with data storage that requires 100 percent redundancy of mirrored arrays and that needs the enhanced I/O performance of RAID 0 (striped arrays). RAID 10 works well for medium-sized databases or any environment that requires a higher degree of fault tolerance and moderate to medium capacity.
Strong Points	Provides both high data transfer rates and complete data redundancy.

Table 2.2 RAID 10 Overview

Weak Points	Requires twice as many drives as all other RAID levels except RAID 1.
Drives	4 - 32

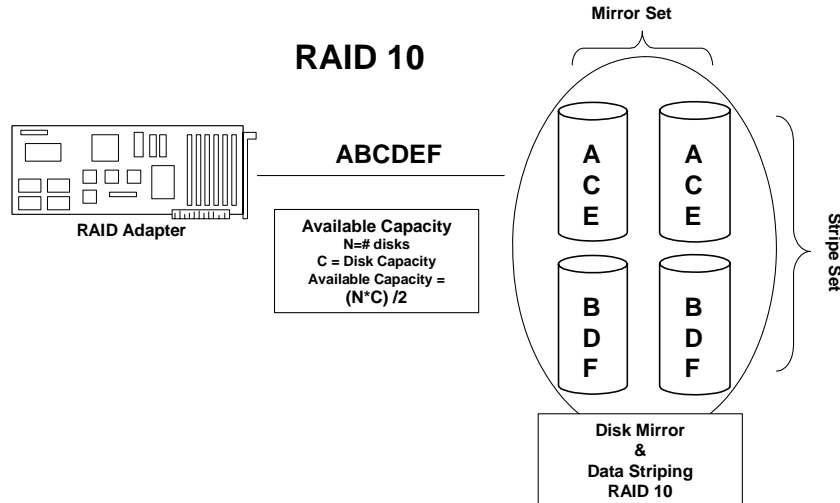


Figure 5. RAID 10 - Combination of RAID 1 and RAID 0

RAID 50 - Combination of RAID 5 and RAID 0

RAID 50 provides the features of both RAID 0 and RAID 5. RAID 50 includes both parity and disk striping across multiple arrays. RAID 50 is best implemented on two RAID 5 disk arrays with data striped across both disk groups.

RAID 50 breaks up data into smaller blocks and then stripes the blocks of data to each RAID 5 disk set. RAID 5 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks and then writes the blocks of data and parity to each drive in the array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.

RAID level 50 supports up to eight spans and tolerates up to eight drive failures, though less than total disk drive capacity is available. Though multiple drive failures can be tolerated, only one drive failure can be tolerated in each RAID 1 level array.

Table 2.3 provides an overview of RAID 50.

Table 2.3 RAID 50 Overview

Uses	Appropriate when used with data that requires high reliability, high request rates, high data transfer, and medium to large capacity.
Strong Points	Provides high data throughput, data redundancy, and very good performance.
Weak Points	Requires 2 to 8 times as many parity drives as RAID 5.

Table 2.3 RAID 50 Overview

Drives	6 to 32
---------------	---------

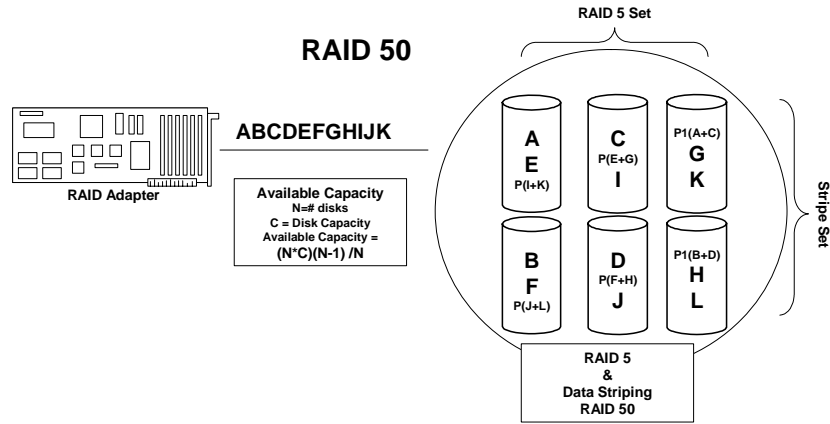


Figure 6. RAID 50 - Combination of RAID 5 and RAID 0

RAID 60 - Combination of RAID 0 and RAID 6

RAID 60 provides the features of both RAID 0 and RAID 6, and includes both parity and disk striping across multiple arrays. RAID 6 supports two independent parity blocks per stripe.

A RAID 60 virtual disk can survive the loss of two disks in each of the RAID 6 sets without losing data. RAID 60 is best implemented on two RAID 6 disk groups with data striped across both disk groups.

RAID 60 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 6 disk set. RAID 6 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks and then writes the blocks of data and parity to each drive in the array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.


RAID 60 supports up to 8 spans and tolerates up to 16 drive failures, though less than total disk drive capacity is available. Each RAID 6 level can tolerate two drive failures.

Table 4. RAID 60

Uses	<p>Provides a high level of data protection through the use of a second parity block in each stripe. Use RAID 60 for data that requires a very high level of protection from loss.</p> <p>In the case of a failure of one drive or two drives in a RAID set in a virtual disk, the RAID controller uses the parity blocks to recreate all the missing information. If two drives in a RAID 6 set in a RAID 60 virtual disk fail, two drive rebuilds are required, one for each drive. These rebuilds do not occur at the same time. The controller rebuilds one failed drive, and then the other failed drive.</p> <p>Use for office automation, online customer service that requires fault tolerance or for any application that has high read request rates but low write request rates.</p>
Strong Points	<p>Provides data redundancy, high read rates, and good performance in most environments. Each RAID 6 set can survive the loss of two drives or the loss of a drive while another drive is being rebuilt. Provides the highest level of protection against drive failures of all of the RAID levels. Read performance is similar to that of RAID 50, though random reads in RAID 60 might be slightly faster because data is spread across at least one more disk in each RAID 6 set.</p>
Weak Points	<p>Not well suited to tasks requiring a lot of writes. A RAID 60 virtual disk has to generate two sets of parity data for each write operation, which results in a significant decrease in performance during writes. Disk drive performance is reduced during a drive rebuild. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes. RAID 6 costs more because of the extra capacity required by using two parity blocks per stripe.</p>
Drives	<p>A minimum of 6.</p>

The following figure shows a RAID 6 data layout. The second set of parity drives are denoted by *Q*. The *P* drives follow the RAID 5 parity scheme.

Note: *When only three hard drives are available for RAID 6, the situation has to be that P equals Q equals original data, which means that the three hard drives have the same original data, which can afford two disk failures.*

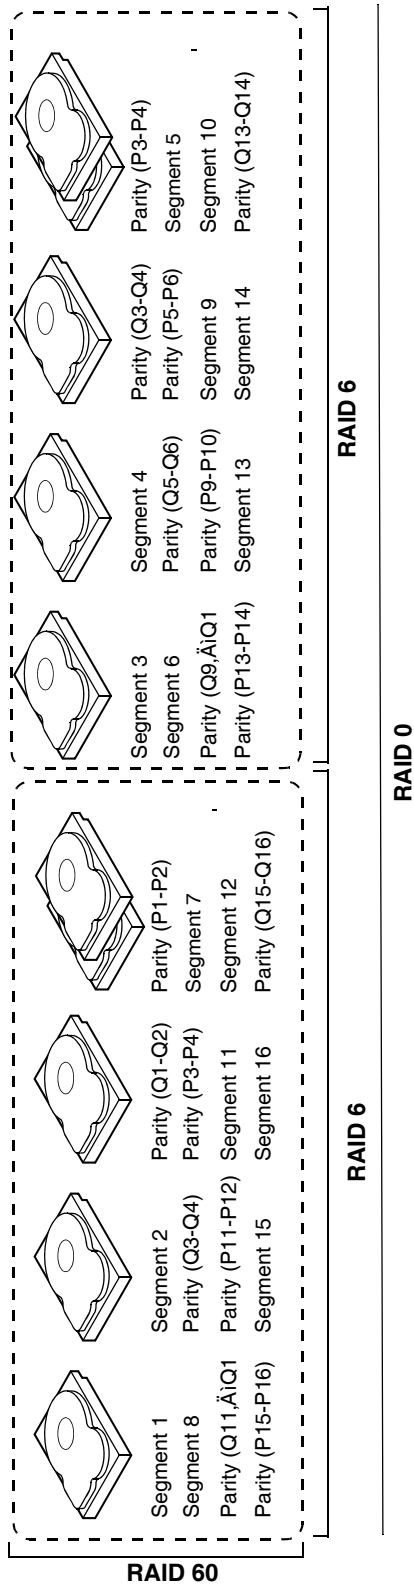

NOTE: Parity is distributed across all drives in the array.

Figure 7. RAID 60 Level Virtual Drive

RAID Configuration Strategies

The most important factors in RAID array configuration are:

- Virtual disk availability (fault tolerance)
- Virtual disk performance
- Virtual disk capacity

You cannot configure a virtual disk that optimizes all three factors, but it is easy to choose a virtual disk configuration that maximizes one factor at the expense of another factor. For example, RAID 1 (mirroring) provides excellent fault tolerance, but requires a redundant drive. The following subsections describe how to use the RAID levels to maximize virtual disk availability (fault tolerance), virtual disk performance, and virtual disk capacity.

Maximizing Fault Tolerance

Fault tolerance is achieved through the ability to perform automatic and transparent rebuilds using hot-spare drives and hot swaps. A hot-spare drive is an unused online available drive that the RAID controller instantly plugs into the system when an active drive fails. After the hot spare is automatically moved into the RAID array, the failed drive is automatically rebuilt on the spare drive. The RAID array continues to handle requests while the rebuild occurs.

A hot swap is the manual substitution of a replacement unit in a disk subsystem for a defective one, where the substitution can be performed while the subsystem is running hot-swap drives. Auto-Rebuild in the WebBIOS Configuration Utility allows a failed drive to be replaced and automatically rebuilt by “hot swapping” the drive in the same drive bay. The RAID array continues to handle requests while the rebuild occurs, providing a high degree of fault tolerance and zero downtime.

Table 2.4 RAID Levels and Fault Tolerance

RAID Level	Fault Tolerance
0	Does not provide fault tolerance. All data is lost if any drive fails. Disk striping writes data across multiple disk drives instead of just one disk drive. It involves partitioning each drive storage space into stripes that can vary in size. RAID 0 is ideal for applications that require high bandwidth but do not require fault tolerance.
1	Provides complete data redundancy. If one drive fails, the contents of the other drive can be used to run the system and reconstruct the failed drive. The primary advantage of disk mirroring is that it provides 100 percent data redundancy. Since the contents of the drive are completely written to a second drive, no data is lost if one of the drives fails. Both drives contain the same data at all times. RAID 1 is ideal for any application that requires fault tolerance and minimal capacity.
5	Combines distributed parity with disk striping. Parity provides redundancy for one drive failure without duplicating the contents of entire disk drives. If a drive fails, the RAID controller uses the parity data to reconstruct all missing information. In RAID 5, this method is applied to the entire drive or stripes across all disk drives in an array. Using distributed parity, RAID 5 offers fault tolerance with limited overhead.
6	Combines distributed parity with disk striping. RAID 6 can sustain two drive failures and still maintain data integrity. Parity provides redundancy for two drive failures without duplicating the contents of entire disk drives. If a drive fails, the RAID controller uses the parity data to reconstruct all missing information. In RAID 6, this method is applied to entire drives or stripes across all drives in an array. Using distributed parity, RAID 6 offers fault tolerance with limited overhead.
10	Provides complete data redundancy using striping across spanned RAID 1 arrays. RAID 10 works well for any environment that requires the 100 percent redundancy offered by mirrored arrays. RAID 10 can sustain a drive failure in each mirrored array and maintain drive integrity.
50	Provides data redundancy using distributed parity across spanned RAID 5 arrays. RAID 50 includes both parity and disk striping across multiple drives. If a drive fails, the RAID controller uses the parity data to recreate all missing information. RAID 50 can sustain one drive failure per RAID 5 array and still maintain data integrity.
60	Provides data redundancy using distributed parity across spanned RAID 6 arrays. RAID 60 can sustain two drive failures per RAID 6 array and still maintain data integrity. It provides the highest level of protection against drive failures of all of the RAID levels. RAID 60 includes both parity and disk striping across multiple drives. If a drive fails, the RAID controller uses the parity data to recreate all missing information.

Maximizing Performance

A RAID disk subsystem improves I/O performance. The RAID array appears to the host computer as a single storage unit or as multiple virtual units. I/O is faster because drives can be accessed simultaneously. Table 2.5 describes the performance for each RAID level.

Table 2.5 RAID Levels and Performance

RAID Level	Performance
0	RAID 0 (striping) offers the best performance of any RAID level. RAID 0 breaks up data into smaller blocks, then writes a block to each drive in the array. Disk striping writes data across multiple drives instead of just one drive. It involves partitioning each drive storage space into stripes that can vary in size from 8 KB to 128 KB. These stripes are interleaved in a repeated sequential manner. Disk striping enhances performance because multiple drives are accessed simultaneously.
1	With RAID 1 (mirroring), each drive in the system must be duplicated, which requires more time and resources than striping. Performance is impaired during drive rebuilds.
5	<p>RAID 5 provides high data throughput, especially for large files. Use this RAID level for any application that requires high read request rates, but low write request rates, such as transaction processing applications, because each drive can read and write independently. Since each drive contains both data and parity, numerous writes can take place concurrently. In addition, robust caching algorithms and hardware based exclusive-or assist make RAID 5 performance exceptional in many different environments.</p> <p>Parity generation can slow the write process, making write performance significantly lower for RAID 5 than for RAID 0 or RAID 1. Disk drive performance is reduced when a drive is being rebuilt. Clustering can also reduce drive performance. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.</p>
6	RAID 6 works best when used with data that requires high reliability, high request rates, and high data transfer. It provides high data throughput, data redundancy, and very good performance. However, RAID 6 is not well suited to tasks requiring a lot of writes. A RAID 6 virtual disk has to generate two sets of parity data for each write operation, which results in a significant decrease in performance during writes. Disk drive performance is reduced during a drive rebuild. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.
10	RAID 10 works best for data storage that need the enhanced I/O performance of RAID 0 (striped arrays), which provides high data transfer rates. Spanning increases the size of the virtual volume and improves performance by doubling the number of spindles. The system performance improves as the number of spans increases (the maximum number of spans is eight). As the storage space in the spans is filled, the system stripes data over fewer and fewer spans and RAID performance degrades to that of a RAID 1 or RAID 5 array.
50	RAID 50 works best when used with data that requires high reliability, high request rates, and high data transfer. It provides high data throughput, data redundancy, and very good performance. Spanning increases the size of the virtual volume and improves performance by doubling the number of spindles. The system performance improves as the number of spans increases (the maximum number of spans is eight). As the storage space in the spans is filled, the system stripes data over fewer and fewer spans and RAID performance degrades to that of a RAID 1 or RAID 5 array.
60	<p>RAID 60 works best when used with data that requires high reliability, high request rates, and high data transfer. It provides high data throughput, data redundancy, and very good performance. Spanning increases the size of the virtual volume and improves performance by doubling the number of spindles. The system performance improves as the number of spans increases (the maximum number of spans is eight). As the storage space in the spans is filled, the system stripes data over fewer and fewer spans and RAID performance degrades to that of a RAID 1 or RAID 6 array.</p> <p>RAID 60 is not well suited to tasks requiring a lot of writes. A RAID 60 virtual disk has to generate two sets of parity data for each write operation, which results in a significant decrease in performance during writes. Disk drive performance is reduced during a drive rebuild. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.</p>

Maximizing Storage Capacity

Storage capacity is an important factor when selecting a RAID level. There are several variables to consider. Striping alone (RAID 0) requires less storage space than mirrored data (RAID 1) or distributed parity (RAID 5 or RAID 6). RAID 5, which provides redundancy for one drive failure without duplicating the contents of entire disk drives, requires less space than RAID 1. Table 2.6 explains the effects of the RAID levels on storage capacity.

Table 2.6 RAID Levels and Capacity

RAID Level	Capacity
0	RAID 0 (disk striping) involves partitioning each drive storage space into stripes that can vary in size. The combined storage space is composed of stripes from each drive. RAID 0 provides maximum storage capacity for a given set of physical disks.
1	With RAID 1 (mirroring), data written to one disk drive is simultaneously written to another disk drive, which doubles the required data storage capacity. This is expensive because each drive in the system must be duplicated.
5	RAID 5 provides redundancy for one drive failure without duplicating the contents of entire disk drives. RAID 5 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, then writes the blocks of data and parity to each drive in the array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.
6	RAID 6 provides redundancy for two drive failures without duplicating the contents of entire disk drives. However, it requires extra capacity because it uses two parity blocks per stripe. This makes RAID 60 more expensive to implement.
10	RAID 10 requires twice as many drives as all other RAID levels except RAID 1. RAID 10 works well for medium-sized databases or any environment that requires a higher degree of fault tolerance and moderate to medium capacity. Disk spanning allows multiple disk drives to function like one big drive. Spanning overcomes lack of disk space and simplifies storage management by combining existing resources or adding relatively inexpensive resources.
50	RAID 50 requires two to four times as many parity drives as RAID 5. This RAID level works best when used with data that requires medium to large capacity.
60	RAID 60 provides redundancy for two drive failures in each RAID set without duplicating the contents of entire disk drives. However, it requires extra capacity because a RAID 60 virtual disk has to generate two sets of parity data for each write operation. This makes RAID 60 more expensive to implement.

RAID Availability

RAID Availability Concept

Data availability without downtime is essential for many types of data processing and storage systems. Businesses want to avoid the financial costs and customer frustration associated with failed servers. RAID helps you maintain data availability and avoid downtime for the servers that provide that data. RAID offers several features, such as spare drives and rebuilds, that you can use to fix any physical disk problems, while keeping the servers running and data available. The following subsections describe these features.

Spare Drives

You can use spare drives to replace failed or defective drives in an array. A replacement drive must be at least as large as the drive it replaces. Spare drives include hot swaps, hot spares, and cold swaps.

A hot swap is the manual substitution of a replacement unit in a disk subsystem for a defective one, where the substitution can be performed while the subsystem is running (performing its normal functions). In order for the functionality to work, the backplane and enclosure must support hot swap.

Hot-spare drives are physical drives that power up along with the RAID drives and operate in a standby state. If a physical disk used in a RAID virtual disk fails, a hot spare automatically takes its place and the data on the failed drive is rebuilt on the hot spare. Hot spares can be used for RAID levels 1, 5, 6, 10, 50, and 60.

Note: If a rebuild to a hot spare fails for any reason, the hot-spare drive will be marked as "failed." If the source drive fails, both the source drive and the hot-spare drive will be marked as "failed."

Before you replace a defective physical disk in a disk subsystem, a cold swap requires that you power down the system.

Rebuilding

If a physical disk fails in an array that is configured as a RAID 1, 5, 6, 10, 50, or 60 virtual disk, you can recover the lost data by rebuilding the drive. If you have configured hot spares, the RAID controller automatically tries to use them to rebuild failed arrays. A manual rebuild is necessary if there are no hot spares available with enough capacity to rebuild the failed array. Before rebuilding the failed array, you must install a drive with enough storage into the subsystem.

Configuration Planning

Factors to consider when planning a configuration are the number of physical disks the RAID controller can support, the purpose of the array, and the availability of spare drives.

Each type of data stored in the disk subsystem has a different frequency of read and write activity. If you know the data access requirements, you can more successfully determine a strategy for optimizing the disk subsystem capacity, availability, and performance.

Servers that support video-on-demand typically read the data often, but write data infrequently. Both the read and write operations tend to be long. Data stored on a general-purpose file server involves relatively short read and write operations with relatively small files.

Number of Physical Disks

Your configuration planning for the SAS RAID controller depends in part on the number of physical disks that you want to use in a RAID array. The number of drives in an array determines the RAID levels that can be supported. Only one RAID level can be assigned to each virtual disk.

Array Purpose

Important factors to consider when creating RAID arrays include availability, performance, and capacity. Define the major purpose of the disk array by answering questions related to these factors, such as the following, which are followed by suggested RAID levels for each situation:

- Will this disk array increase the system storage capacity for general-purpose file and print servers? Use RAID 5, 6, 10, 50, or 60.
- Does this disk array support any software system that must be available 24 hours per day? Use RAID 1, 5, 6, 10, 50, or 60.
- Will the information stored in this disk array contain large audio or video files that must be available on demand? Use RAID 0.
- Will this disk array contain data from an imaging system? Use RAID 0 or 10.

Fill out Table 2.7 to help you plan the array configuration. Rank the requirements for your array, such as storage space and data redundancy, in order of importance, and then review the suggested RAID levels.

Table 2.7 Factors to Consider for Array Configuration

Requirement	Rank	Suggested RAID Level(s)
Storage space		RAID 0, RAID 5
Data redundancy		RAID 5, RAID 6, RAID 10, RAID 50, RAID 60
Physical disk performance and throughput		RAID 0, RAID 10
Hot spares (extra physical disks required)		RAID 1, RAID 5, RAID 6, RAID 10, RAID 50, RAID 60

3 RAID Utilities

Intel® Embedded Server RAID Technology II BIOS Configuration Utility

With support for up to six SATA drives or eight SAS / SATA drives, depending on the server board or system, the embedded RAID BIOS has the following features:

- Support for interrupt 13 and Int19h.
- Support for SATA CD-ROM / DVD-ROM devices, including support for booting from a CD-ROM drive.
- POST (Power On Self Test) and run-time BIOS support for device insertion and removal.
- Support for a migration path from Intel® Embedded Server RAID Technology II to Intel Integrated Server RAID hardware.
- Automatic resume of rebuilding, check consistency, and initialization.
- Global hot spare support based on the virtual drive size.
- Support for RAID levels 0, 1, 5, and 10.
- Support for auto rebuild.
- Support for different capacity disks in the same array.
- Support for up to eight physical drives and eight virtual drives.
- Stripe size of 64 KB only.
- Support for disk coercion with options of None, 128 MB, or 1 GB.
- Ability to select a virtual drive as boot device. By default, virtual drive 0 is bootable.

Intel® RAID BIOS Console 2 Configuration Utility for Intelligent RAID

The Intel® RAID BIOS Console 2 configuration utility provides full-featured, GUI-based configuration and management of RAID arrays. The Intel® RAID BIOS Console 2 utility resides in the controller firmware and is independent of the operating system. The Intel® RAID BIOS Console 2 configuration utility lets you:

- Select an Intel® RAID controller
- Choose a configuration method for physical arrays, disk groups, and virtual drives
- Create drive arrays
- Define virtual drives
- Initialize virtual drives
- Access controllers, virtual drives, and physical arrays to display their properties

- Create hot-spare drives
- Rebuild failed drives
- Verify data redundancy in RAID 1, 5, 6, 10, 50, or 60 virtual drives

Intel® RAID Web Console 2 Configuration and Monitoring Utility

The Intel® RAID Web Console 2 is an operating system-based, object-oriented GUI utility that configures and monitors RAID systems locally or over a network. The Intel® RAID Web Console 2 runs on each of the supported Microsoft Windows* and Linux operating systems.

With the Intel® RAID Web Console 2, you can perform the same tasks as you can with the Intel® RAID BIOS Console 2 or with the Intel® Embedded Server RAID BIOS Configuration utility. In addition, the Intel® RAID Web Console 2 provides on-the-fly RAID migration, creating almost limitless adaptability and expansion of any virtual drive while the system remains operational.

The Intel® RAID Web Console 2 allows you to:

- Create and manage virtual drives
- Add a drive to a RAID virtual drive
- Convert from a RAID 0 configuration to a RAID 1 or 5 configuration by adding a physical drive
- Convert from a RAID 0 configuration to a RAID 6 configuration by adding two physical drives.
- Convert from a RAID 5 configuration to a RAID 6 configuration by adding a physical drive.
- Change a degraded redundant virtual drive to an optimal RAID 0 virtual drive
- Remove physical drives from a virtual drive
- Convert a RAID 1, 5, or 6 virtual drive to a RAID 0 drive

Drive Hierarchy within the RAID Firmware

The Intel® Integrated RAID firmware is based on three fundamental levels. Virtual drives are created from drive arrays that are created from physical drives.

- **Level 1** consists of the physical drives (hard drives and removable hard disks). The firmware identifies each drive by its physical ID and maps it to a virtual address. A virtual drive can be constructed of more than one physical drive.
- **Level 2** consists of the array(s) formed by firmware made of one or more disks and can be made into RAID 0, 1, 5, 6, 10, 50, or 60.
- **Level 3** consists of the virtual drives. These are the only drives that can be accessed by the operating system. These are the drives given drive letters (C, D, and so forth) under the Microsoft Windows* operating system. The firmware automatically transforms each newly installed drive array into a virtual drive. RAID 0, 1, 5, or 6 use a single array and RAID 10, 50, 60 use multiple arrays.

Intel® Intelligent RAID Controller Features

Enterprise Features

- Online capacity expansion (OCE). Add capacity to the virtual drive. The added capacity can be presented to the operating system as additional space for the operating system to partition it as an additional drive, or it may be added to an operating system drive, depending upon the capability of the operating system.
- Online RAID level migration allows for upgrading a RAID level. Options are to go from RAID 1 to RAID 0, RAID 5 to RAID 0. With OCE, options are to go from RAID 0 to RAID 1, RAID 0 to RAID 5, and from RAID 1 to RAID 5.
 - You cannot migrate or perform OCE on a spanned RAID array or disk group (RAID 10, RAID 50, or RAID 60).
 - You cannot migrate to a smaller capacity configuration.
 - You cannot perform OCE when there is more than one virtual drive on a virtual array or disk group.
- Each controller allows 128 virtual drives.
- When five or more disks are used, Smart Initialization automatically checks consistency of virtual drives for RAID 5. This allows performance optimization by enabling read-modify-write mode of operation with five or more disks in a RAID 5 array or disk group. Peer read mode of operation is used when the RAID 5 array or disk group contains three or four physical drives.
- If the system shuts down, the initialization or rebuild process automatically resumes on the next boot. Auto resume must be enabled prior to virtual drive creation.
- Stripe size is user definable on a per drive basis and can be 8, 16, 32, 64, or 128 KB in size. The default is 64 KB, which is optimal for many data access types.
- Hot spares can be set as global or dedicated. A global hot spare automatically comes online to replace the first drive to fail on any array or disk group on the controller. A dedicated hot spare is assigned to a specific array or disk group and only comes online to rebuild this specific failed array or disk group. A hot spare only comes online if it is the same size or larger than the failing drive (see drive coercion below), and if a drive has been marked as failed. If a drive is removed (and marked as failed) within a virtual drive, the hot spare automatically comes online. However, there must be disk activity (I/O to the drive) in order for a missing drive to be marked as failed.
- Drive coercion refers to the ability of the controller to recognize the size of the physical drives connected and then force the larger drives to use only the amount of space available on the smallest drive. Drive coercion allows an option to map out a reserved space to compensate for slightly smaller drive sizes that may be added later. The default is set to 1 GB. The coercion algorithm options are:
 - None: No coercion of size.
 - 128 MB: The software rounds the drive capacity down to the next 128 MB boundary and then up to the nearest 10 MB until the coerced capacity is larger than the actual drive size. It is then reduced by 10 MB.
 - 1 GB: The software rounds the drive capacity down to the nearest 1 GB boundary and then down by 1 MB. This corresponds to the terms most drive manufacturers use.

Fault Tolerant Features

- Configuration on Disk (COD) and NVRAM (Non-volatile Random Access Memory) storage of array and disk group configuration information. Array and disk group configuration information is stored both on the hard drive (COD) and in NVRAM. This helps protect against loss of the configuration due to adapter and/or drive failure.
- Failed drives are automatically detected and a transparent rebuild of the failed array automatically occurs using a hot-spare drive.
- Support for SAF-TE (SCSI Accessed Fault-Tolerant Enclosure) enabled enclosures allows enhanced drive failure and rebuild reporting via enclosure LEDs (Light-Emitting Diodes); support also includes hot swapping of hard drives.
- A battery backup for cache memory is available as an option. RAID controller firmware automatically checks for the presence of the battery module, and if found, allows the write back cache option. The adapter continuously tracks the battery voltage and reports if the battery is low. If low, the battery is first given a fast charge to replenish the charge and is then given a trickle charge to keep it at an optimal power level. Adapters that support the battery module include a “dirty cache” LED; when power is lost to the system and data remains in the cache memory that has not been written to disk, the LED signals that this operation needs to be completed. Upon reboot, the data in memory can then write to the hard disk drive.
- Although I/O performance may be lower, hard disk drive write-back cache is disabled by default because data can potentially be lost if a power outage occurs. Enabling the HDD write-back cache may improve performance, but when enabled, you should use a UPS (Uninterruptible Power Supply) device to prevent data loss during power outages.
- Battery life is about three years. You should monitor the battery health and replace when needed.
- SMART (Self-monitoring Analysis and Reporting Technology) technology is supported. This provides a higher level of predictive failure analysis of the hard disk drives by the RAID controller.

Cache Options and Settings

Cache options and settings can be unique for each virtual drive.

- Cache Write Policy
 - Write Through: I/O completion is signaled only after the data is written to hard disk.
 - Write Back: I/O completion is signaled when data is transferred to cache.
- Cache Policy
 - Direct I/O: When possible, no cache is involved for both reads and writes. The data transfers are directly from host system to the disk and from the disk to the host system.
 - Cached I/O: All reads first look at cache. If a cache hit occurs, the data is read from cache; if not, the data is read from disk and the read data is buffered into cache. All writes to drive are also written to cache.
- Read Policy
 - No Read Ahead: Provides no read ahead for the virtual drive.
 - Read Ahead: Reads and buffers additional consecutive stripes/lines into cache.

- Adaptive: The read-ahead automatically turns on and off depending upon whether the disk is accessed for sequential reads or random reads.

Background Tasks

- Rebuilding a failed drive is performed in the background. The rebuild rate is tunable from 0-100%.
 - The rebuild rate controls the amount of system resources allocated to the rebuild.

Caution: *It is not recommended to increase the rebuild rate to over 50%. A higher rebuild rate can result in operating system requests not being serviced in a timely fashion and causing an operating system error.*

- A consistency check scans the consistency of data on a fault-tolerant disk to determine if data has been corrupted.
- Background initialization is a background check of consistency. It has the same functionality as the check consistency option but is automatic and can be canceled only temporarily. If it is canceled, it starts again in a few minutes. Background initialization is only performed on redundant volumes.
- RAID level migration and online capacity expansion are completed in the background.
- Patrol Read is a user definable option available in the Intel® RAID Web Console 2 that performs drive reads in the background and maps out any bad areas of the drive.

Error Handling

- Most commands are retried four or more times. The firmware is programmed to provide the best effort to recognize an error and recover from it if possible.
- Failures are logged and stored in NVRAM. Operating system-based errors are viewable from the event viewer in the Web Console 2.
- RAID-related errors can be reported by the hard drive firmware, SAF-TE controller, or the RAID controller firmware. These errors may be reported to the operating system through RAID management software, through SMART monitoring, or through CIM management. Some errors may also be reported by the SAF-TE controller and logged in the system event log (SEL) for the Intel® server board. In addition, the operating system may report access errors. Depending on the RAID controller and drive enclosure, the error may be evident by the color of LEDs, the flashing of LEDs, or audible alarms.

Audible Alarm

The following list of beep tones is used on Intel® Intelligent RAID Controllers. These beeps usually indicate that a drive has failed.

- Degraded Array or Disk Group: Short tone, 1 second on, 1 second off
- Failed Array or Disk Group: Long tone, 3 seconds on, 1 second off
- Hot Spare Commissioned - Short tone, 1 second on, 3 seconds off

During a rebuild, the tone alarm stays on. After the rebuild completes, an alarm with a different tone will sound.

The disable alarm option in either the Intel® RAID BIOS Console 2 or Intel® Web Console 2 management utilities holds the alarm disabled after a power cycle. You must use the enable alarm option to re-enable the alarm.

The silence alarm option in either the Intel® RAID BIOS Console 2 or the Intel® Web Console 2 management utilities will silence the alarm until a power cycle or another event occurs.

4 Intel® RAID Drivers

The drivers that Intel provides for Intel® RAID Controllers are not compatible with SCSI or SATA-only RAID controllers. The RAID driver files are available on the *Resource CD* that accompanies the RAID controllers. The driver files are also available at <http://downloadcenter.intel.com>. If you need to transfer the driver files to another system, you can copy them to a floppy disk or a USB key.

Note: *Intel updates software frequently and updated drivers may provide additional features. Check for new software at the Intel Web site: <http://support.intel.com/support/motherboards/server/>. See the readme file that accompanies the download for updated information.*

RAID Driver Installation for Microsoft Windows*

RAID Driver Installation in a New Microsoft Windows* Operating System

This procedure installs the RAID device driver system during the Microsoft Windows 2003*, Microsoft Windows 2000*, or Microsoft Windows XP* operating system installation. The system must contain an Intel® RAID controller. Microsoft Windows 2003* automatically adds the driver to the registry and copies the driver to the appropriate directory.

1. Start the Microsoft Windows* installation by booting from the Microsoft Windows* CD-ROM disk. The system BIOS must support booting from a CD-ROM drive. You may need to change BIOS settings to allow CD-ROM booting. See your system documentation for instructions.
2. Press <F6> to install when the screen displays:
Press F6 if you need to install...

Note: *You must press <F6> for the system to recognize the new driver.*

3. Choose <S> to specify an additional device when the screen displays:
Setup could not determine the type...

Note: *If this screen is not displayed as the first user input, then the setup program did not register that the <F6> key was pressed. Reboot the system and return to step 2.*

4. When the system asks for the manufacturer-supplied hardware support disk, insert the Microsoft Windows* driver disk and press <Enter>.
5. Select the appropriate Microsoft Windows* driver from the menu by highlighting it. Press <Enter> to proceed. The driver is added to the registry and copied to the appropriate directory.
6. Continue with the Microsoft Windows* operating system installation procedure.

RAID Driver Installation in an Existing Microsoft Windows* Operating System

This procedure installs or upgrades the RAID device driver on an existing Microsoft Windows 2003*, Microsoft Windows 2000*, or Microsoft Windows XP* operating system. The system must contain an Intel® RAID controller.

1. Boot to the Microsoft Windows* operating system. The Found New Hardware Wizard is displayed. The program identifies the SAS controller and requests the driver disk.
2. Insert the Microsoft Windows* driver disk into the floppy drive.
3. For Microsoft Windows 2003* or Microsoft Windows XP*, choose Install Software Automatically. In Microsoft Windows 2000*, choose Search for a Suitable Driver.
4. Microsoft Windows 2000* only: Click the Specify location box and make sure the search location is the floppy drive.
5. Click Next.
6. A message that this driver is not digitally signed may display. This message informs you that a nonsigned driver is being installed. If you see this message, click Continue Anyway.
7. The system loads the driver from the Microsoft Windows* driver disk and copies the driver to the system disk. The Found New Hardware Wizard screen displays the message:
`The wizard has finished...`
8. Click Finish to complete the driver upgrade.

RAID Driver Installation for Red Hat* Enterprise Linux

This section describes the installation of the device driver on new Red Hat* Enterprise Linux 3, 4, or 5 systems. The following are general installation guidelines. Refer to the release notes that accompanied the driver for information on updating the driver on an existing Red Hat* Linux system.

1. Boot to the CD-ROM with Disk 1. Command: *linux dd*
2. Press <Enter> at the boot prompt on the Welcome screen.
3. Copy the Linux driver image from the *Resource CD* to a disk or USB key.
4. Insert the disk with driver image.
5. Select Yes.
6. Scroll down to select Intel® RAID adapter driver. The utility locates and loads the driver for your device.
7. Follow the Red Hat* Linux installation procedure to complete the installation.

RAID Driver Installation for SuSE* Linux

SuSE* Linux uses a program called YaST2 (Yet another System Tool) to configure the operating system during installation. For complex installations, you can select “Install Manually” at the first install screen and a different program, `linuxrc`, is used. This section assumes a straightforward installation using YaST2.

1. Insert CD-ROM disk 1 into the CD-ROM drive and the RAID controller driver diskette in the floppy drive.
1. Boot to the CD-ROM.
2. The operating system loads a minimal operating system from the CD-ROM onto a RAM disk. The operating system also loads any driver module found in the floppy drive.
3. At the Welcome to YaST2 screen, select your language and click Accept.
4. At the Installation Settings screen, set up the disk partitioning.
5. Continue with the SuSE* Linux installation procedure.

RAID Driver Installation for Novell NetWare*

Installation in a New Novell Netware* System

Follow the instructions in the Novell Netware* Installation Guide to install Novell Netware in the server. Perform the following steps to install Novell NetWare using your Intel® RAID controller as a primary adapter.

Note: *Drivers for Novell Netware* are not available on the CD-ROM. The latest drivers are available at <http://support.intel.com> or from your CDI account.*

1. Boot from Novell NetWare*.
2. Follow the instructions on the screen until you reach the Device Driver screen, which is used to modify drivers.
3. Select Modify and press <Enter>.
4. On the Storage Driver Support screen select Storage Adapters and press <Enter>.
5. Delete any existing MegaRAID adapter listings.
6. Press <Insert> to add unlisted drivers.
7. Press <Insert> again.
8. A path is displayed.
9. Press <F3>.
10. Insert the driver disk into the floppy drive, and press <Enter>.
11. The system will locate the .HAM driver.
12. Press the <Tab> key.
13. Select the Driver Summary screen, and press <Enter>.

14. Continue the Novell NetWare installation procedure.

Installation in or Update for an Existing Novell NetWare* System

Perform the following steps to add the Novell NetWare* driver to an existing Installation.

Note: *Drivers for Novell NetWare* are not available on the CD-ROM. The latest drivers are available at <http://support.intel.com> or from your CDI account.*

1. Type `nwconfig` at the root prompt and press <Enter>. The Configuration Options screen loads.
2. Select Drive Options and press <Enter>.
3. Select Configure Disk and Storage Device Options, and press <Enter>.
4. Select one of the following options displayed in the window:

- a. Discover and Load an Additional Driver

If you select this option, the system discovers the extra unit and prompts you to select a driver from the list. Press <Insert> to insert the driver. This completes the procedure.

- b. Select an Additional Driver

If you select this option the Select a Driver screen displays. Press <Insert>. Follow the instructions that display. Insert a disk into the floppy drive, and press <Enter>. The system will find and install the driver. This completes the procedure.

RAID Driver Installation for Solaris* 10

Installation in a New Solaris* System

This updated driver can be applied using the normal operating system installation options.

Note: *Drivers for Solaris* 10 are not available on the CD-ROM. The latest drivers are available at <http://support.intel.com> or from your CDI account.*

Boot the target system from the Solaris* 10 OS DVD (starting with DVD #1).

1. Select Solaris from the GRUB menu.
2. After the initial kernel loads, select option 5 Apply driver updated.
3. Insert driver floppy or CD into USB floppy or DVD-ROM drive, respectively, on the target system.

Installation in an Existing Solaris* System

1. Create a temporary directory “/tmp” under current working directory. Command: `mkdir tmp`.
2. Depending on your platform, untar `i386.tar` or `x86_64.tar`. Command: `tar -xf i386.tar` or `tar -xf x86_64.tar`.
3. Depending on your platform, run `install.sh` or `install32.sh`. Command: `sh install` or `sh install32`.

5 Intel® Embedded Server RAID BIOS Configuration Utility

If the SATA RAID or SAS RAID options are enabled in the server BIOS, an option to enter the Intel® Embedded Server RAID BIOS Configuration utility displays during the server boot process. To enter the utility, press the <Ctrl> + <E> when prompted.

The Intel® Embedded Server RAID BIOS Configuration utility allows a user to:

- Create, add, modify, and clear virtual drive configurations
- Initialize or rebuild the configured drives
- Set the boot drive
- Create a global hot spare drive
- View physical and virtual drive parameters
- View and set adapter properties, including consistency check and auto-resume

SATA and SAS systems use different versions of the Intel® Embedded Server RAID BIOS Configuration utility, but both versions use the same keystrokes and contain identical menus. The utility menus show limited help at the bottom of the screen and selections are chosen with the arrow keys and the space bar. If no virtual drive is available to configure, a warning is displayed. Only the number of potential physical drives differs for the SAS and SATA versions of the utility.

The following menu and sub-menu options are available:

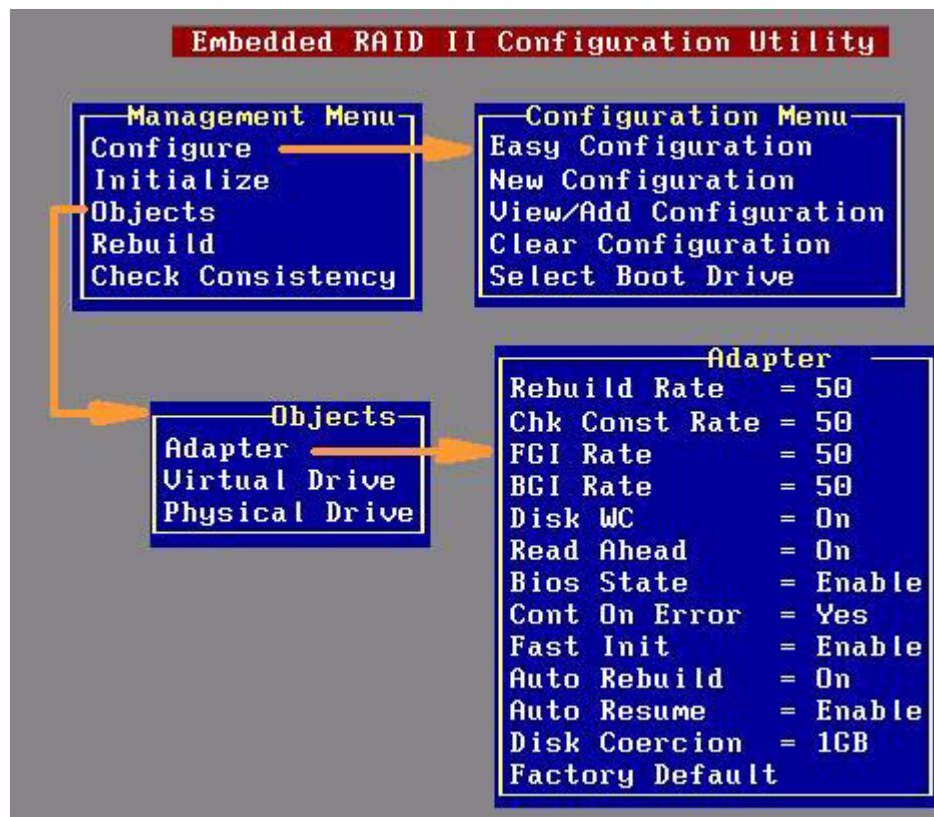


Figure 8. Intel® Embedded Server RAID BIOS Configuration Utility Screen

Creating, Adding or Modifying a Virtual Drive Configuration

Use the following steps to create, add, or modify a virtual drive configuration.

1. Boot the system.
2. Press <Ctrl> + <E> when prompted to start the Intel[®] Embedded Server RAID BIOS Configuration utility.
3. Select **Configure** from the Main Menu.
4. Select a configuration method:
 - **Easy Configuration** does not change existing configurations but allows new configurations.
 - **New Configuration** deletes any existing arrays and virtual drives and creates only new configurations.
 - **View/Add Configuration** lets you view or modify an existing configuration.

For each configuration method, a list of available physical drives is displayed. These drives are in the READY state. If you select a physical drive in the list, information about each drive is displayed.
5. Use the arrow keys to move to a drive and press the space bar to add it to the array.

Note: The utility limits each drive to the size of the smallest drive.

The status for each selected drive that is added to an array changes status from READY to ONLIN A[array#]-[drive#]. For example, ONLIN A00-01 means array 0, disk drive 1.

6. (Optional) Create a global hot spare drive by highlighting a drive that is marked READY and press the <F4> key. Then select **Yes** from the pop-up menu.
7. Repeat step 5 and step 6 to create a second array if needed. When you have selected drives for all desired arrays, press the <F10> key.
8. Select an array by highlighting it. Press the <Enter> key to set the properties.
9. The virtual drive configuration screen is displayed, This screen shows the following:
 - Virtual drive number
 - RAID level
 - Virtual drive size
 - Number of stripes in the physical array
 - Stripe size
 - State of the virtual drive

To set these options, highlight a property and press the <Enter> key. The available parameters for that property are displayed for the selection.
10. Select a RAID level: Select 0, 1, or 10 depending upon number of drives and the purpose.
11. Consider whether you need to override the default virtual drive size. By default, all available space in the array is assigned to the current virtual drive. For RAID 10 arrays, only one virtual drive can be defined for the entire array.

12. (Optional) Change the default Write Cache and Read Ahead policies. See Setting the Write Cache and Read Ahead Policies.
13. When you have finished defining the current virtual drive, select **Accept** and press the <Enter> key.
14. Repeat step 8 through step 13 for all virtual drives.
15. Save the configuration when prompted, and press any key to return to the Main Menu.
16. Select **Initialize** and use the space bar to highlight the virtual drive to initialize.

Caution: *All data on the virtual drive is erased during an initialization.*

17. Press the <F10> key. Select **Yes** at the prompt and press the <Enter> key to begin the initialization. A graph shows the progress of the initialization.
18. After the initialization is complete, press the <Esc> key to return to the previous menu. Pressing the <Esc> key closes the current menu. If a process is running when you press the <Esc> key, you are given the following options:
 - **Abort:** When Abort is selected, the task is stopped and will not resume. If an initialization has started, Abort does not restore data.
 - **Stop:** When Stop is selected, the current task stops. Stop is available only if auto resume is enabled on the adapter. See AutoResume / AutoRestore for information.
 - **Continue:** The task continues normally. Continue cancels the press of the <Esc> key. If AutoResume is enabled, the task resumes from the point at which it was stopped.

Setting the Write Cache and Read Ahead Policies

Read and write cache settings apply to all virtual drives in an array. They may show as on/off; enable/disable; or as initials of the desired state, such as WB for Write Back. They are in menus as Write Policy and Read Policy or as Write Cache (WC) and Read Ahead (RA). You can view these policies from the Adapter Properties or from the Virtual Drive's View/Update Parameters.

The following are the cache policies:

- If WC is on, the write cache of the physical drives, which makes the virtual drive turn on. In this mode, when the physical drive cache receives all the data, the I/O request is signaled as completed.

Caution: *If power fails before the cached data is written to the drive, the data is lost.*

- If WC is off, only if the data is written to the media of the drive, the I/O request is signaled as completed.
- RA = ON allows the read ahead mode of the physical drives, which makes the virtual drive turn on. In this mode, the physical drive will read additional data and store that data into its cache. This improves performance on sequential reads.

To change cache policies:

1. Select **Objects** | **Virtual Drive** | **Virtual Drive n** | **View/Update Parameters**.
2. Use the arrow key to select the option to change. Press the <Enter> key.
3. Use the arrow key to select **Off** or **On**.
4. If asked to confirm the change, use the arrow key to select **Yes**. Press the <Enter> key to change the cache setting.

Working with a Global Hotspare Drive

A global, but not dedicated, hot spare drive can be created to automatically replace a failed drive in a RAID 1 or RAID 10 array. For new arrays, you should create the global hot spare during the configuration process. See [“Creating, Adding or Modifying a Virtual Drive Configuration,”](#) on page 37.

Adding a Hot Spare Drive

To add a hot spare drive to an existing configuration, follow these steps:

1. Select **Objects** from the Main Menu.
2. Select **Physical Drive**. A list of physical drives is displayed.
3. Select an unused drive from the list, and select **Make Hot Spare**. The screen changes to indicate HOTSP.

Removing a Hot Spare Drive

To remove a hotspare drive:

1. Select **Objects** from the Main Menu.
2. Select **Physical Drive**. A list of physical drives is displayed.
3. Select the disk that displays **HOTSP**, press the <Enter> key.
4. Select **Force Offline** and press the <Enter> key. The status of the drive changes to **READY**. The drive can be used in another array.

Rebuilding a Drive

The Intel® Embedded Server RAID BIOS Configuration utility includes a manual rebuild option that rebuilds a failed array due to an individual failed drive in a RAID 1 or 10 array. RAID 0 drives are not redundant and cannot be rebuilt. You can also rebuild a good drive (not physically failed) using the existing configuration data.

To rebuild a drive:

1. Select **Rebuild** from the Main Menu. The failed drives show the status FAIL.
2. Press the arrow keys to highlight the physical drive that you want to rebuild. Press the space bar to select the drive.
3. Press the <F10> key and select **Y** to confirm. As the rebuild process begins, the drive indicator shows REBLD.
4. When the rebuild is complete, press any key to continue.

Auto Rebuild and Auto Resume

To ensure data protection, enable Auto Rebuild and Auto Resume so that drives are automatically re-created to maintain redundancy.

- In a pre-boot environment, auto rebuild starts only when you enter the BIOS utility.

Note: Hot plug support is not available in the pre-boot environment. For the system BIOS or the Intel® Embedded Server RAID BIOS Configuration utility to detect the physical drive, insert the drive when the system is off.

- When the operating system is running, the auto rebuild starts if the system has a hot spare drive or if you replace the failed drive with a new drive.

The Auto Rebuild and Auto Resume options are available in the Intel® Embedded Server RAID BIOS Configuration utility from the menu that is displayed after you select **Objects | Adapter**.

Checking Data Consistency

The Check Consistency feature can be used on RAID 1 or RAID 10 drives to verify the data consistency between the mirrored drives. It can be set to only report or to both report and automatically fix the data.

1. From the Main Menu, select **Check Consistency** and press the <Enter> key. A list of configured virtual drives is displayed.
2. Use the arrow keys to choose the desired drive. Press the space bar to select the virtual drive to check for consistency. (RAID 1 or 10 only)
3. Press the <F10> key.
4. At the prompt, select **Yes** and then press the <Enter> key.

If the Report and Fix/Report options are not shown, select **Main Menu | Objects | Adapter | ChkCons** and set **Report only** or **Fix\Report**.

Viewing and Changing Device Properties

You can view adapter, virtual drive, and physical drive properties. You can also change some adapter properties and the Write Cache and Read Ahead for Virtual Drives.

1. From the Main Menu select **Objects**.
2. Choose **Adapter**, **Virtual Drive**, or **Physical Drive**.
3. Select the device from the list and view the properties.
 - For virtual drives, choose **View | Update Parameters**.
 - For physical drives, choose **Drive Properties**.

The numeric values of the rates settings are the percentage of system resources. FGI and BGI are abbreviations for foreground and background initialization rates.

4. To change a value, highlight the property and press the <Enter> key.

Note: Some values cannot be changed.

5. Select or type a different value for the property and press the <Enter> key.
6. When you are finished, press the <Esc> key until you return to the Main Menu.

Forcing Drives Online or Offline

A drive can be forced offline so that a hot spare drive will replace it. Power failures may cause a drive to go offline and you must force it back online.

Forcing a Drive Online or Offline

You can force a drive offline so that a hot spare replaces it. Power failures may cause a drive to go offline and you must force it back online. To force a drive online or offline, follow these steps:

1. On the Main Menu, select **Objects** and then **Physical Drive**.
2. Highlight a physical drive that is a member of an array and press the <Enter> key.
3. From the menu, choose one of the following:
 - Force Offline to take the drive off line. If the drive was online, its status changes to FAIL.
 - Force Online to bring the drive on line. If the drive was offline, its status changes to ONLINE.

Configuring a Bootable Virtual Drive

Follow these steps to configure a bootable virtual drive:

1. From the Main Menu, select **Configure | Select Boot Drive**.
2. Select a virtual drive from the list to make it the designated boot drive.

Note: You should also check the system BIOS Setup utility for the boot order setting. To access the BIOS Setup utility, press the <F2> key when prompted during POST.

Deleting (Clearing) a Storage Configuration

Caution: Before you clear a storage configuration, back up all the data you want to keep.

To clear a storage configuration, follow these steps:

1. On the Main Menu, select **Configure | Clear Configuration**.
2. When the message appears, select **Yes** to confirm. All virtual drives are deleted from the configuration.

6 Intel® RAID BIOS Console 2 Utility

The Intel® RAID BIOS Console 2 utility provides a GUI utility to configure and manage RAID volumes. The utility configures disk groups and virtual drives. Because the utility resides in the RAID controller firmware, it is independent of the operating system.

The Intel® RAID BIOS Console 2 utility:

- Selects adapters
- Displays adapter properties
- Scans devices
- Displays the physical properties of devices
- Configures physical drives
- Defines virtual drives
- Displays virtual drive properties
- Initializes virtual drives
- Checks data for consistency

The Intel® RAID BIOS Console 2 utility provides a Configuration Wizard to guide you through the configuration of virtual drives and physical arrays.

Quick Configuration Steps

This section provides the steps to configure arrays and disk groups, and virtual drives using the Intel® RAID BIOS Console 2 utility. The following sections describe how to perform each action using the Intel® RAID BIOS Console 2 utility. The steps are as follows:

1. Power on the system.
2. Press <Ctrl>+<G> to start the Intel® RAID BIOS Console 2 utility.
3. Start the Configuration Wizard.
4. Choose a configuration method.
5. Using the available physical drives, create arrays and disk groups.
6. Using the space in the arrays and disk groups, define the virtual drive(s).
7. Initialize the new virtual drives.

Detailed Configuration Steps using the Intel® RAID BIOS Console 2

Start the Intel® RAID BIOS Console 2 Utility

1. When the system boots, hold down the <Ctrl> key and press the <G> key when the following is displayed:
Press <Ctrl>+<G> for BIOS Console 2
2. After you press <Ctrl>+<G>, the Adapter Selection screen displays. Select an adapter and click **Start** to begin the configuration.

Note: If there is a configuration mismatch between the disks and the NVRAM, the utility automatically displays the Select Configuration screen. Choose whether the configuration should be read from the RAID array or from NVRAM. For more information, see the subsection entitled “Configuration Mismatch Screen” on page 50.





Screen and Option Descriptions

This section describes the Intel® RAID BIOS Console 2 screens and options.

Toolbar Options

Table 5 describes the Intel® RAID BIOS Console 2 toolbar icons.

Table 5. Intel® RAID BIOS Console 2 Toolbar Icon Descriptions

Icon	Description
	Return to the main screen.
	Return to the page you accessed immediately before the current page.
	Exit the Intel® RAID BIOS Console 2 utility.
	Silence the alarm.

Main Screen

From the main screen, you can scan the devices connected to the controller, select an Intel® RAID adapter, and switch between the physical drive's view and virtual drive view. The main screen also provides access to the screens and tools:

- Adapter Properties
- Scan Devices
- Virtual Disks
- Physical Drives
- Configuration Wizard
- Adapter Selection
- Physical View
- Events
- Exit

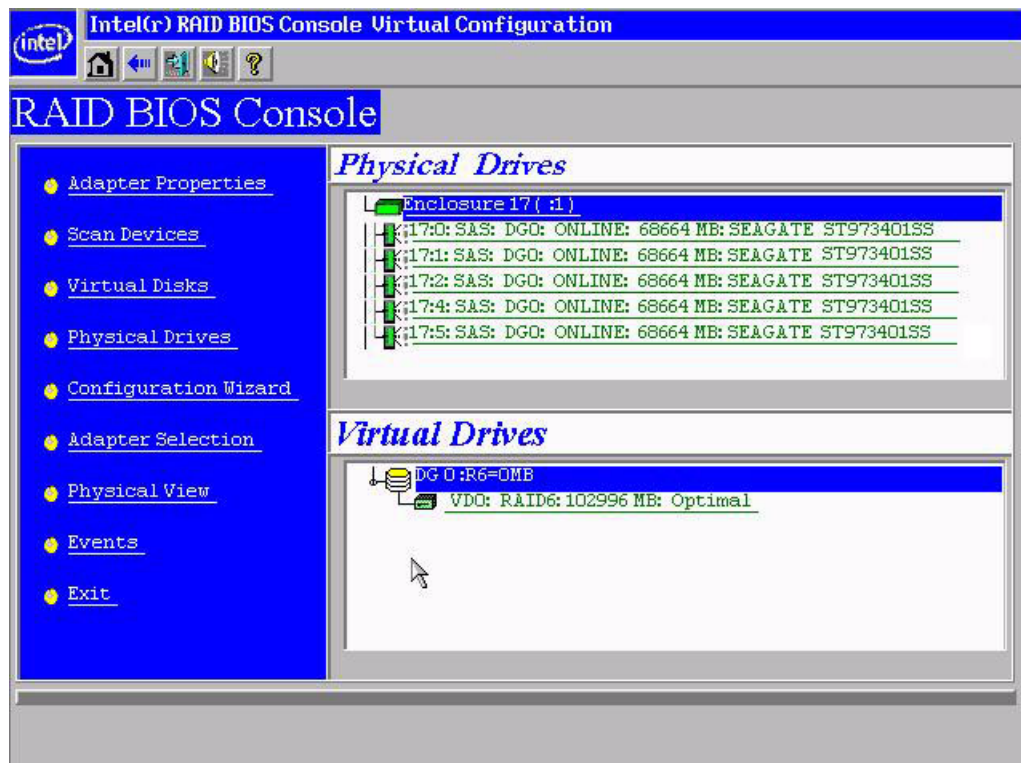


Figure 9. Intel® RAID BIOS Console 2 Menu

Adapter Properties Screen

When you select the Adapter Selection option on the main screen, the Intel® RAID BIOS Console 2 utility displays a list of the Intel RAID adapters in the system.

The Adapter Properties screen allows you to view and configure the software and hardware of the selected adapter.


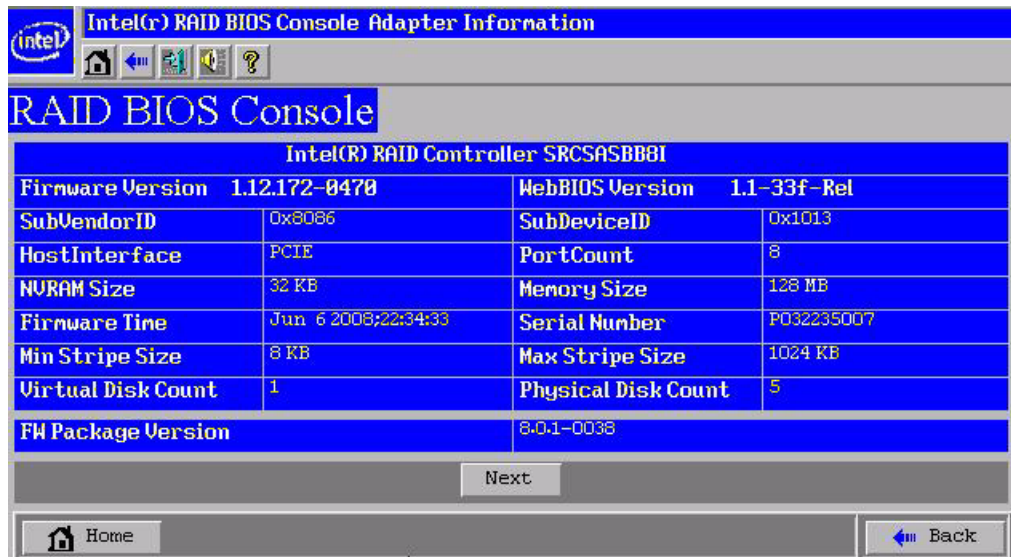


Figure 10. Adapter Properties

- **Firmware Version:** The firmware version.
- **Host Interface:** The host interface for the installed RAID controller.
- **NVRAM Size:** The NVRAM size on the RAID controller.
- **Firmware Time:** The firmware release date/time.
- **Min Stripe Size:** The minimum stripe size used to read and write data.
- **BIOS Console 2 Version:** The BIOS version for the Intel® RAID BIOS Console 2.
- **Sub Device ID:** The sub-device ID (identification) for the RAID controller.
- **Port Count:** Number of ports available.
- **Memory Size:** The memory size of the installed DIMM (Dual In-Line Memory Module).
- **Max Stripe Size:** The maximum stripe size.
- **Physical Disk Count:** The number of physical disks connected to the RAID controller.

Additional Adapter Properties

To access the screen that displays the additional adapter properties, click **Next** from the Adapter Properties screen. To change one of the properties displayed in the screen below, select the new entry and click **Submit**.

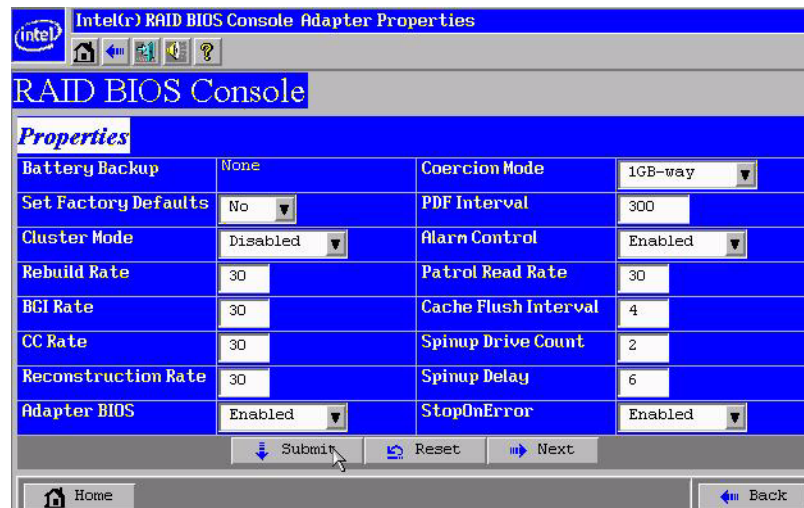

Intel(R) RAID BIOS Console Adapter Properties			
RAID BIOS Console			
Properties			
Battery Backup	None	Coercion Mode	1GB-way
Set Factory Defaults	No	PDF Interval	300
Cluster Mode	Disabled	Alarm Control	Enabled
Rebuild Rate	30	Patrol Read Rate	30
BGI Rate	30	Cache Flush Interval	4
CC Rate	30	Spinup Drive Count	2
Reconstruction Rate	30	Spinup Delay	6
Adapter BIOS	Enabled	StopOnError	Enabled

Submit Reset Next

Home Back

Figure 11. Additional Adapter Properties

- **Battery Backup:** Indicates if a battery backup unit is installed.
- **Set Factory Defaults:** Change this field to **Yes** to reset the RAID controller settings to the factory defaults.
- **Cluster Mode:** Enable this field if the RAID controller is used in a cluster.
- **Rebuild Rate:** Enter a number between 0 and 100 to control the rate at which a future rebuild will be performed on a disk group.
- **Patrol Read Rate:** A patrol read is a preventive procedure that monitors physical disks to locate and resolve potential problems that could lead to disk failure. Enter a number between 0 and 100 to control the rate at which patrol reads are performed.
- **BGI Rate (Background Initialization Rate):** Background initialization makes the virtual drive immediately available for use, even while initialization is occurring. Enter a number between 0 and 100 to control the rate at which virtual drives are initialized in the background.
- **CC Rate (Check Consistency Rate):** A consistency check scans the consistency of data on a fault-tolerant disk to determine if the data is corrupted. Enter a number between 0 and 100 to control the rate at which a consistency check is done.
- **Reconstruction Rate:** Enter a number between 0 and 100 to control the rate at which the reconstruction of a virtual drive occurs.
- **Adapter BIOS:** Determines whether the Option ROM is loaded.

- **Coercion Mode:**
 - None: No coercion of size.
 - 128 M: The software rounds the drive capacity down to the next 128 MB boundary and then up to the nearest 10 MB until the coerced capacity is larger than the actual drive size. It is then reduced by 10 MB.
 - 1G: The software rounds the drive capacity down to the nearest 1 GB boundary and then down by 1 MB. This corresponds to the terms most drive manufacturers use.
- **PDF Interval:** The PDF interval is the predictive disk failure polling interval. This is the time needed between disk polls to perform SMART polling.
- **Alarm Control:** Disable the alarm to turn off the onboard speaker alarm.
- **Interrupt Throttle Count** and **Interrupt Throttle Time:** Sets the interrupt throttle and count times. This is the number of times that interrupts are coalesced and the amount of time that firmware holds an interrupt before passing it to the host software. Set values lower for better performance—be aware that latency is impacted by these settings.
- **Cache Flush Interval:** This sets the cache flush interval. Valid settings are 2, 4, 6, 8, or 10 seconds.
- **Spinup Drive Count:** This setting controls the number of drives that spin up at one time.
- **Spinup Delay:** After the RAID controller completes its initialization process, the initial delay value defines the number of seconds before the first disk interrogation request is issued to the array or disk group. Do not change this value.

Scan Devices Option

When you select the Scan Devices option on the Main screen, the Intel® RAID BIOS Console 2 checks the physical and virtual drives for any changes of the drive status. The Intel® RAID BIOS Console 2 displays the results of the scan in the physical and virtual drive descriptions.

Virtual Drives Screen

You can access the virtual drives screen by clicking on a virtual drive in the virtual drive list on the main screen. The upper right section of the screen displays the virtual drives that currently exist. The Virtual Drives screen provides options to:

- **Initialize the virtual drives:** The Slow Initialize option initializes the selected virtual drive by writing zeroes to the entire volume. You should initialize each new virtual drive that you configure.

Warning: Initializing a virtual drive deletes all information on the physical drives that compose the virtual drive.

- **Check consistency (CC):** This option verifies the correctness of the redundancy data and is available for arrays and disk groups using RAID 1, 5, 6, 10, 50, or 60. If a difference in the data is found, the Intel® RAID BIOS Console 2 assumes that the data is accurate and automatically corrects the parity value.

- Display the virtual drive properties: Through the Properties option you can:
 - Display the virtual drive properties (such as RAID level, virtual drive size, and stripe size).
 - Display the read, write, Access, Disk Cache, BGI (Binary Gateway Interface), and I/O policies.
 - Change the read, write, Access, Disk Cache, BGI, and I/O policies.
 - Start initialization.
 - Start a consistency check.

After setting any property, click **Go** to perform the selected operation. Click **Change** to apply any policy changes.

Physical Drives Screen

This screen displays the physical drives for each channel or port. From this screen, you can rebuild the physical arrays or disk groups, or view the properties for the physical drive you select.

1. Click **Reset** to return to the configuration that existed before you made any changes.
2. Select Properties and click **Go** to view the properties. An unconfigured drive can be made into a hot spare from the Properties screen.

Configuration Wizard Option

This option enables you to clear a configuration, create a new configuration, or add a configuration. "Configuration Wizard," on page 50 provides detailed steps for using the Configuration Wizard.

Adapter Selection

This option allows you to choose an Intel[®] RAID controller installed in the system.



Figure 12. Intel[®] RAID BIOS Console 2 - Adapter Selection

Events Screen

This option displays the events generated by physical drives, physical devices, enclosure, the Intel[®] Smart Battery, and SAS controller. See [Appendix B: "Events and Messages"](#) for events and message descriptions.

Physical View/Virtual View Option

This option toggles between Physical View and Virtual View.

Exit

This option allows you to exit and reboot the system.

Configuration Mismatch Screen

A configuration mismatch occurs when the data in the NVRAM and the hard disk drives are different. It automatically displays after POST when a configuration mismatch occurs. The Configuration Mismatch screen allows you to:

- Select **Create New Configuration** to delete the previous configuration and create a new configuration.
- Select **View Disk Configuration** to restore the configuration from the hard disk.
- Select **View NVRAM Configuration** to restore the configuration from the NVRAM.

Configuration Wizard

This section provides detailed steps for using the Configuration Wizard to set up a RAID array.

1. Start the Configuration Wizard by selecting the **Configuration Wizard** icon on the Intel® RAID BIOS Console 2 main screen.

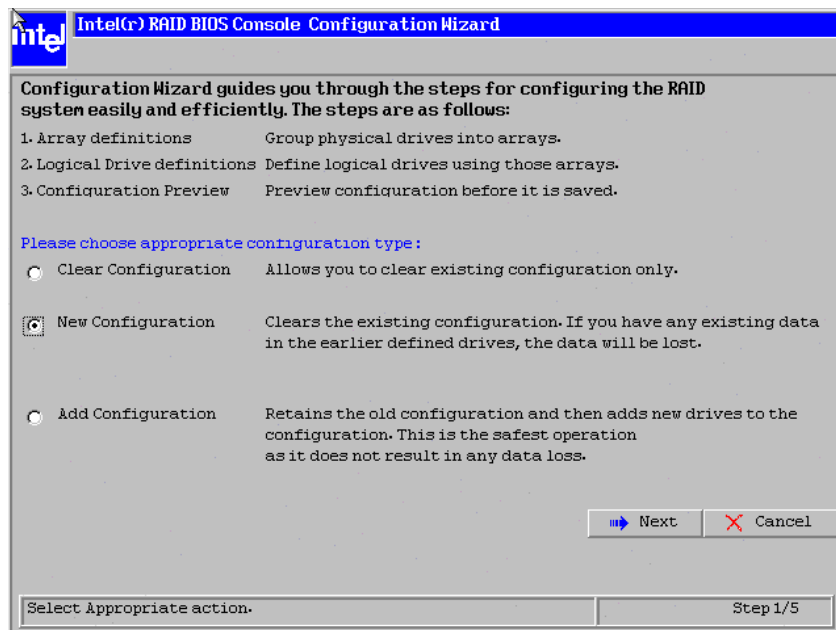


Figure 13. Intel® RAID BIOS Console 2 - Configuration Types

2. Select **New Configuration** and click Next.

3. Choose the configuration method and click Next.

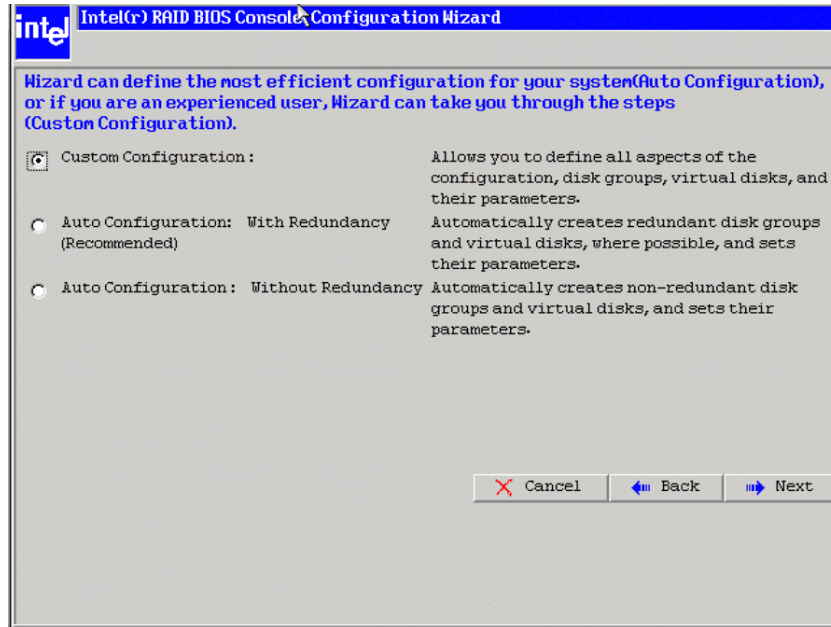


Figure 14. Intel® RAID BIOS Console 2 - Configuration Methods

The following configuration methods options are described:

- Auto Configuration with Redundancy
This option configures RAID 1 for systems with two drives or RAID 5 for systems with three or more drives, or RAID 6 for systems with three or more drives. All available physical drives are included in the virtual drive using all available capacity on the disks.
Note: You must designate hot-spare drives before starting auto configuration using all available capacity on the disks.
- Auto Configuration without Redundancy
Configures all available drives as a RAID 0 virtual drive.
- Custom Configuration
Allows you to configure the RAID mode.

Note: Auto Configuration cannot be used for RAID 10, 50, or 60 or with mixed SATA and SAS drives.

Creating RAID 0, 1, 5, or 6 through Intel® RAID BIOS Console 2 (detailed)

This section describes the process using the custom configuration options to set up RAID modes.

1. When the server boots, hold the <Ctrl> key and press the <G> key when the following is displayed:
Press <Ctrl>+<G> for BIOS Console
The Adapter Selection screen displays.
2. Select an adapter and click **Start** to begin the configuration.
3. Choose Custom Configuration and click **Next**.
4. At the Virtual Drive Definition (VD Definition) screen, hold down the <Ctrl> key and click each drive you want to include in the array or disk group. See "RAID Levels," on page 7 for the required minimum number of drives that must be added.

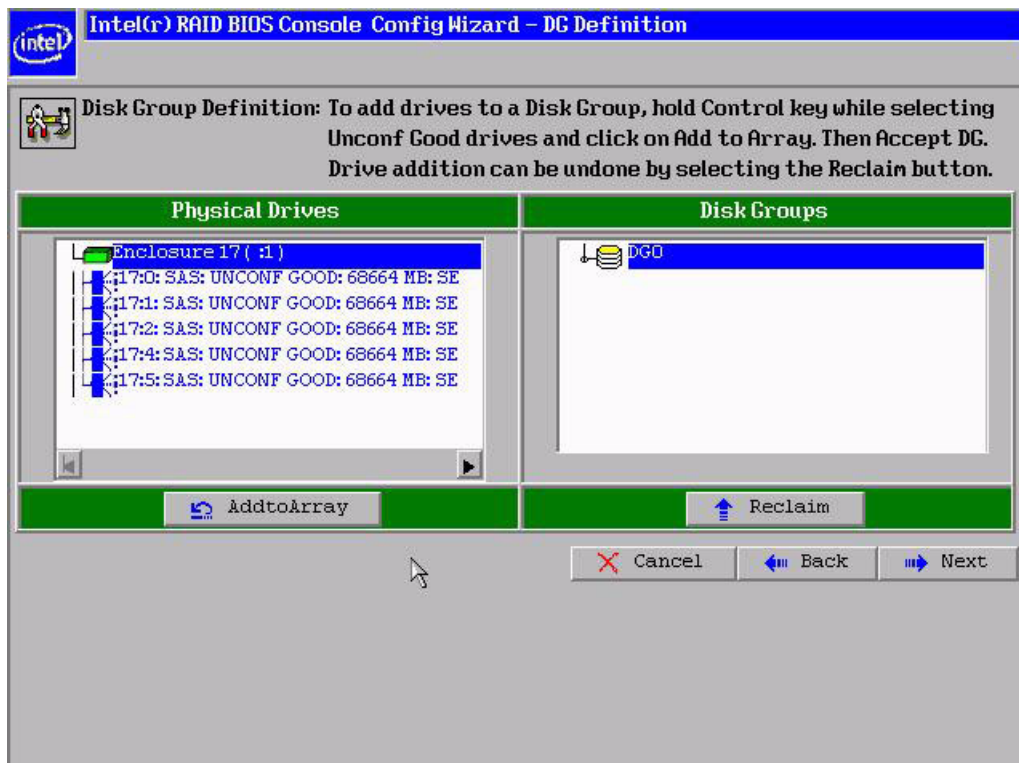


Figure 15. Intel® RAID BIOS Console 2 - Add Physical Drives to Array

5. Click **Accept DG**. If you make a mistake and need to remove drives, click **Reclaim**. Click **Next**.
6. In the next screen, click **Add to Span** and then click **Next**.

7. On the VD Definition window, select RAID 0, 1, 5, or 6 from the first dropdown box.
8. Enter the virtual drive size in the **Select Size** box. This example shows a specific size, but you can edit the size.
9. If needed, change the Stripe Size, the policies for Access, Read, Write, IO, and Disk Cache and decide whether to use background initialization. See "[Setting Drive Parameters,](#)" on page 63.

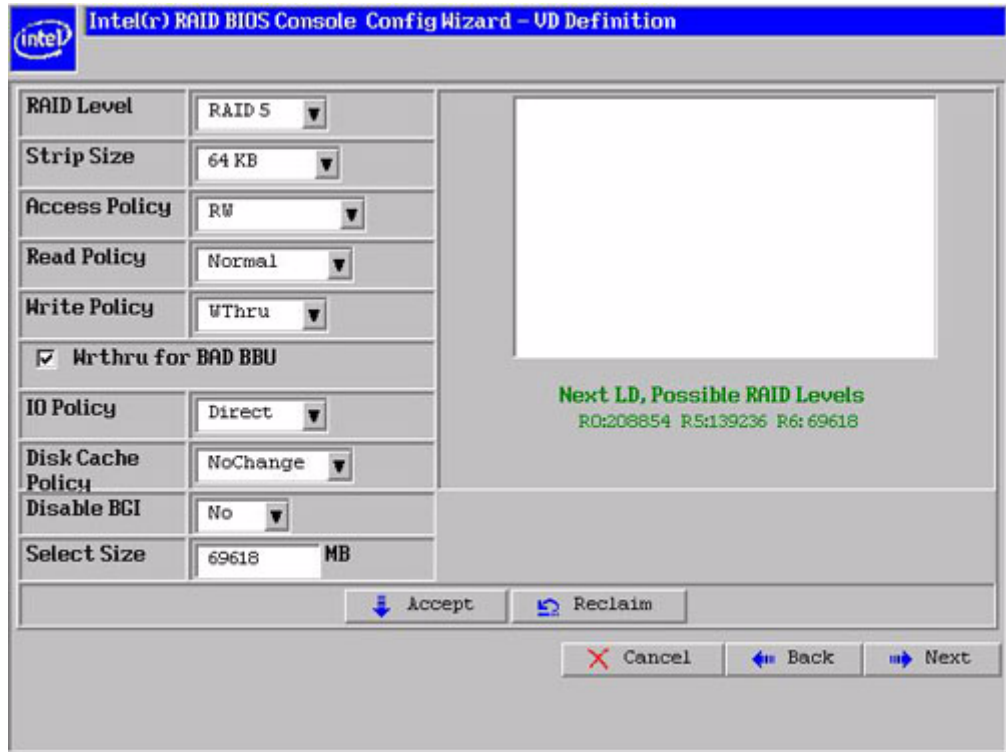


Figure 16. Intel® RAID BIOS Console 2 - Set Array Properties

10. Click **Accept** to accept the changes, or click **Reset** to delete the changes and return to the previous settings.

11. The Intel® RAID BIOS Console 2 configuration utility displays a preview of the configuration. Click **Accept** to save the configuration, or click **Back** to return to the previous screens and change the configuration.

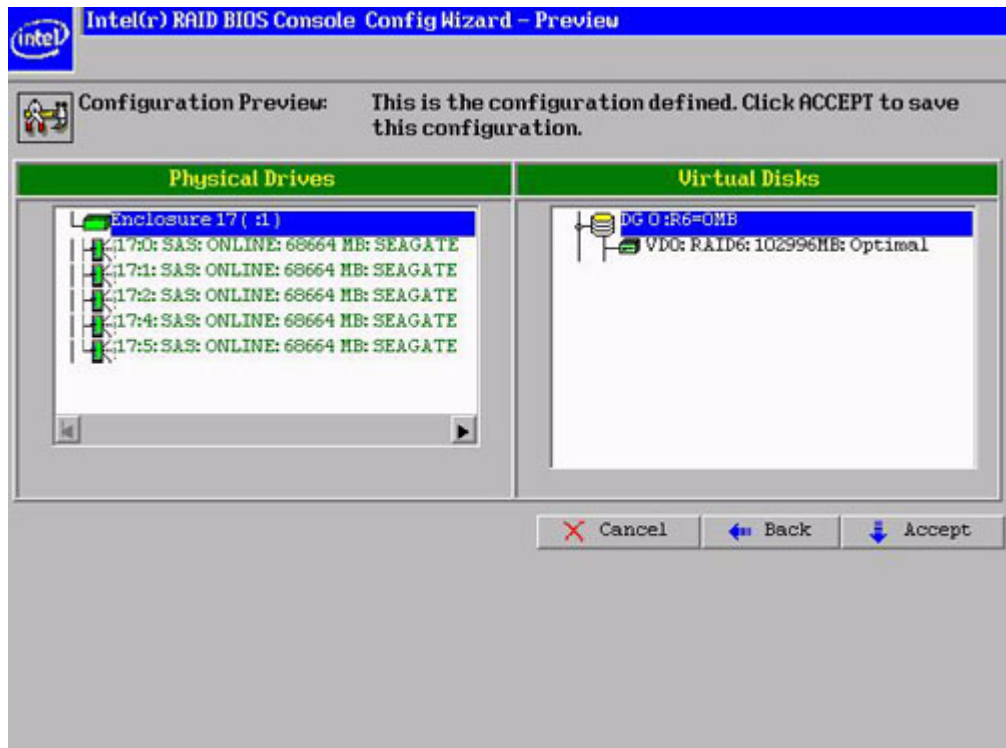


Figure 17. Intel® RAID BIOS Console 2 - Confirm Configuration

12. Click **Next** and then **Accept** to complete the selection.
13. Click **Accept** to accept the configuration. You are prompted to save the configuration and then to initialize the virtual drive.

14. Click **Yes** to initialize the new drive.
15. Click Initialize to begin the initialization process.
 - Fast initialization runs a quick preliminary initialization and then runs full initialization in the background after the operating system is booted.
 - Slow initialization may take several hours to complete.

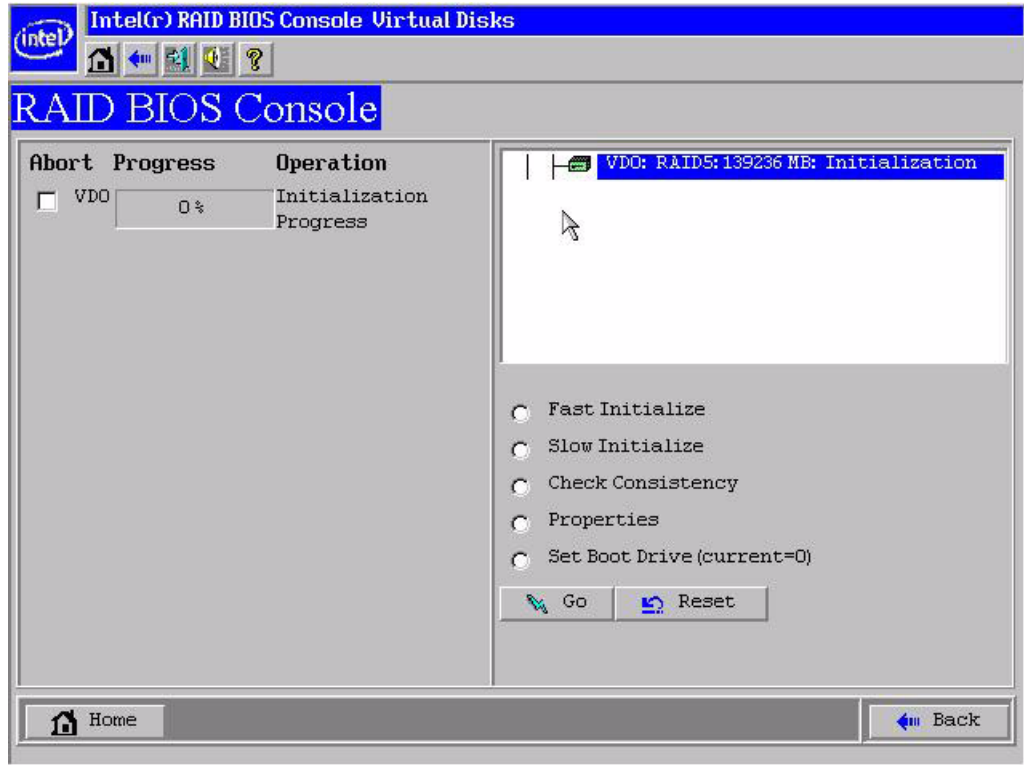


Figure 18. Intel® RAID BIOS Console 2 - Initialization Speed Setting

16. Click **Home** to return to the main configuration screen. Select an additional virtual drive to configure or exit the Intel® RAID BIOS Console 2 configuration utility and reboot the system.

RAID 10, RAID 50, and RAID 60 Creation Using the Intel[®] RAID BIOS Console 2

RAID 10, RAID 50, and RAID 60 require setting up multiple RAID arrays / disk groups.

1. When the server boots, hold the <Ctrl> key and press the <G> key when the following is displayed:
Press <Ctrl>+<G> for BIOS Console
2. After you press <Ctrl>+<G>, the Adapter Selection screen displays. Select an adapter and click **Start** to begin the configuration.
3. Select **Custom Configuration** and click **Next**.
4. At the Virtual Drive Definition (VD Definition) screen, hold down the <Ctrl> key and click each drive you want included in the first array.
 - For RAID 10, use two drives
 - For RAID 50, use at least three drives
 - For RAID 60, use at least three drives
5. Click **Accept DG**. The first group of drives appears as a disk group in the right pane. These drives are no longer available in the left pane.
6. From the drives that are available in the left pane, choose an additional group of drives and again click **Accept DG**. Each disk group must contain the identical quantity and size of drives.
7. Multiple drive groups are now displayed in the right pane. You can add up to eight arrays to the right pane for either RAID 10, RAID 50, or RAID 60.

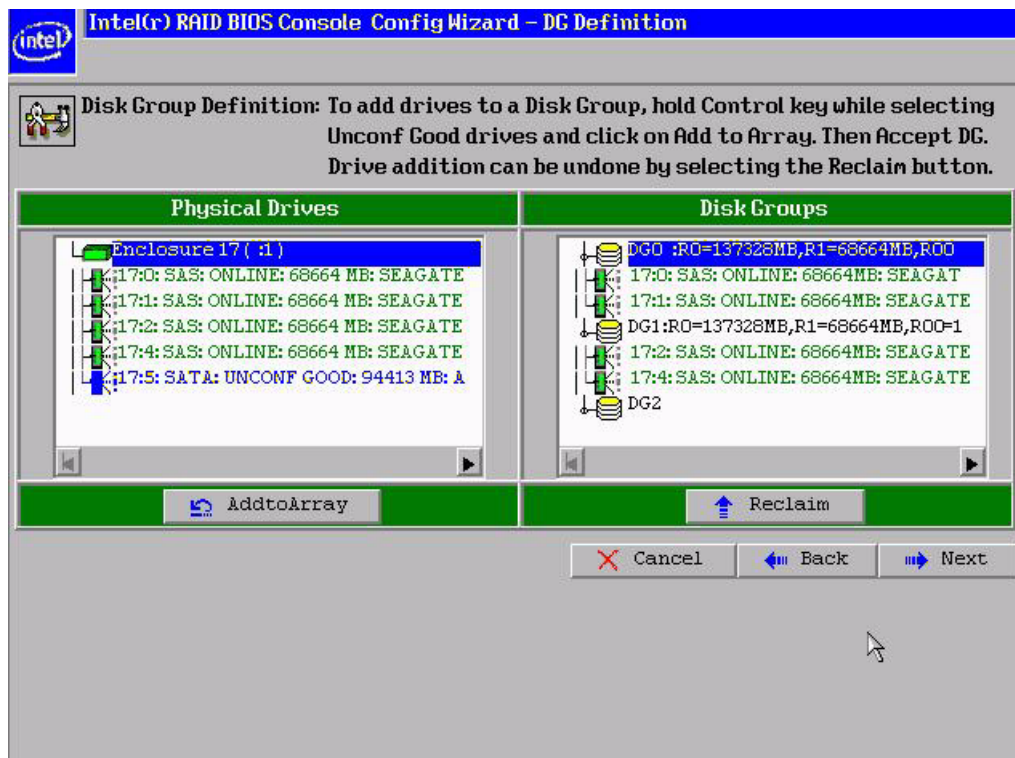


Figure 19. Intel® RAID BIOS Console 2 Utility – Multiple Disk Groups for RAID 10, 50, or 60

8. Select all arrays or disk groups that are to be spanned in the RAID 10 or 50 array by holding down the <Ctrl> key and selecting each array/disk group in the right pane. Click **Next**.
9. In the next screen, click **Add to SPAN** to move all arrays from the left pane to the right pane. use <Ctrl> to select all SPANs on the right pane.
10. Click **Next**.
11. At the Virtual Drive Definition (VD Definition) window, select RAID 10, RAID 50, or RAID 60 from the RAID Level drop-down. RAID 10 is illustrated below.
12. Select the appropriate Stripe Size, Access Policy, Read Policy, Write Policy, IO Policy, Disk Cache Policy, and Enable/Disable BGI for your application.
13. Set the drive size to a number in MB that is a size greater then the size of the RAID 1, RAID 5, or RAID 6 size listed in the disk group.

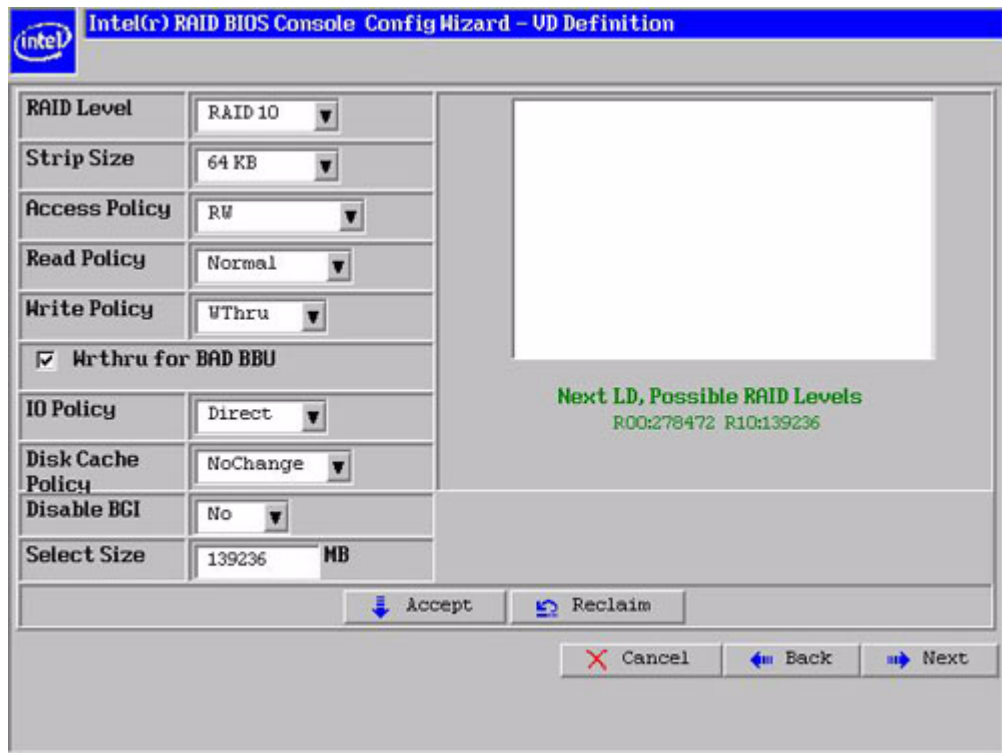


Figure 20. Intel® RAID BIOS Console 2 – Spanning Multiple Arrays

14. Click **Next** if the application does not automatically progress to the next screen.

The configuration preview screen displays the virtual drive as shown below. The configuration preview screen displays the virtual drive (RAID 1 for RAID 10, or RAID 50 or RAID 60).

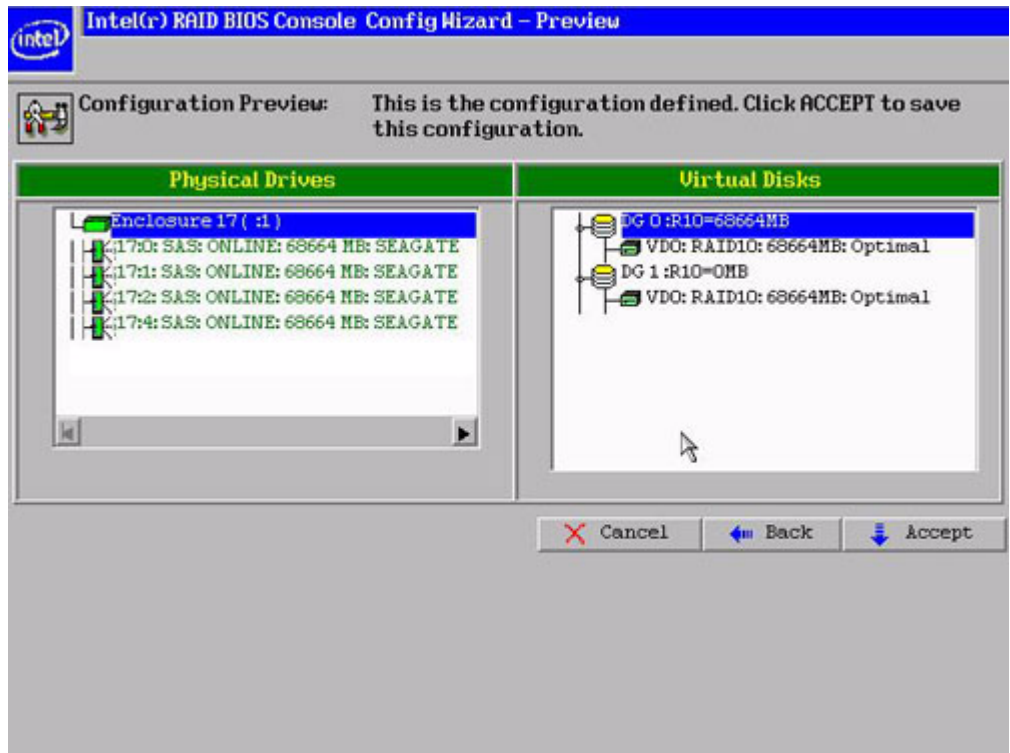


Figure 21. Intel® RAID BIOS Console 2 – Viewing Completed Settings

15. Click **Accept** to save the configuration.
16. When asked to save the configuration, click **Yes**. This will store the configuration in the RAID controller.
17. When asked to initialize the drive, click **Yes**.

18. Select **Fast Initialize**. Click **Go**. The drives will initialize based on the RAID settings.

Note: Slow Initialize initializes the entire drive and may take several hours to complete.

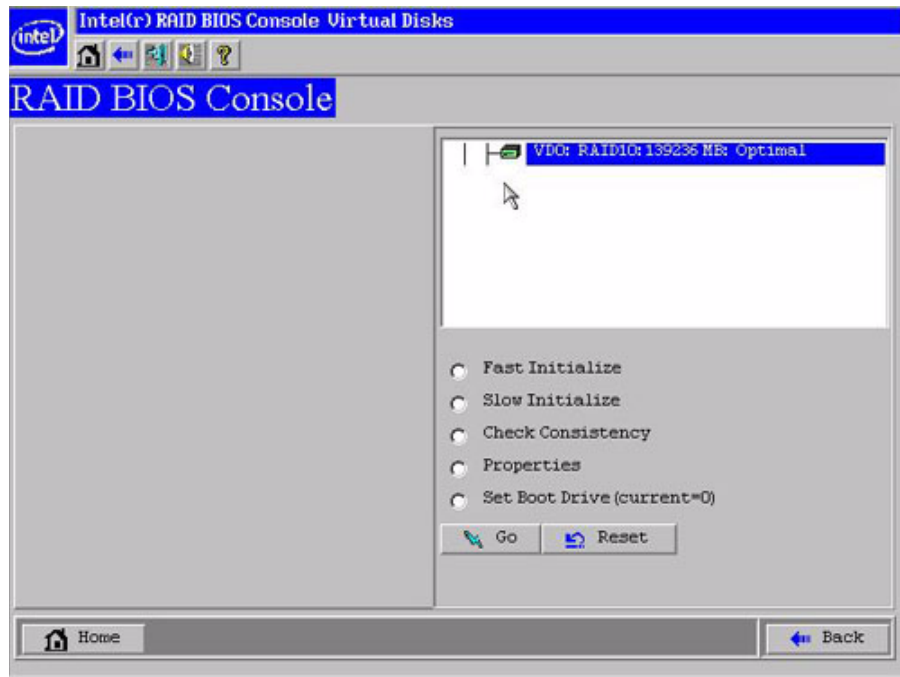


Figure 22. Intel® RAID BIOS Console 2 – Initialization Settings

19. Click **Home** at the Intel® RAID BIOS Console 2 screen to return to the main screen. The RAID 10, RAID 50, or RAID 60 virtual drives are displayed. The figure below shows the RAID 10 virtual drives.

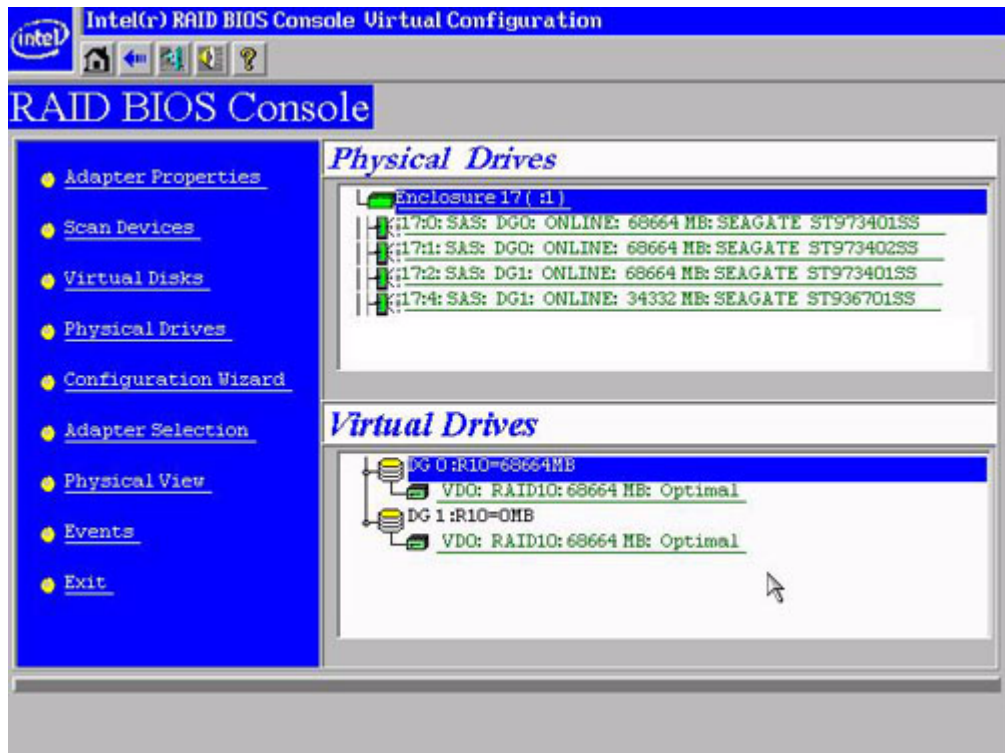


Figure 23. Intel® RAID BIOS Console 2 – RAID 10 Final Screen

- Under Virtual Drives, select **VD0: RAID1** for RAID 10, or select **VD0: RAID 6** for RAID 50, or select **VD0: RAID 6** for RAID 60 to display the drive properties. The properties display as RAID 10, RAID 50, or RAID 60.

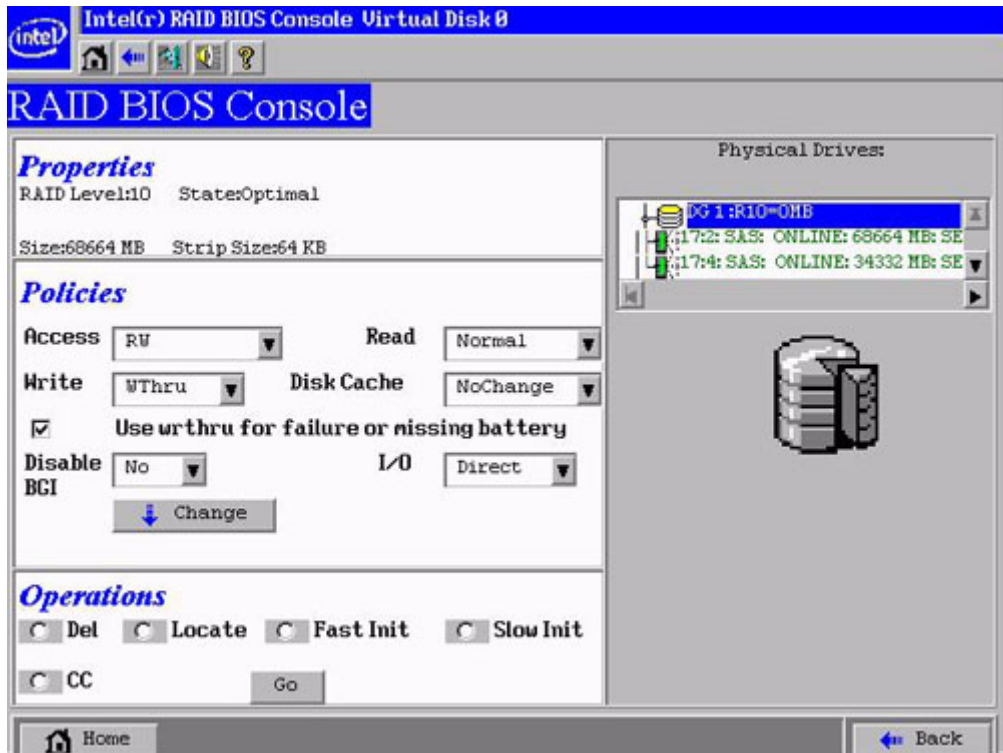


Figure 24. Intel® RAID BIOS Console 2 – RAID 10 Properties Screen

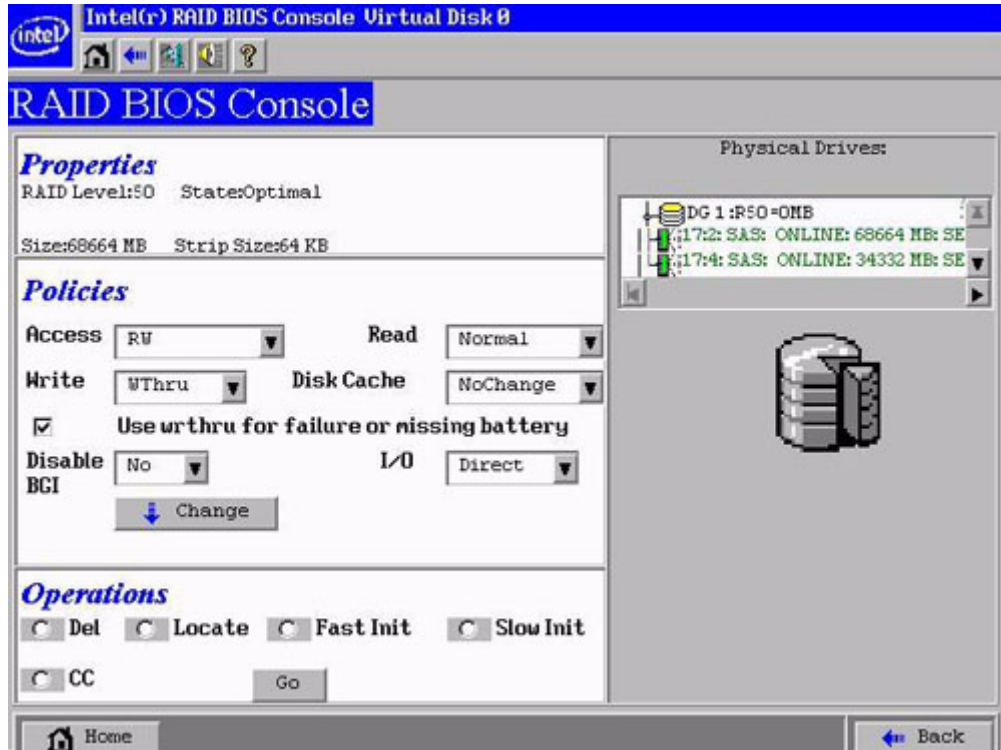


Figure 25. Intel® RAID BIOS Console 2 – RAID 50 Properties Screen

Setting Drive Parameters

- **RAID Level:**
 - RAID Level 0: Data striping
 - RAID Level 1: Data mirroring
 - RAID Level 5: Data striping with parity
 - RAID Level 6: Distributed Parity and Disk Striping
 - RAID level 10: Striped mirroring
 - RAID Level 50: Striped RAID 5
 - RAID Level 60: Distributed parity, with two independent parity blocks per stripe

Note: RAID levels 6 and 60 are available only on LSI* 1078 ROC controllers.

- **Stripe Size:** Specify the size of the segment written to each disk. Available stripe sizes are 4, 8, 16, 32, 64, or 128 Kbytes. LSI* 1078-based controllers add support for 256, 512, and 1024 Kbyte stripe sizes. The default is 64 Kbytes.
- **Access Policy:** Select the type of data access that is allowed for this virtual drive. The choices are Read/Write, Read Only, or Blocked.

- **Read Policy:** Enables the read-ahead feature for the virtual drive. Read-ahead is the default setting.
 - Normal: The controller does not use read-ahead for the current virtual drive.
 - Read-ahead: Additional consecutive stripes are read and buffered into cache. This option will improve performance for sequential reads.
 - Adaptive: The controller begins using read-ahead if the two most recent disk accesses occurred in sequential sectors.
- **Write Policy:** Determines when the transfer complete signal is sent to the host. Write-through caching is the default setting.
 - Write-back caching: The controller sends a data transfer completion signal to the host when the controller cache receives all of the data in a transaction. Write-back caching has a performance advantage over write-through caching, but it should only be enabled when the optional battery backup module is installed.
 - Write-through caching: The controller sends a data transfer completion signal to the host after the disk subsystem receives all the data in a transaction. Write-through caching has a data security advantage over write-back caching.

Caution: Do not use write-back caching for any virtual drive in a Novell NetWare* volume.*

- **IO Policy:** Applies to reads on a specific virtual drive. It does not affect the read-ahead cache.
 - Cached IO: All reads are buffered in cache memory.
 - Direct IO: Reads are not buffered in cache memory. Data is transferred to cache and to the host concurrently. If the same data block is read again, it comes from cache memory.
- **Disk Cache Policy:** The cache policy applies to the I/O on a specific virtual drive. It does not affect the read-ahead cache.
 - Cached I/O: Buffers all reads in cache memory.
 - Direct I/O: Does not buffer reads in cache memory. When possible, Direct I/O does not override the cache policy settings. Direct I/O transfers data to cache and the host concurrently. If the same data block is read again, the host reads it from cache memory. The choices are Unchanged, Enabled, or Disabled.
- **Disable BGI:** Enable or disable background initialization. Set this to “Yes” to disable background initialization.
- **Select Size:** Set the size of the virtual drive in megabytes. The right pane of the virtual drive configuration window lists the maximum capacity that can be selected, depending on the RAID level chosen.

Creating a Hot Spare

1. In the main screen, select the drive that should be used as the hot spare.

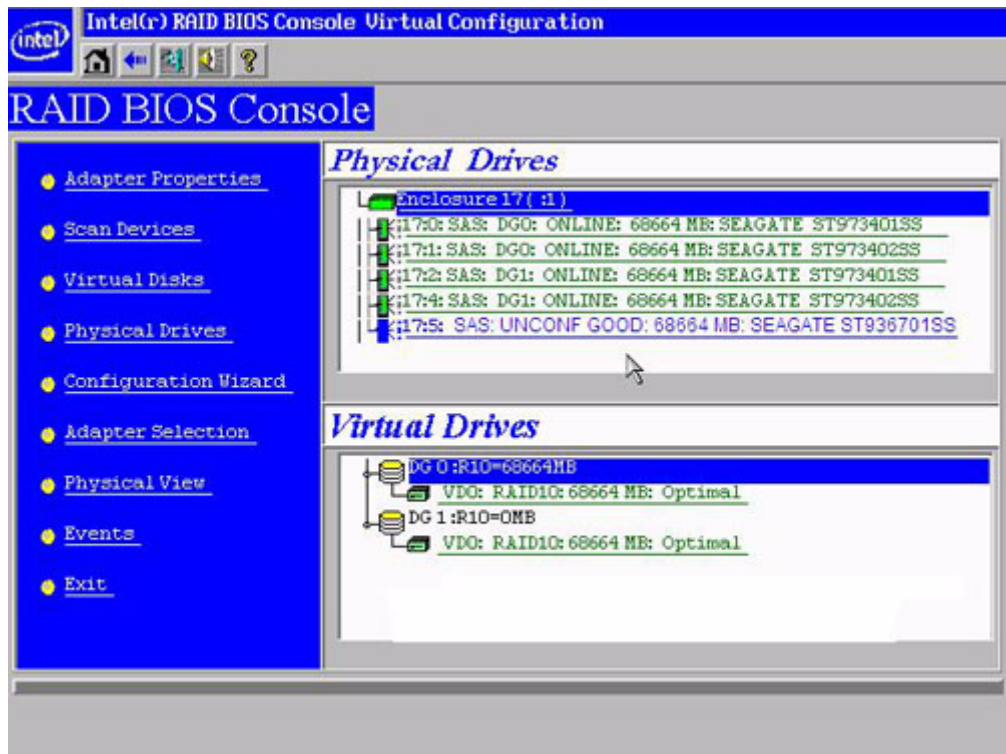


Figure 26. Intel® RAID BIOS Console 2 – Choosing a Hot Spare Drive

2. Select the disk group.

3. Click **Make Dedicated Hot Spare** to add the drive as a hot spare.
4. Click **Make Global Spare** if you want to create a global hot spare for all disk groups.

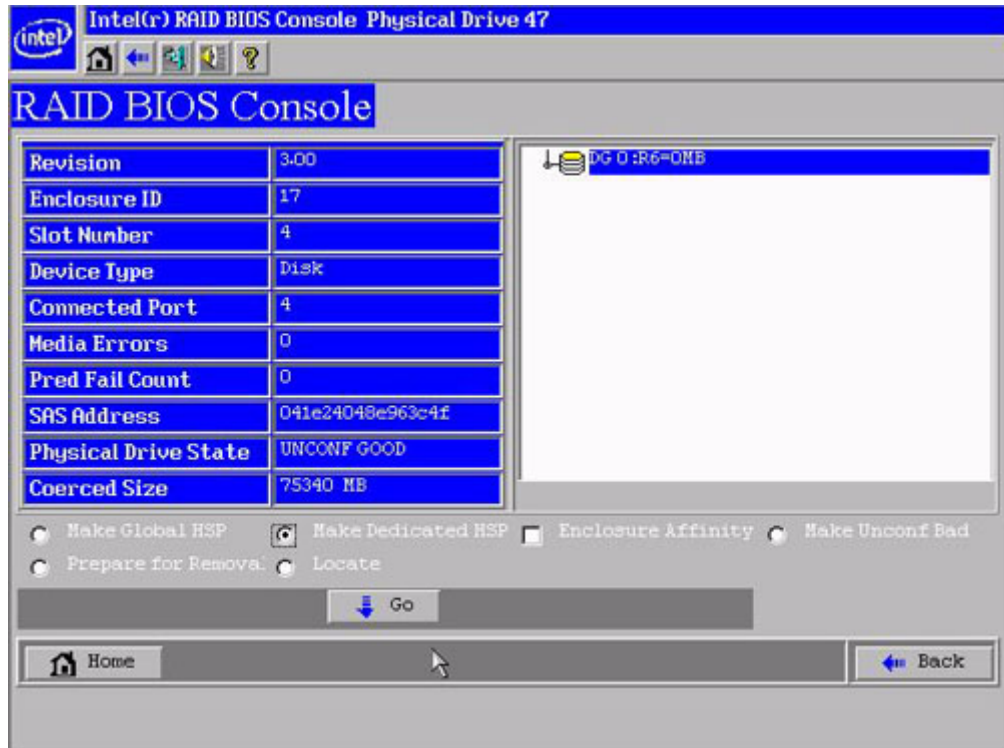


Figure 27. Intel® RAID BIOS Console 2 – Setting a Hot Spare Drive

5. Click **Go** to create the hot spare. The Drive State changes to **HOTSPARE**, as shown below.

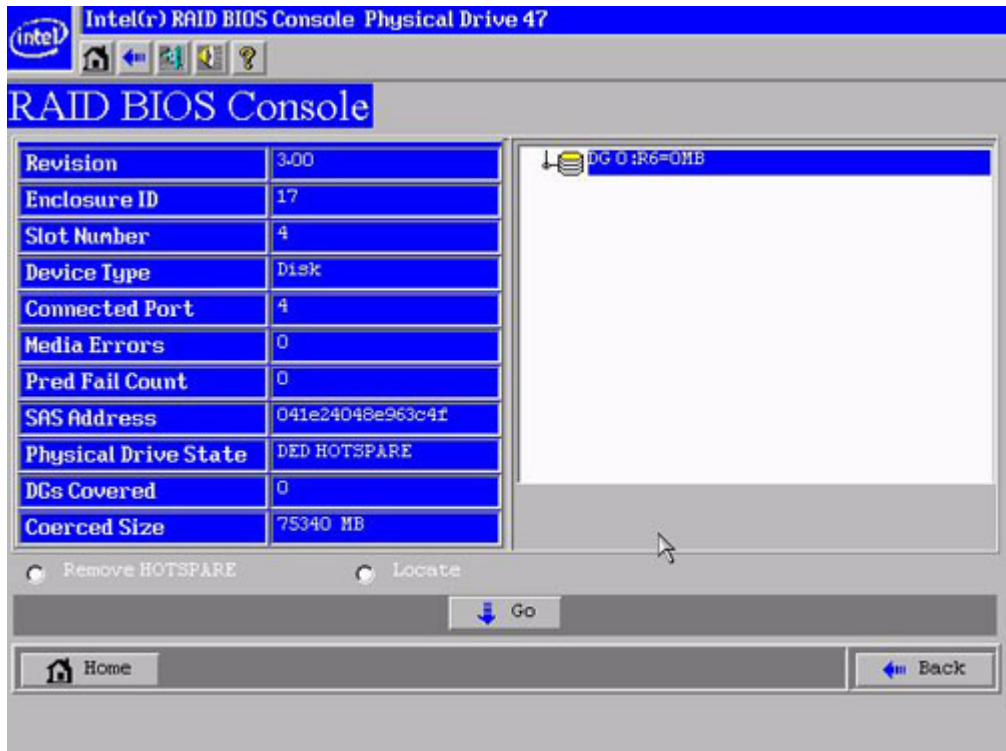


Figure 28. Intel® RAID BIOS Console 2 – Viewing Hot Spare

6. Click **Home** to return to the main screen.

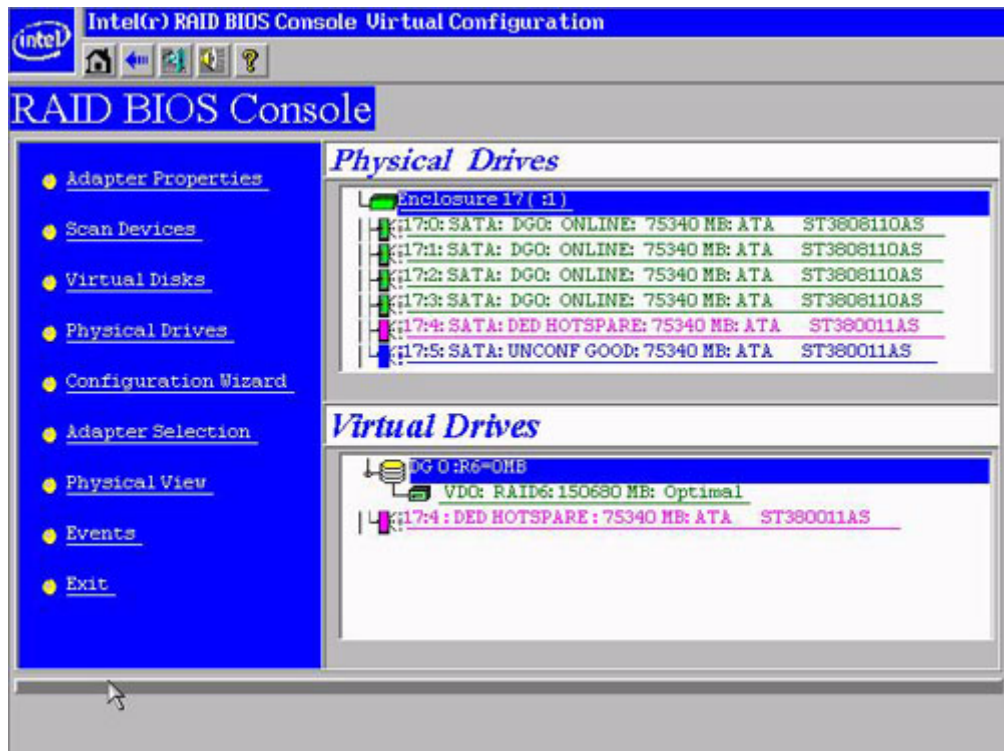


Figure 29. Intel® RAID BIOS Console 2 – Main Screen showing Hot Spare Drive

Viewing Event Details

Events contain information, warnings, and fatal events. Events can be captured on various RAID controller components, such as the battery, physical card, and within the configuration. You can view these using the following steps.

1. Select **Event Links** from the menu at the left. The events screen displays, as shown in the following figure.

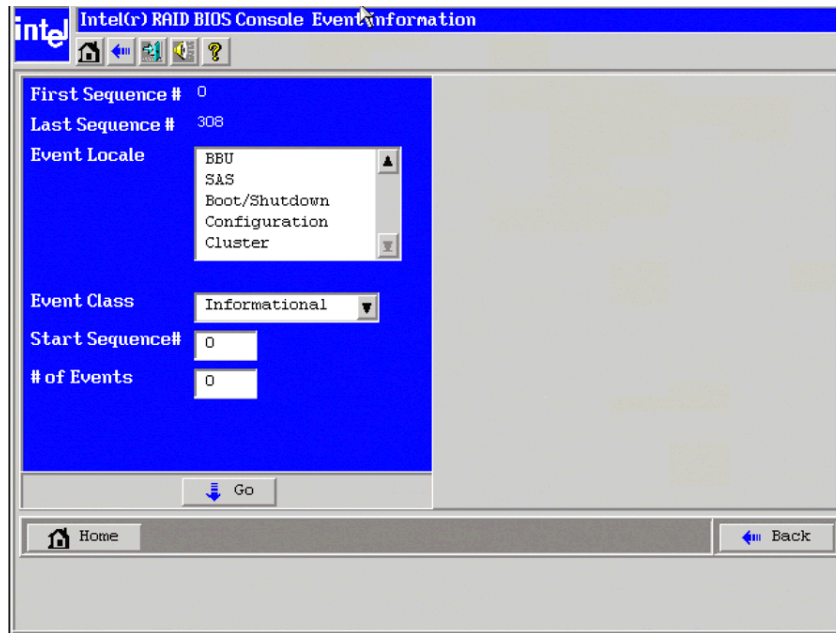


Figure 30. Intel® RAID BIOS Console 2 – Event Information Screen

2. Select the component to display from the list in the **Event Locale** list box.
3. Select the type of event to display from the **Event Class** drop-down.
4. Select the **Start Sequence#** and the **# of Events** to display.

The following example shows a selection was made for informational events for the virtual drive, starting at sequence number 120 and displaying 10 events.

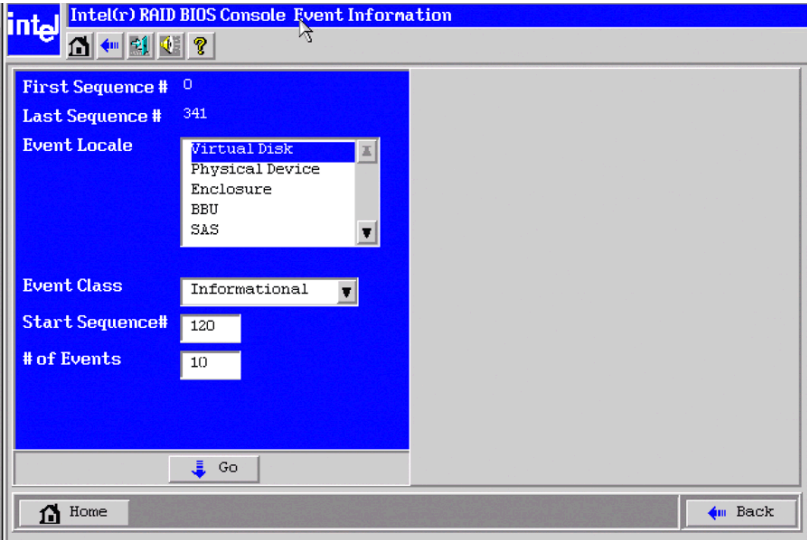


Figure 31. Intel® RAID BIOS Console 2 – Selecting Events to View

- 5. Click **Go**. In the following example, virtual drive events for informational messages were selected, starting with the event at sequence 120. The events screen displays the event information for sequence number 120 in the right pane.

Note: In the following sample, the *Start Sequence#* and the *# of Events* fields each display 0. When you click **Go** to display the events, these fields automatically reset to 0.

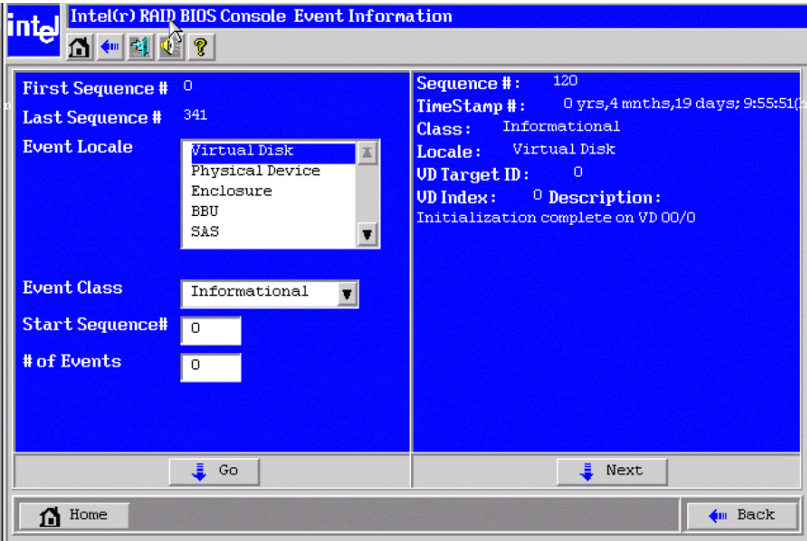


Figure 32. Intel® RAID BIOS Console 2 – Viewing an Event

- 6. Click **Next** to view the next message.

7 Intel® RAID Web Console 2

The Intel® RAID Web Console 2 enables you to configure, monitor, and maintain Intel® RAID controllers and the storage related devices connected to the RAID controller. The Intel® RAID Web Console 2 graphical user interface (GUI) makes it easy to create and manage storage configurations.

Configuration Functions

The Intel® RAID Web Console 2 enables you configure the controllers, disk drives, battery backup units, and other storage-related devices installed on a system.

- The Configuration Wizard simplifies the process of creating disk groups and virtual drives.
- Auto Configuration mode automatically creates the best possible configuration for the available hardware.

Note: Auto Configuration cannot be used for RAID 10, 50, or 60 or with mixed SATA and SAS drives.

- Guided Configuration mode asks you a few brief questions about the configuration, and then creates the array for you.
- Manual Configuration mode, which gives you complete control over all aspects of the storage configuration.
- The Reconstruction Wizard enables you to increase or reduce the size of a virtual drive and to change the RAID level of an array.

Monitoring Functions

The Intel® RAID Web Console 2 displays information on the status of virtual drives, physical disks, and other storage-related devices on the systems you are monitoring. System errors and events are recorded in an event log file and displayed on the screen. Special device icons appear on the screen to notify you of disk failures and other situations that require immediate attention.

Maintenance Functions

Use the Intel® RAID Web Console 2 to perform system maintenance tasks such as running patrol read operations, updating firmware, and running consistency checks on arrays and disk groups that support redundancy.

Hardware and Software Requirements

The hardware requirements for Intel® RAID Web Console 2 software are as follows.

- PC-compatible computer system with at least one Intel® Xeon® architecture processor or an Intel® Extended Memory 64 Technology (Intel® EM64T) 64-bit processor
- At least 256 Mbytes of system memory
- Hard disk drive with at least 50 MB available free space
- A supported operating system:
 - Microsoft Windows 2000*, Microsoft Windows Server 2003*, or Microsoft Windows XP*
 - Red Hat* Linux Enterprise 3.0, 4.0, or 5.0
 - SUSE* Enterprise Linux 9.0 with service packs 1 to 3, or 10

Installing the Intel® RAID Web Console 2 on a Microsoft Windows* Operating System

To install the Intel® RAID Web Console 2 on a Microsoft Windows 2000*, Microsoft Windows Server 2003*, or Microsoft Windows XP* system, complete the following steps:

1. Insert the *Resource CD* in the CD-ROM drive.

OR

2. When the Welcome screen is displayed, click **Next**.
3. When the next screen is displayed, read and accept the user license and click **Next**. The Customer Information screen is displayed, as shown in [Figure 33](#).

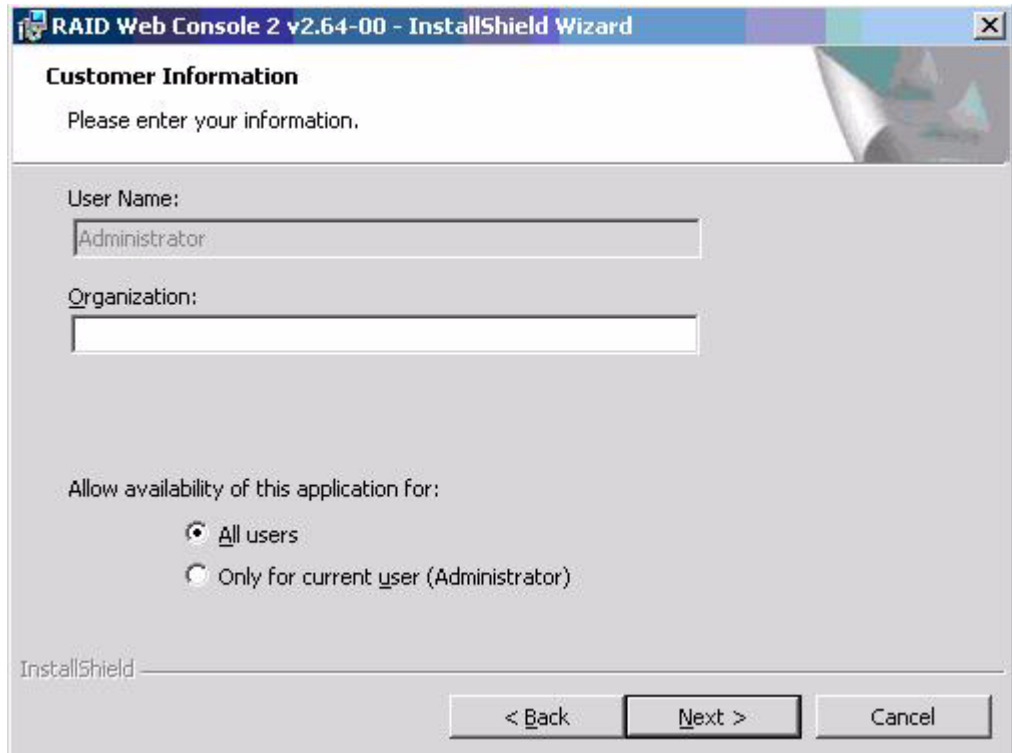


Figure 33. Intel® RAID Web Console 2 – Customer Information Screen

4. Enter your user name and organization name. At the bottom of the screen, select an installation option:
 - If you select **All users**, any user with administrative privileges can view or change the RAID configurations.
 - If you select **Only for current user (Administrator)**, only you can view or change the RAID configurations.
5. Click **Next** to continue.
6. Accept the default Destination Folder, or click **Change** to select a different destination folder. Click **Next** to continue. The Setup Type screen is displayed, as shown in [Figure 34](#).

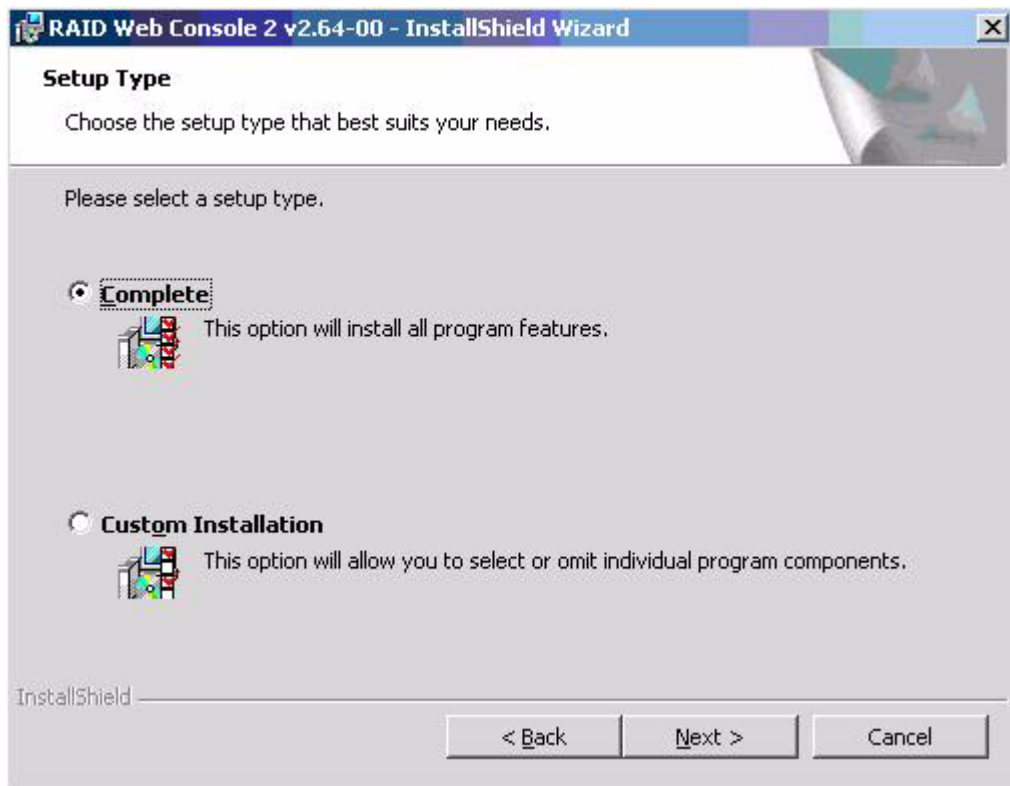


Figure 34. Setup Type Screen

7. Select one of the Setup options.
 - Select **Complete** if you are installing the Intel® RAID Web Console 2 on a system.
 - Select **Custom Installation** if you want to select or omit individual program components to install. When selected, more custom options are provided. Please read the instructions on the screen carefully to make sure you select the preferred setup type.
8. Click **Next** to proceed and then click **Finish** to complete the installation process.

Installing the Intel® RAID Web Console 2 on Linux or SUSE SLES

To install Intel® RAID Web Console 2 on a system running Red Hat* Linux 3.0, 4.0, or 5.0, or SUSE* Linux Enterprise Server 9 or 10, complete the following steps:

1. Unzip the file `ir3_Linux_RWC2_v...tgz`.
2. In the unzipped files, read the `readme.txt` file.
3. Run `install.sh` and follow the instructions that display on the screen.

The three setup options are the same as those shown in [step 7](#) of the Microsoft Windows* installation instructions.

Startup, Overview, and Setup of Intel® RAID Web Console 2

Complete the following steps to start the Intel® RAID Web Console 2:

- **Microsoft Windows*:** Select **Start | All Programs | RAID Web Console 2 | StartupUI**, or double-click the Intel® RAID Web Console 2 icon on the desktop.
- **Red Hat* Enterprise Linux 3 U6:** Select **Start | System Tools | RAID Web Console 2 StartupUI**.
- **SUSE* Linux Enterprise Service 9 SP1:** Select **Start | System | More Programs | RAID Web Console 2 StartupUI**.

Intel® RAID Web Console 2 Screens

This section describes the main Intel® RAID Web Console 2 screens. When you start the Intel® RAID Web Console 2, the Select Server window is displayed.

Note: Depending on the revision of Intel® RAID Web Console 2 software installed, the following screen may vary slightly.

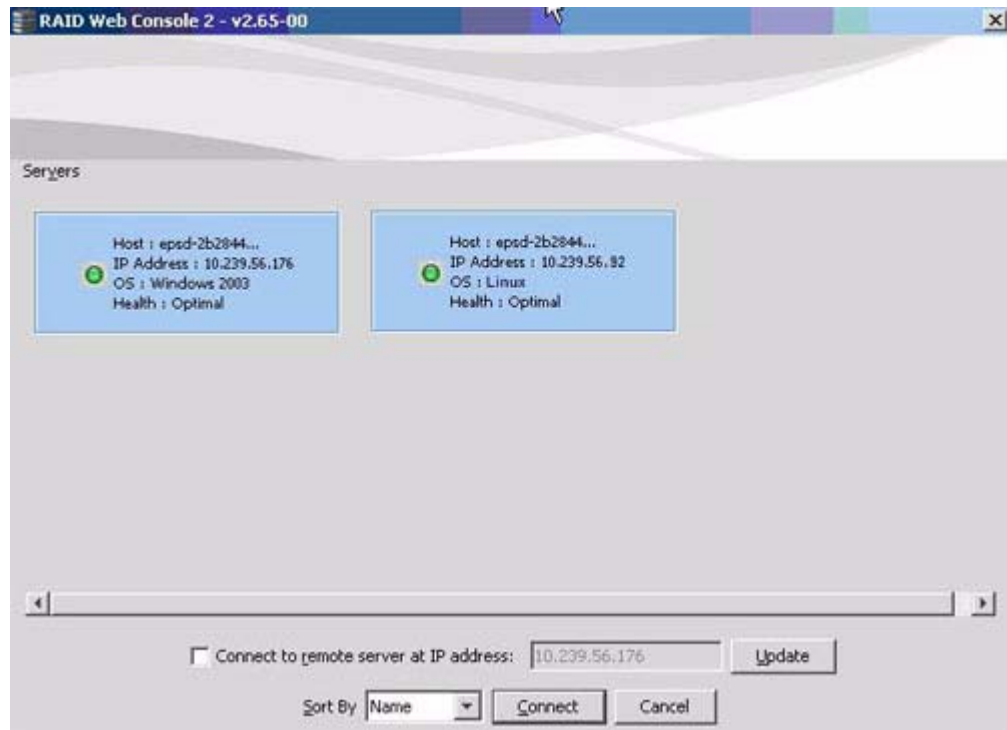


Figure 35. Intel® RAID Web Console 2 – Select Server Screen

Note: To access systems on a different subnet, type in the box at the bottom of the screen the IP address of a system in the desired subnet where Intel® RAID Web Console 2 is running and click Update. If you check the Connect to remote framework box, you can also access a standalone server running Intel® RAID Web Console 2, if it has a network connection.

Color Coding: If the circle in the server icon is yellow instead of green, it means that the system is running in a degraded state. For example, a disk drive used in a virtual drive has failed. If the circle is red, the storage configuration in the system has failed.

To log in to a system, follow these steps:

1. Double-click the icon of the system that you want to access. The Server Login window displays.

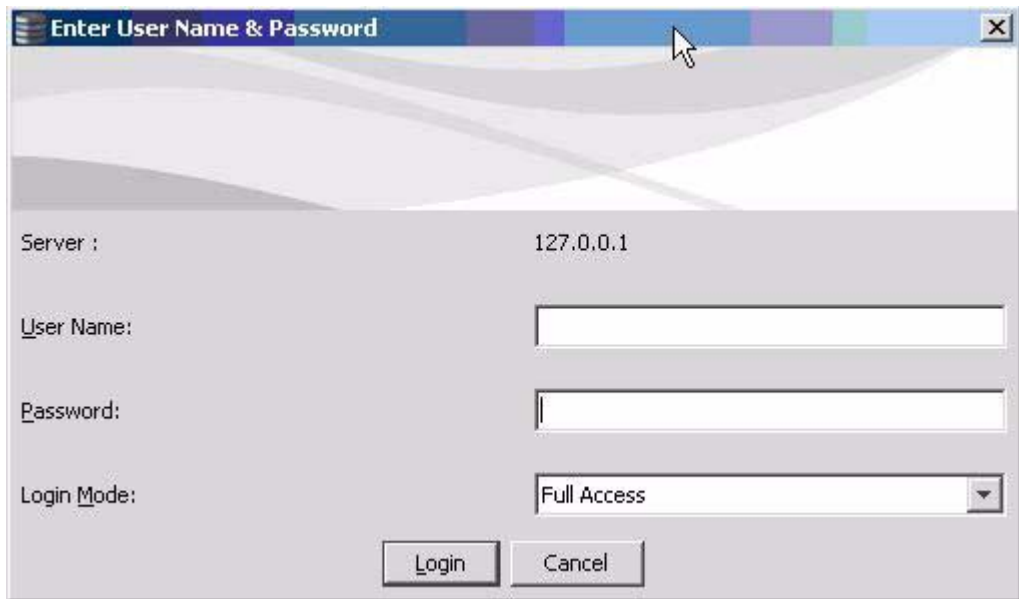


Figure 36. Intel® RAID Web Console 2 – Login Screen

2. Select an access mode from the drop-down menu.
 - Select **Full Access** if you need to view the current system configuration and change the configuration.
 - Select **View Only** if you only need to view the system configuration.
3. Enter your user name and password and click **Login**. If your user name and password are correct for the login mode you have chosen, the main screen displays.

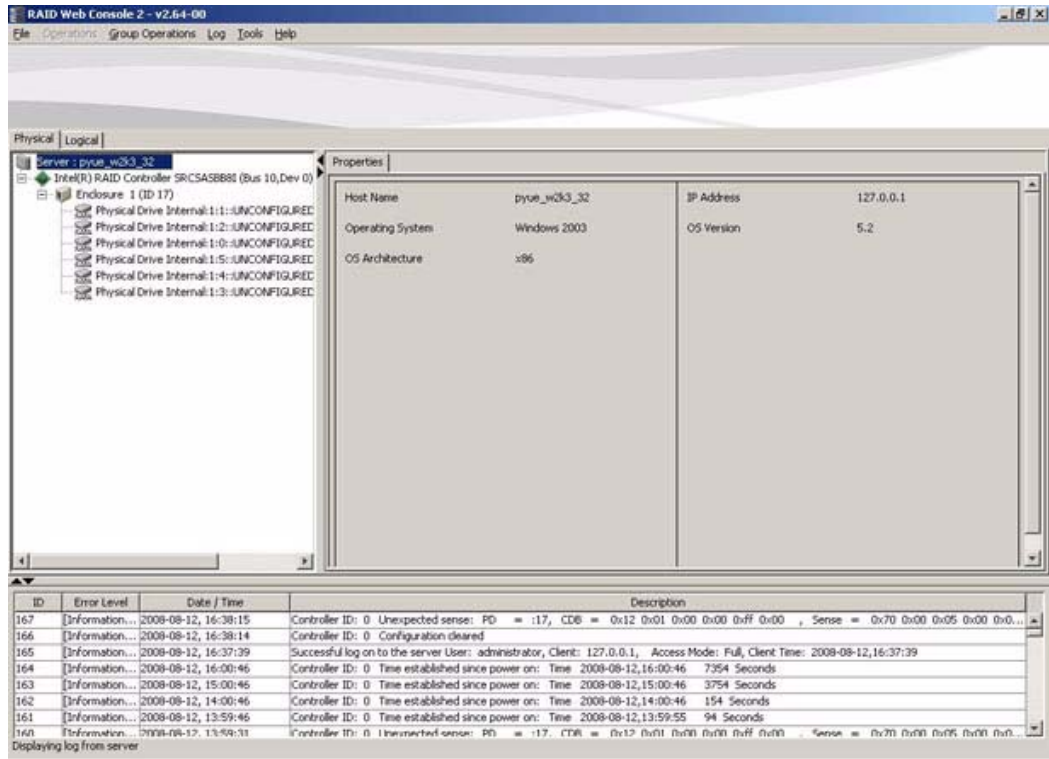


Figure 37. Intel® RAID Web Console 2 – Main Screen

Note: Intel® RAID Web Console 2 uses the username and password of your server operating system. In Microsoft Windows*, you can use the username Administrator and appropriate password to log on to Intel® RAID Web Console 2. In Linux, you can use the username root and appropriate password to log on to Intel® RAID Web Console 2. If you do not know the password, contact the server system administrator to obtain the password.


The information on the screen in Figure 37 shows the system has two controllers: a RAID enclosure and six physical drives.


The following subsections describe this screen in more detail.

Physical/Virtual View Panel

Depending on the tab selected, the left panel displays either the Physical View or the Virtual View of the system and the devices in it.

- The Physical View shows the hierarchy of physical devices in the system. At the top of the hierarchy is the system itself. Controllers are installed in the system, and each controller has one or more ports. Disk drives and other physical devices are attached to the ports.
- The Virtual View shows the hierarchy of systems, controllers, virtual drives, and arrays and disk groups that are defined for the system.

Small icons represent the servers, controllers, and other devices. A red circle to the right of an icon indicates that the device has failed. For example, this icon indicates that a disk drive has failed: 

A yellow circle to the right of an icon indicates that a device is running in a degraded state. For example, this icon indicates that a virtual drive is running in a degraded state due to the failure of a disk drive: 

Properties/Operations/Graphical View Panel

Depending on the kind of device selected in the left panel and your login mode (full-access or view-only), the right panel has either two or three tabs.

The Properties tab displays information about the selected device.

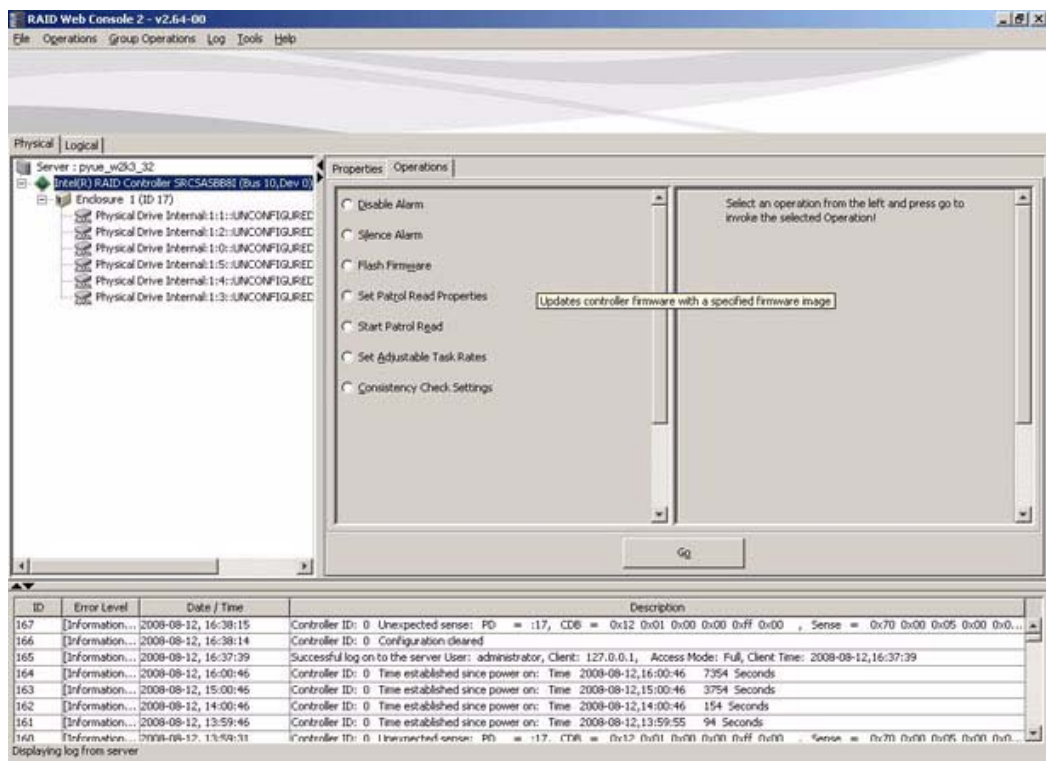


Figure 38. Intel® RAID Web Console 2 – Operations Tab

The Operations tab lists the operations that can be performed on the device selected in the left panel. This tab is available only when you are logged in to Intel® RAID Web Console 2 in Full-access mode. Options available for controllers include: enabling or silencing the alarm, flashing the firmware, and so on. Some types of devices, such as arrays, disk groups, and ports, do not have operations associated with them.

If a physical or virtual drive is selected in the left panel, the Graphical tab is available in the right panel. In the Graphical View, the device's storage is color coded to show used capacity, unused capacity, and so on.

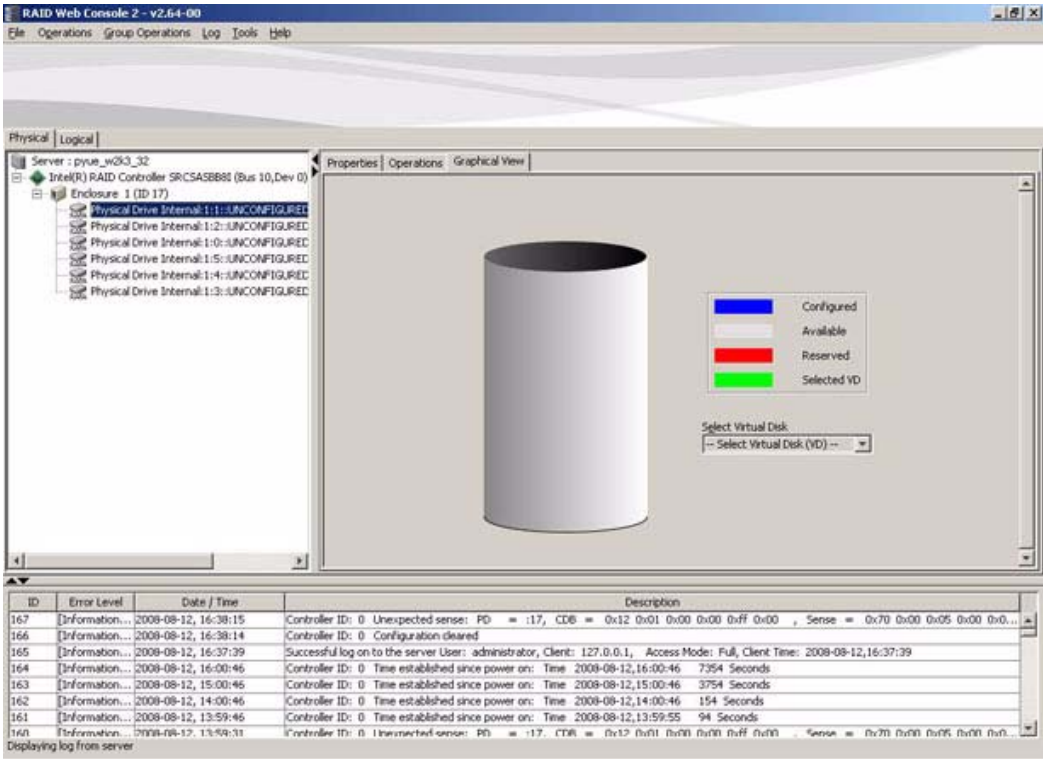


Figure 39. Intel® RAID Web Console 2 – Graphical Tab

Event Log Panel

The lower part of the screen displays the event log entries for the system. New event log entries display during the session. Each entry has a time and date stamp, an Error Level that indicates the severity of the event, and a brief description of the event. For information about the event log entries, see [Appendix B: “Events and Messages.”](#)

Menu Bar / File Menu

The File menu includes the Exit option to close the Intel® RAID Web Console 2. It also includes a Rescan option to update the screen with the latest RAID configuration information.

Menu Bar / Operations Menu

The Operations menu is available only when a controller, physical drive, virtual drive, or other storage object is selected in the main window. The options on the Operations menu vary by the item selected. For example, the Enable Alarm and Silence Alarm options are available only when a controller is selected. The options also vary depending on the current state of the selected object. For example, if an offline physical drive is selected, the Make Drive Online option is displayed in the Operations menu.

You can also view the Operations selections from the Operations tab in the right panel. If an operation requires user input before it can execute, it displays in the Operations tab but not in the Operations menu. If you right-click a device icon in the left panel, a device-specific operations menu displays.

An Advanced Operations sub-menu is also available. On this menu, you can access the Configuration Wizard and other configuration-related commands.

File Menu / Group Operations Menu

The Group Operations menu options include Check Consistency, Initialize, and Show Progress.

File Menu / Log Menu

The Log menu includes options for saving and clearing the message log.

File Menu / Help Menu

The Help menu provides access to the online help file and Intel[®] RAID Web Console 2 version.information.

Drive Configuration Tasks

You can use Intel[®] RAID Web Console 2 to perform the following configuration tasks:

- [Creating a New Configuration](#)
- [Creating a Spanned Disk Group](#)
- [Creating Hot Spares](#)
- [Setting Adjustable Task Rates](#)
- [Adding a Drive to a Virtual Disk](#)
- [Removing a Drive from a Virtual Disk](#)
- [Changing the RAID Level of a Virtual Disk](#)
- [Changing Virtual Disk Properties](#)
- [Deleting a Virtual Disk](#)
- [Managing Configurations](#)

Configuration Wizards

Use the Configuration Wizard to create disk groups and virtual disks. The Configuration Wizard can create simple configurations automatically. For more complex configurations, the Configuration Wizard allows you to customize the configuration parameters according to your needs.

The Reconstruction Wizard allows you to easily change RAID levels, or to expand or reduce the capacity of existing virtual drives.

Note: Unless you are logged on to a system with Administrator privileges, you cannot create or modify a storage configuration.

Creating a New Configuration

You use the Intel® RAID Web Console 2 Configuration Wizard to create new groups and virtual disks.

1. To open the Configuration Wizard, select a controller in the left panel and then select **Operations | Advanced Operations | Configuration | Configuration Wizard**. The first Configuration Wizard screen is displayed.

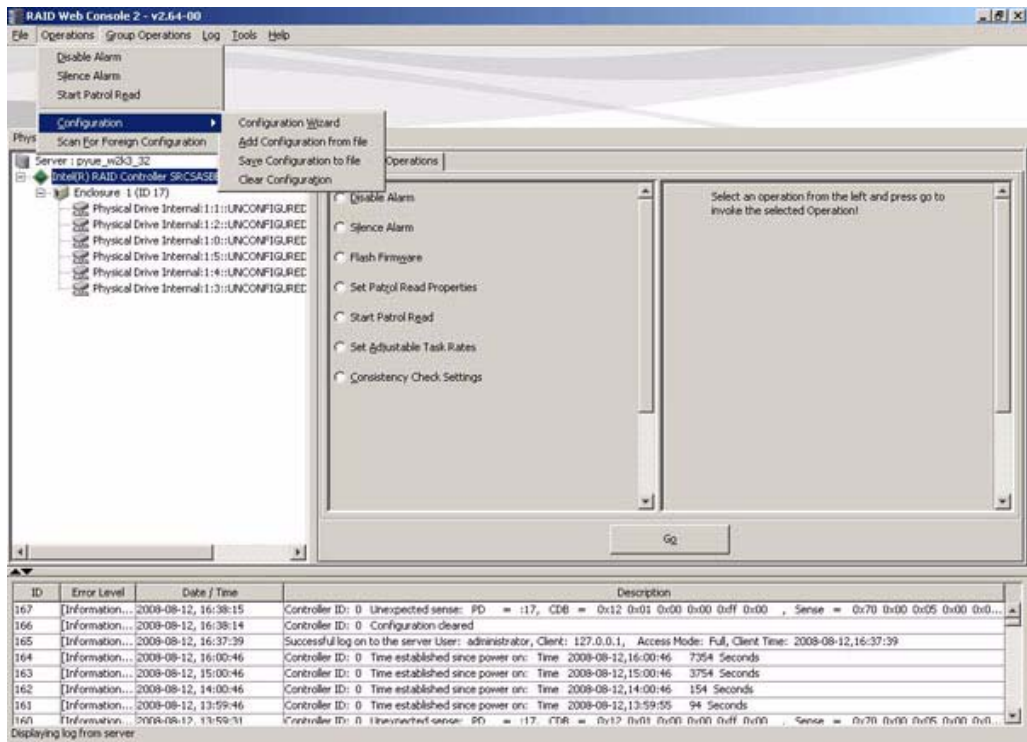


Figure 40. Intel® RAID Web Console 2 – Starting Configuration Wizard

2. Select an option to proceed, or click **Cancel** to close the window.

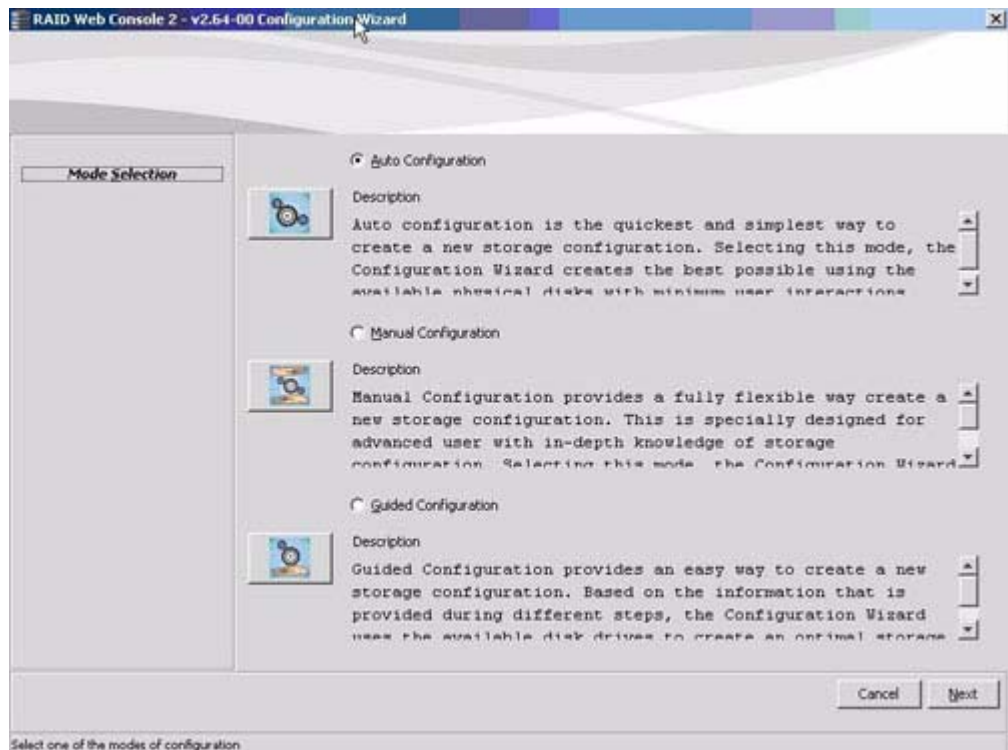


Figure 41. Intel® RAID Web Console 2 – Selecting Type of Configuration

The following sections explain how to use the three options:

- *Auto Configuration* automatically configures the available drives into an optimal configuration.

Note: *Auto Configuration cannot be used for RAID 10, 50, or 60 or with mixed SATA and SAS drives.*

- *Manual Configuration* gives you the greatest level of control in creating a new virtual disk.
- *Guided Configuration* asks you a few simple questions about what kind of configuration you want and then automatically creates it.

Auto Configuration

Note: *Auto Configuration cannot be used for RAID 10, 50, or 60 or with mixed SATA and SAS drives.*

Auto Configuration is the quickest and simplest way to configure a virtual disk. When you select Auto Configuration, Intel® RAID Web Console 2 creates the best configuration possible using the controllers and physical disks that are available. [Figure 42](#) shows the Auto Configuration screen.

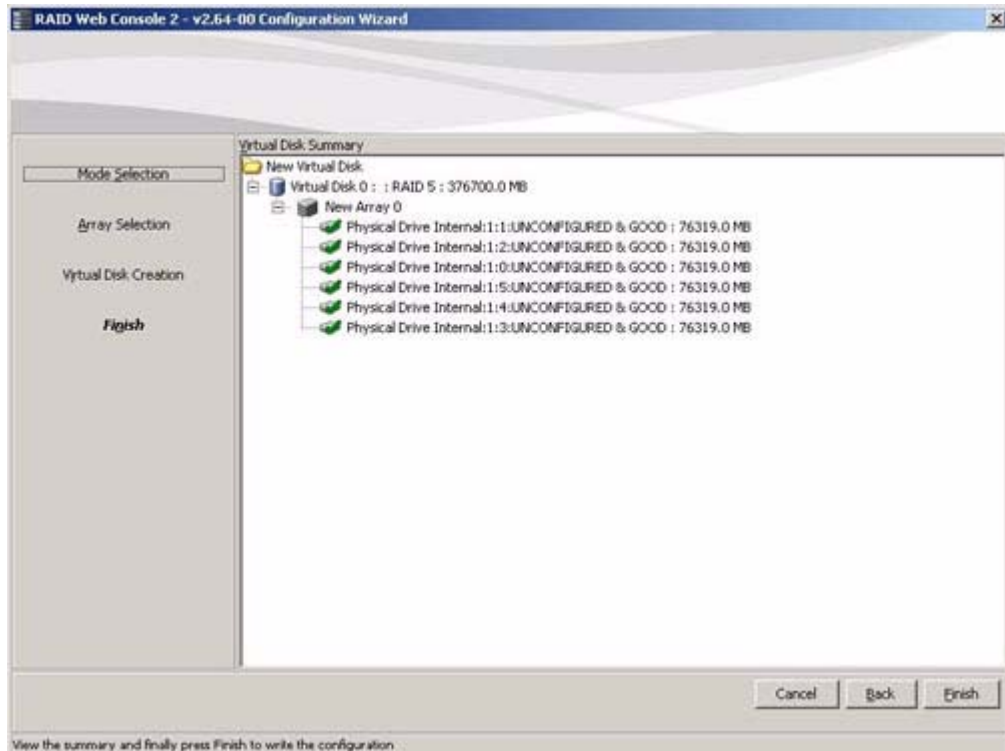


Figure 42. Intel® RAID Web Console 2 – Auto Configuration Screen

Follow these steps to complete Auto Configuration:

1. Select a Redundancy option from the drop-down menu at the bottom of the screen:
 - **No Redundancy:** The virtual disk will have no data redundancy (RAID 0). If a physical disk fails, all data is lost.
 - **With Redundancy:** The virtual disk will have data redundancy, either via parity data (RAID 5 or 6) or duplicated data (RAID 1). If a physical disk fails, data will not be lost.

2. Select an Initialization option from the drop-down menu at the bottom of the screen:
 - **No Init:** Select this option if you do not want to initialize the new configuration at this time. If you select this option, you must initialize the configuration later. For more information, see [“Initializing a Virtual Disk,” on page 125.](#)
 - **Quick Init:** Select this option to quickly initialize the configuration by writing zeros to the first and last 10 MB regions of the virtual disk.
 - **Full Init:** Select this option to run a complete initialization of the configuration. This may take a long time, which could be a couple of hours or even a couple of days, depending on the number and capacity of the physical disks.
3. Click **Modify** if you want to make changes to the Auto Configuration. For example, you could modify the size of a virtual disk.
4. Click **Finish**. Unless you selected **No Init**, the storage configuration is created and initialized.

Manual Configuration

Manual Configuration allows you the greatest level of control in creating a new configuration. When you select Manual Configuration, [Figure 43](#) shows the first screen that is displayed:

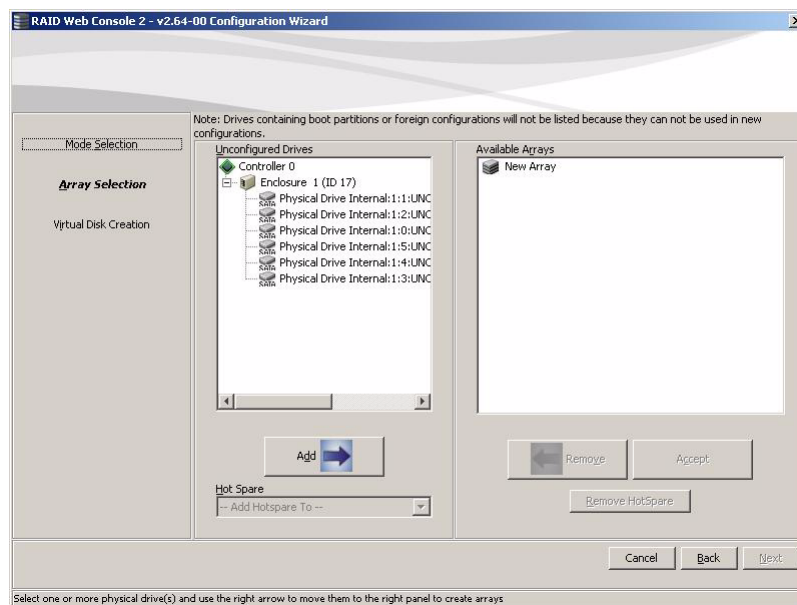


Figure 43. Intel® RAID Web Console 2 – First Manual Configuration Screen

The panel on the left shows the unconfigured physical drives that are available to create a new array or disk group. The right panel shows new arrays or disk groups as you define them. It also shows existing arrays or disk groups that have “holes” — free space that can be used to form new virtual disks.

Step 1: Defining New Arrays or Disk Groups

To define new arrays or disk groups with the Manual Configuration option, complete the following steps:

1. Select available drives in the left panel. You can Shift-click to select a range of drives, or Ctrl-click to select multiple drives individually. Click the arrow button below the panel to move the drives to the right panel.
2. When you have selected all the drives you want for the array or disk group, click **Accept** to accept these drives for the new array or disk group.
3. If needed, select drives for another array or disk group and click **Accept**.
4. To add a dedicated hotspare to an array or disk group that you defined, select an available drive in the left panel, select the array or disk group from the drop-down panel, and click **Add HotSpare To**.

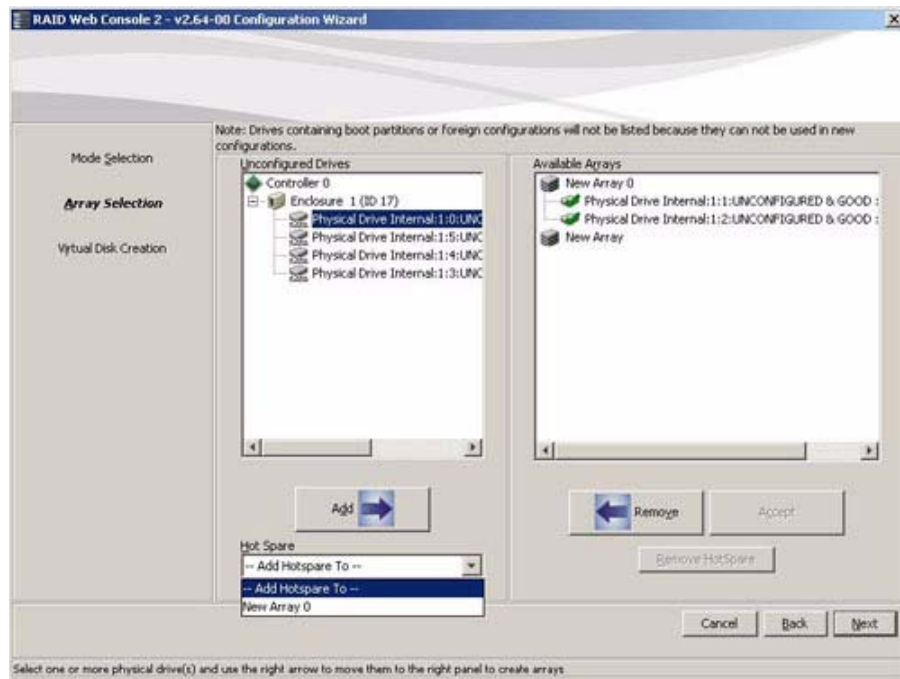


Figure 44. Intel® RAID Web Console 2 – Selecting Drive for Hotspare

Figure 45 shows a newly defined disk group with a dedicated hotspare.

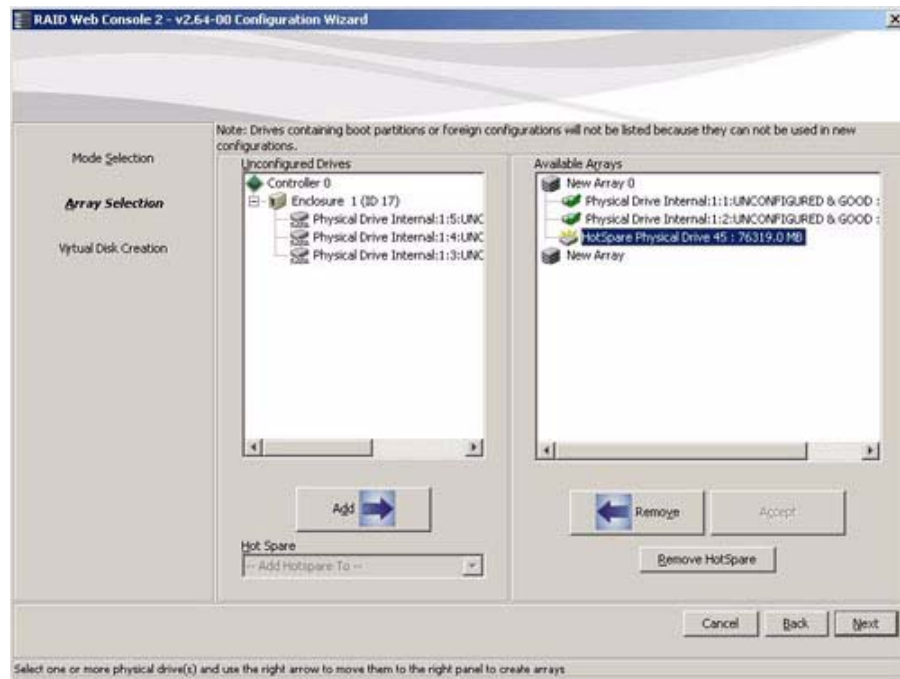


Figure 45. Intel® RAID Web Console 2 – New Disk Group with Hotspare

Note: To remove all physical drives from a proposed array or disk group, select the **New Array** icon in the right panel and click the left-pointing button. To remove a single drive from a proposed array or disk group, select the drive icon in the right panel and click the **Remove** button (left-pointing button). To remove a dedicated hot spare from an array or disk group, select it in the right panel and click **Remove HotSpare**.

5. Click **Next** to continue with the next configuration step.

Step 2: Defining Virtual Disks

The next Manual Configuration screen is displayed in Figure 46.

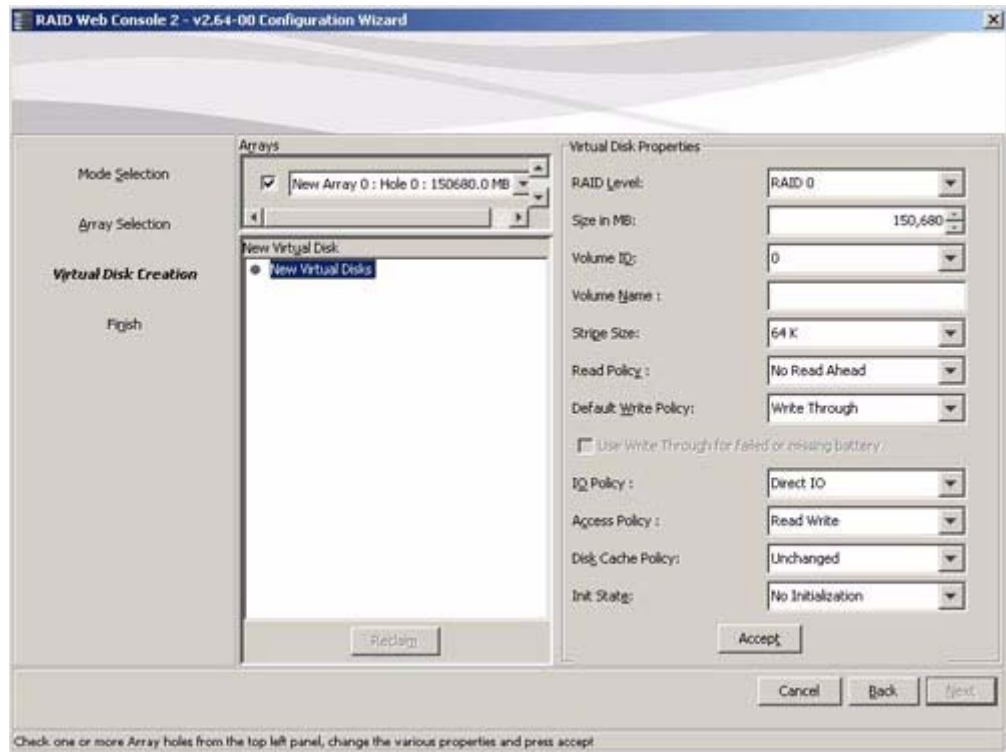


Figure 46. Intel® RAID Web Console 2 – Defining a Virtual Disk

The scrolling menu in the upper middle panel shows arrays or disk groups with available space—both the array(s) / disk group(s) that you defined on the previous screen and any existing arrays or disk groups with “holes” (free space). A single array or disk group can have multiple holes, which you can see in the drop-down menu for the array or disk group.

6. Click check boxes in the menu to select arrays or disk groups, and holes to use for the new virtual disk. Select multiple check boxes to create a spanned configuration.
7. Once all the space for the virtual disk is selected, change the default virtual disk properties in the right panel, if needed.

Note: You can change the virtual disk properties later after the disk is created by selecting **Operations / Set Virtual Disk Properties**.

8. Click **Accept** to accept the configuration of the new virtual disk. See [Figure 47](#).

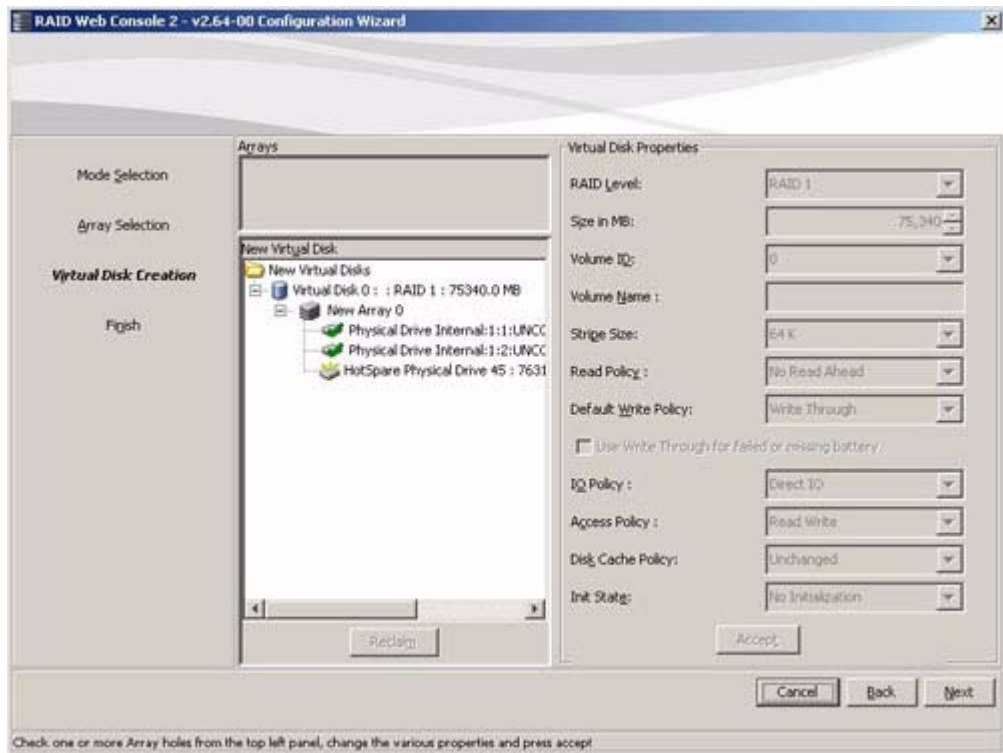


Figure 47. Manual Configuration – New Configuration

Note: Click **Reclaim** if you want to undo a virtual disk you just defined.

9. Select the available space and define its properties, or click **Next** to continue with the next configuration step.

Step 3: Accepting the Configuration

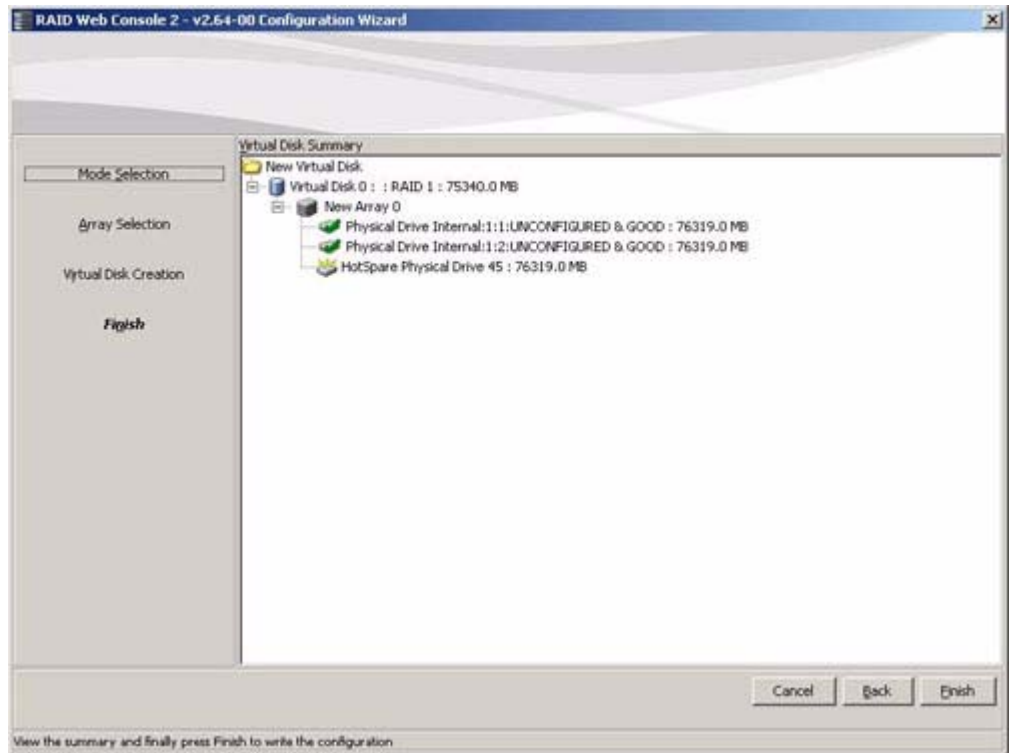


Figure 48. Manual Configuration – Virtual Disk Summary

10. Review the configuration. To make a change, click **Back** and change the configuration parameters.
11. If the configuration is acceptable, click **Finish** to accept it and to start the actual initialization process (unless you selected the **No Init** option on the previous screen).

Guided Configuration

The Guided Configuration creates the best possible configuration on the controller after asking you a few simple questions. Figure 49 shows the first screen that displays when you select Guided Configuration:

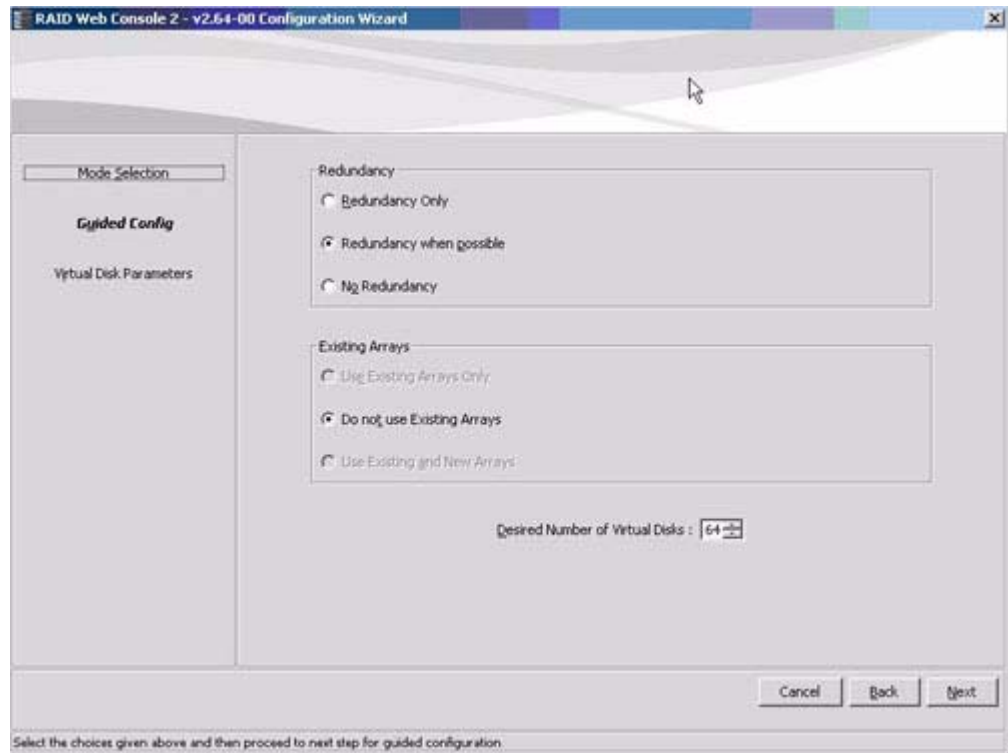


Figure 49. First Guided Configuration Screen

Follow these steps to complete Guided Configuration:

1. Select a Redundancy option:
 - **Redundancy Only:** Create a configuration only if redundancy is possible and if there are enough available disk drives.
 - **Redundancy when possible:** Create a redundant configuration if possible. Otherwise, create a non-redundant configuration.
 - **No Redundancy:** Create a non-redundant configuration.
2. Choose whether you want to use existing arrays or disk groups in the new virtual disk. You have these options:
 - **Use Existing Arrays Only:** If there are no available existing arrays or disk groups, this option is disabled.
 - **Don't Use Existing Arrays**
 - **Use Existing and New Arrays:** If there are no available existing arrays or disk groups, this option is disabled.

3. Select a maximum number of virtual disks to be created. The Intel® RAID Web Console 2 may not be able to create as many virtual disks as you want, depending on the current configuration and the number of virtual disks that have already been created.
4. Click **Next** to continue to the next screen, as shown in [Figure 50](#).

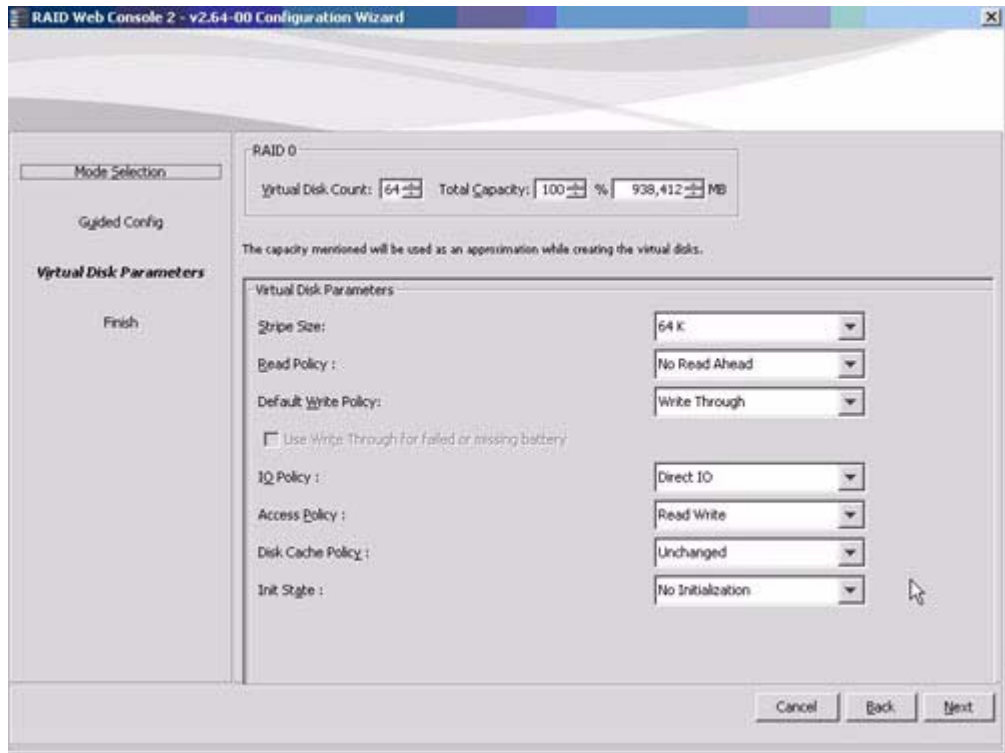


Figure 50. Guided Configuration – Parameters

5. If needed, change the default volume parameters on this screen.
In this example, RAID 0 and RAID 1 volumes are being configured. In the top section of the screen you can specify the number of virtual disks to create. You can also choose to use less than the full capacity of this array or disk group for the virtual disk(s). You can do this to leave capacity available for other virtual disks that you create later. However, in some situations, the remaining space might not be usable.
6. Click **Next** to continue to the next screen, as shown in [Figure 51](#).

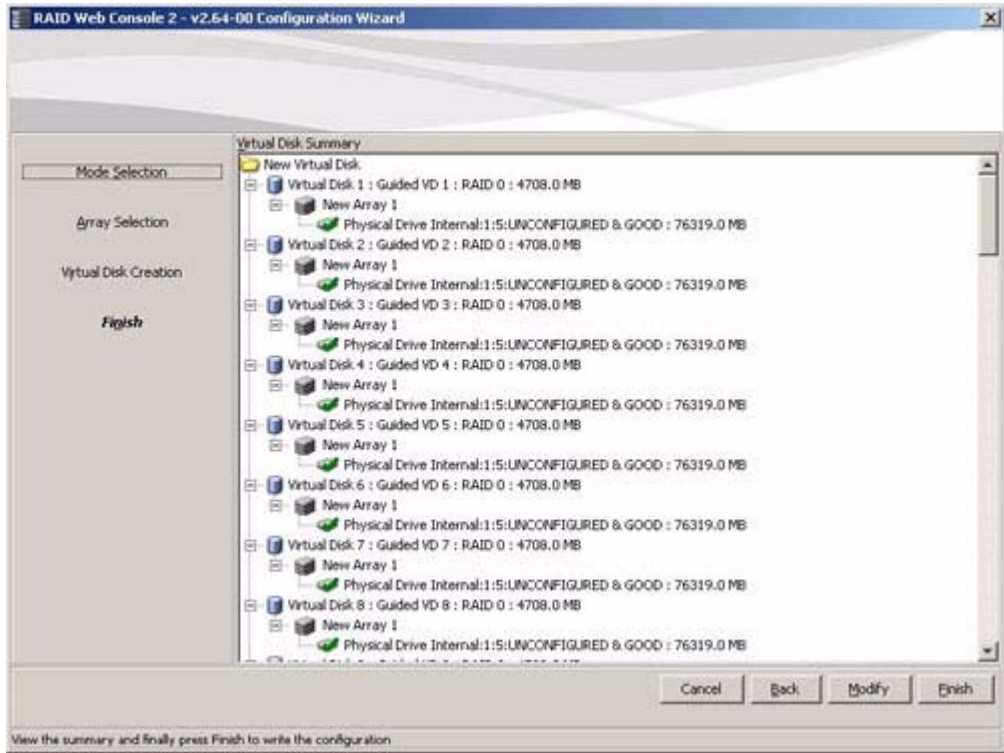


Figure 51. Final Guided Configuration Screen

7. Check the configuration that you just defined. If it is acceptable, click **Finish**. If you want to change something, click **Back** to return to previous screens.

Creating a Spanned Disk Group

Spanning allows you to configure multiple arrays as a single virtual disk. Spanned arrays provide additional levels of data redundancy and storage capacity. The Intel® RAID Web Console 2 supports three types of spanned arrays or disk groups:

- RAID 00 (multiple RAID 0 arrays or disk groups)
- RAID 10 (multiple RAID 1 arrays or disk groups)
- RAID 50 (multiple RAID 5 arrays or disk groups)

Follow these steps to create a spanned disk array or disk group. The following is for RAID 10, but the steps are the same for RAID 00, RAID 50, or RAID 60.

1. Open the Configuration Wizard and select the **Manual Configuration** option.
2. On the first Manual Configuration screen, select disks for two or more RAID 1 arrays or disk groups (two disks per array or disk group).
3. If needed, select hot spares for the arrays or disk groups, and click **Next** when you have defined all the arrays or disk groups you want.
4. On the next screen (Virtual Disk Creation), select two or more of the new arrays or disk groups from the Arrays with Free Space menu, as shown in [Figure 52](#). You can select up to eight arrays or disk groups for the spanned array.

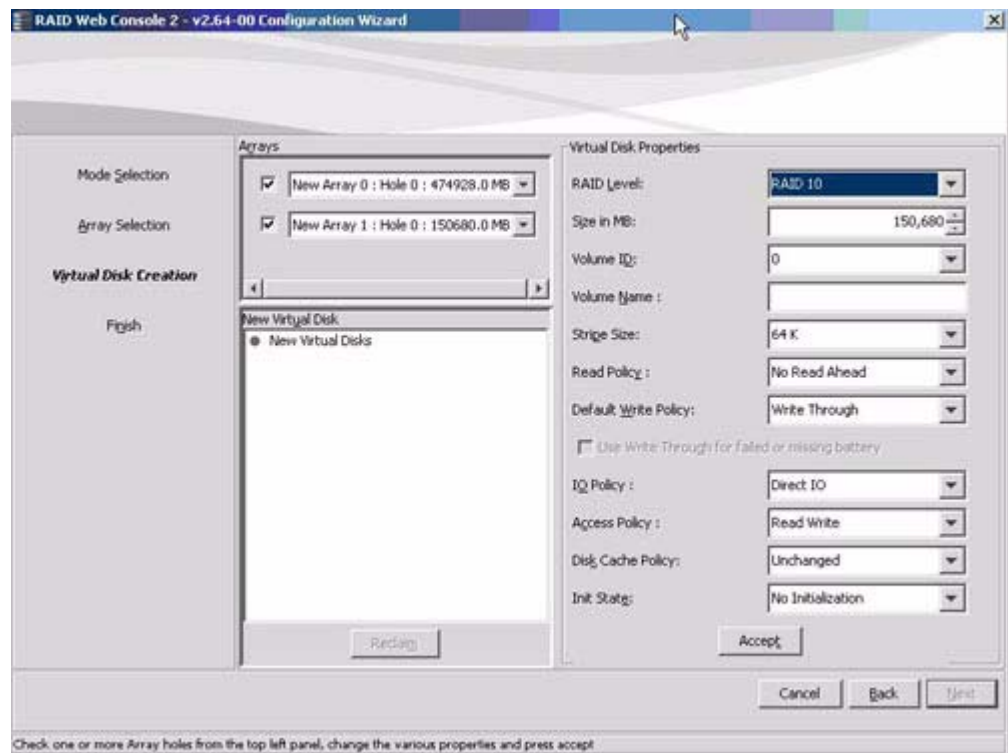


Figure 52. Defining the Spanned Array

5. Select RAID 10 from the drop-down RAID Level menu, as shown in [Figure 52](#), or select RAID 0 or RAID 50 for the other types of spanned arrays or disk groups.

6. Change the virtual disk properties as needed, and then click **Accept** to accept the spanned array. The newly defined virtual disk is displayed, as shown in [Figure 53](#).

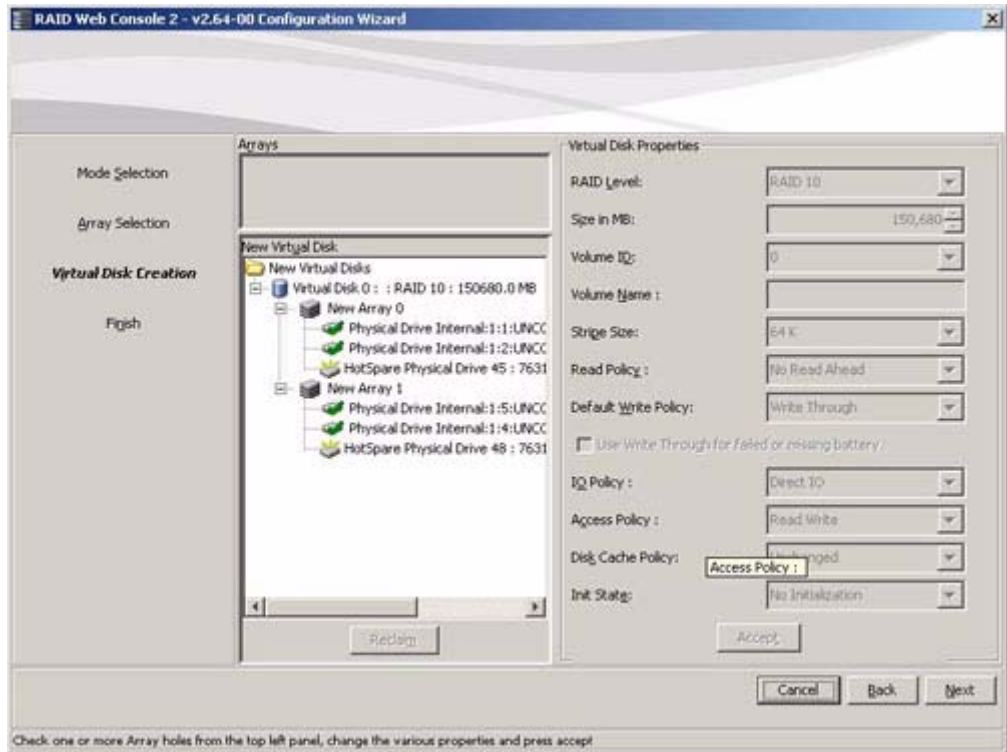


Figure 53. New Spanned Array

7. Click **Next** to continue, and click **Finish** in the last screen to complete the process.

Creating Hot Spares

Hot spares are disk drives that are available to automatically replace failed drives in a virtual disk. There are two kinds of hot spares: 1) dedicated hot spares, which are available to one or more specified arrays or disk groups, and 2) global hot spares, which are available to any array or disk group defined on the controller.

To create a global hot spare, follow these steps:

1. In the left panel of the Intel® RAID Web Console 2 window, right-click the icon of disk drive that is not assigned to a storage configuration. If it is assigned to a storage configuration, a check mark is displayed on the disk drive icon.
2. In the right panel, click the **Operations** tab and select **Make Global Hotspare**, as shown in Figure 54.

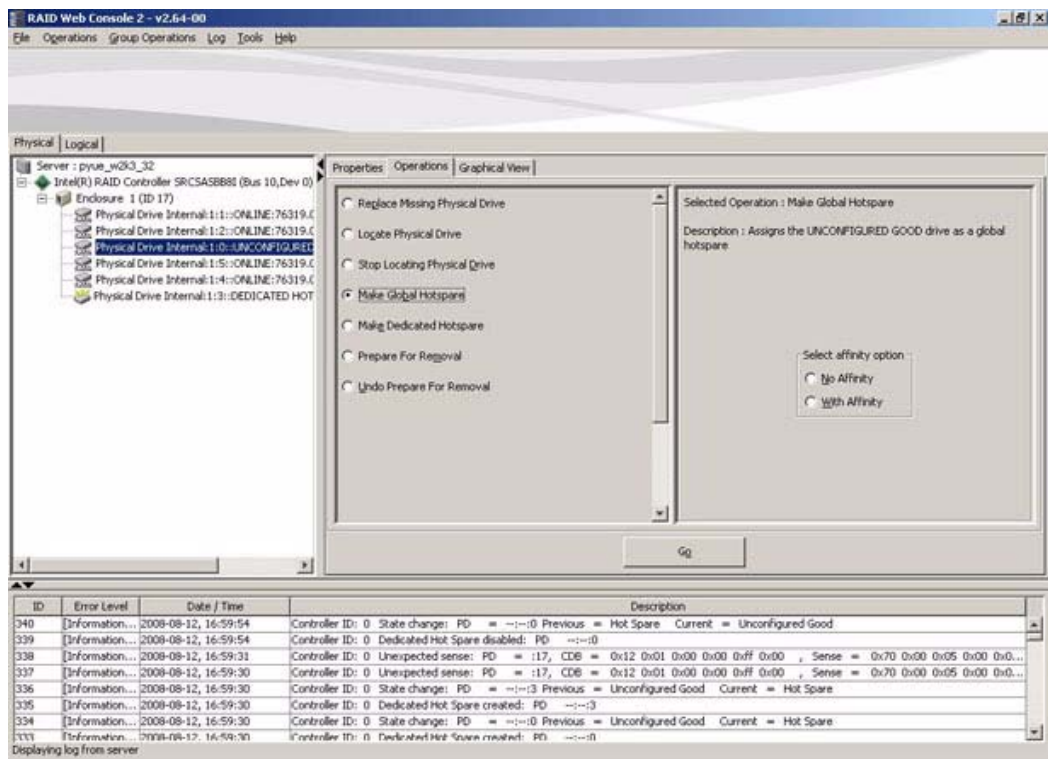


Figure 54. Make Global Hotspare

You normally create a dedicated hot spare when you create a new configuration with the Manual Configuration option (see “Manual Configuration,” on page 86). To add a dedicated hot spare to an existing array or disk group, follow these steps:

1. In the left panel of the Intel® RAID Web Console 2 window, click the icon of a disk drive that is not assigned to a storage configuration. If it is assigned to a storage configuration, a check mark is displayed on the disk drive icon.
2. In the right panel, click the **Operations** tab and select **Make Dedicated Hotspare**, as shown in Figure 55.

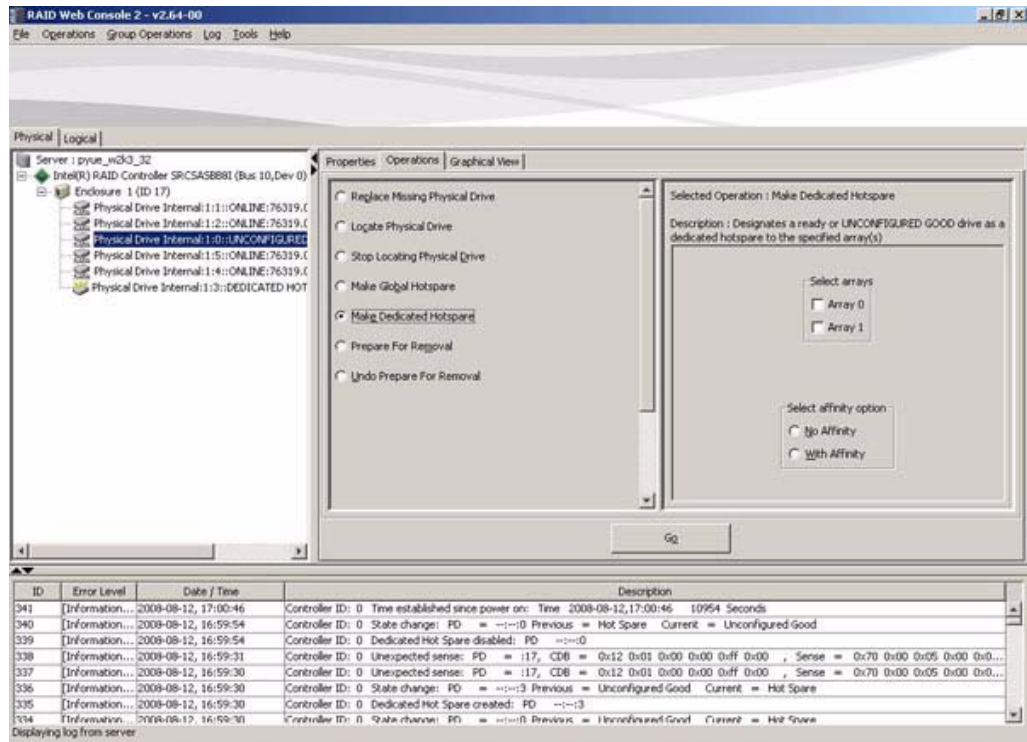


Figure 55. Creating a Dedicated Hotspare

3. Select the array or disk group to which the hotspare will be dedicated from the list on the right.

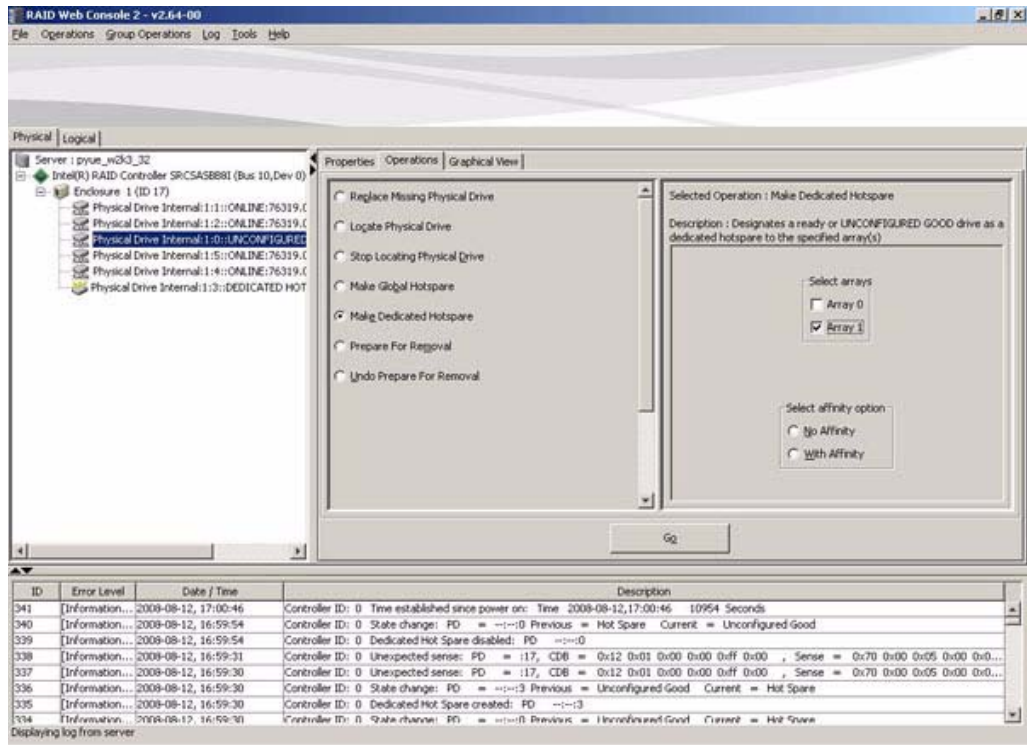


Figure 56. Select Hotspare Drive

4. Click **Go** to create the dedicated hot spare.

Setting Adjustable Task Rates

To change the Rebuild rate and other task rates for a controller, you must first log onto the system in All Access mode (versus View-Only mode). Complete the following steps to set the adjustable task rates:

1. Select a controller icon in the left panel, and select the **Physical View** tab.
2. In the right panel, select the **Operations** tab and select **Adjustable Task Rates**. The task rates appear at the right, as shown in [Figure 57](#).

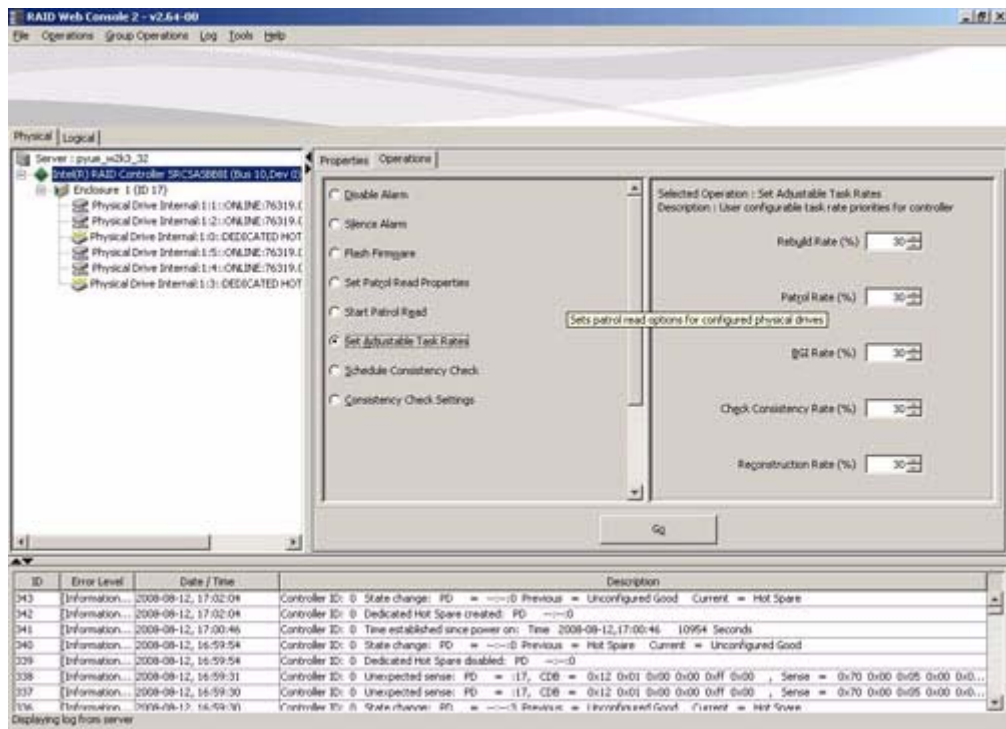


Figure 57. Set Adjustable Task Rates

3. Enter changes as needed to any of the task rates:
 - **Rebuild Rate.** Enter a number from 0 to 100 to control the rate at which a rebuild is performed on a disk drive when one is necessary. The higher the number, the faster the rebuild will occur. However, if a higher number is selected, the system I/O rate may be slower.
 - **Patrol Rate.** Enter a number from 0 to 100 to control the rate at which patrol reads are performed. Patrol read is a preventive procedure that monitors physical disks to find and resolve potential problem that might cause a disk failure. The higher the number, the faster the patrol read occurs. However, if a higher number is selected, the system I/O rate may be slower.
 - **Background Initialization (BGI) Rate** Enter a number from 0 to 100 to control the rate at which virtual disks are initialized in the background. Background initialization makes the virtual disk immediately available for use, even while the initialization is occurring. The higher the number, the faster the initialization occurs. However, if a higher number is selected, the system I/O rate may be slower.

- **Check Consistency Rate.** Enter a number from 0 to 100 to control the rate at which a consistency check is done. A consistency check scans the consistency data on a fault tolerant virtual disk to determine if the data is corrupted. The higher the number, the faster the consistency check is done. However, if a higher number is selected, the system I/O rate may be slower.

- **Reconstruction Rate.** Enter a number from 0 to 100 to control the rate at which reconstruction of a virtual disk occurs. The higher the number, the faster the reconstruction will occur. However, if a higher number is selected, the system I/O rate may be slower.
4. Click **Go** to accept the new task rates.
 5. When the warning message is displayed, click **OK** to confirm that you want to change the task rates.

Note: The Controller Operations tab also has options for disabling or silencing the alarm on the controller. Ordinarily, you should leave the alarm enabled so it can warn you of abnormal conditions on the controller. If the alarm is malfunctioning, you may need to silence it.

Adding a Drive to a Virtual Disk

You can use Intel® RAID Web Console 2 to increase the capacity of an existing virtual disk by adding physical disk drives to it. In order to do this, you must be logged on to the system in All Access mode.

Warning: Before you change a virtual disk's capacity, back up the data on the virtual disk.

To increase the capacity of a virtual disk, follow these steps:

1. Select a controller icon in the left panel and then select **Operations | Advanced Operations | Configuration | Reconstruction Wizard**.

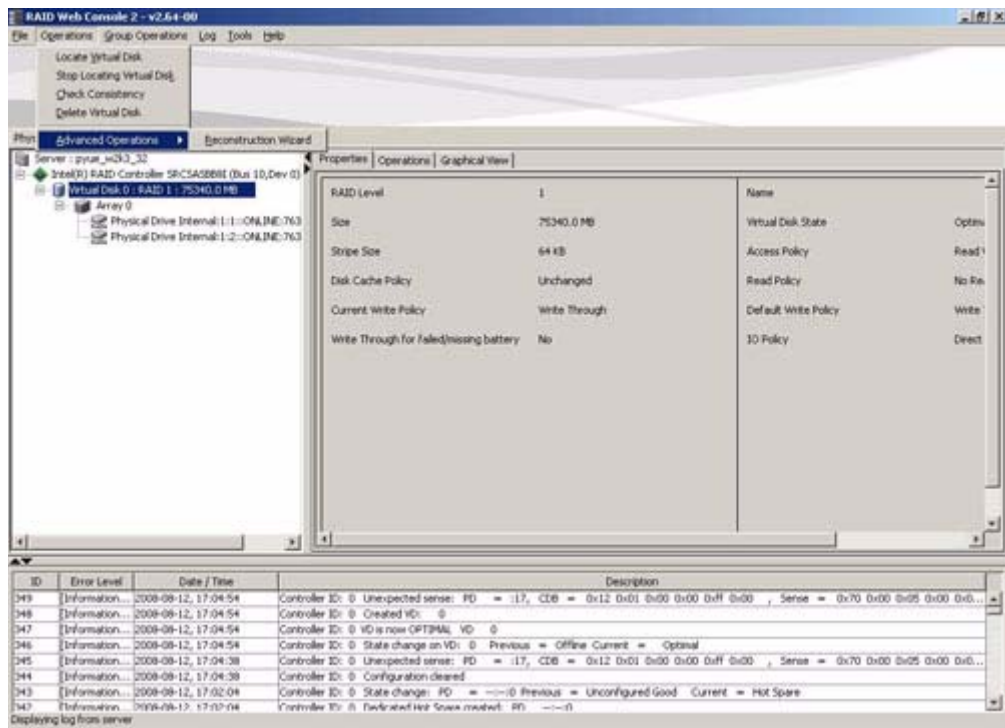


Figure 58. Starting Reconstruction Wizard

The Reconstruction Wizard window is displayed, as shown in [Figure 59](#).

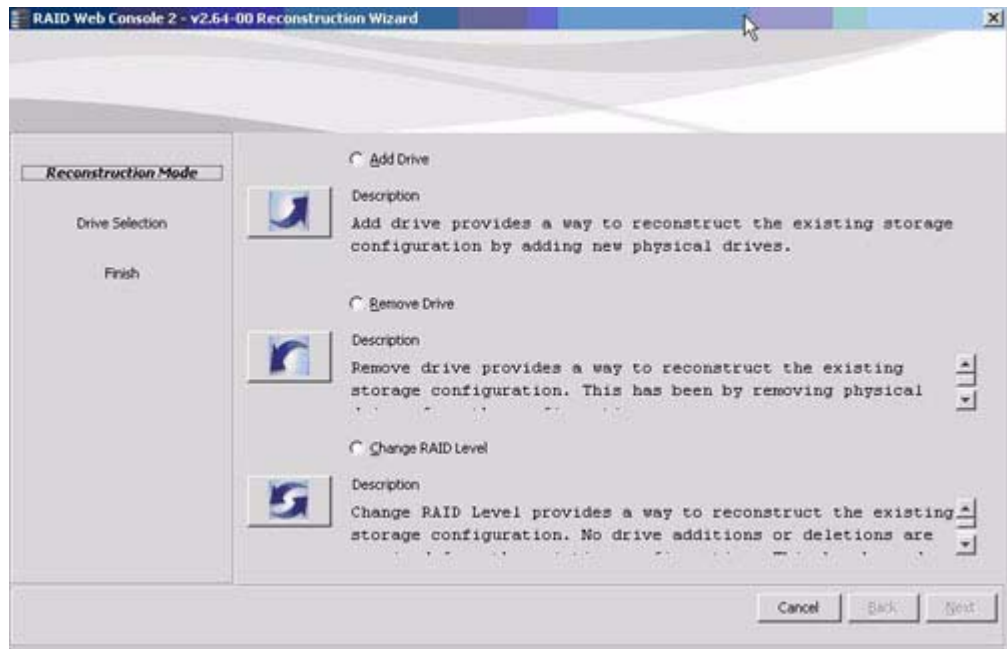


Figure 59. Reconstruction Wizard

2. Click **Add Drive**. The following screen displays.

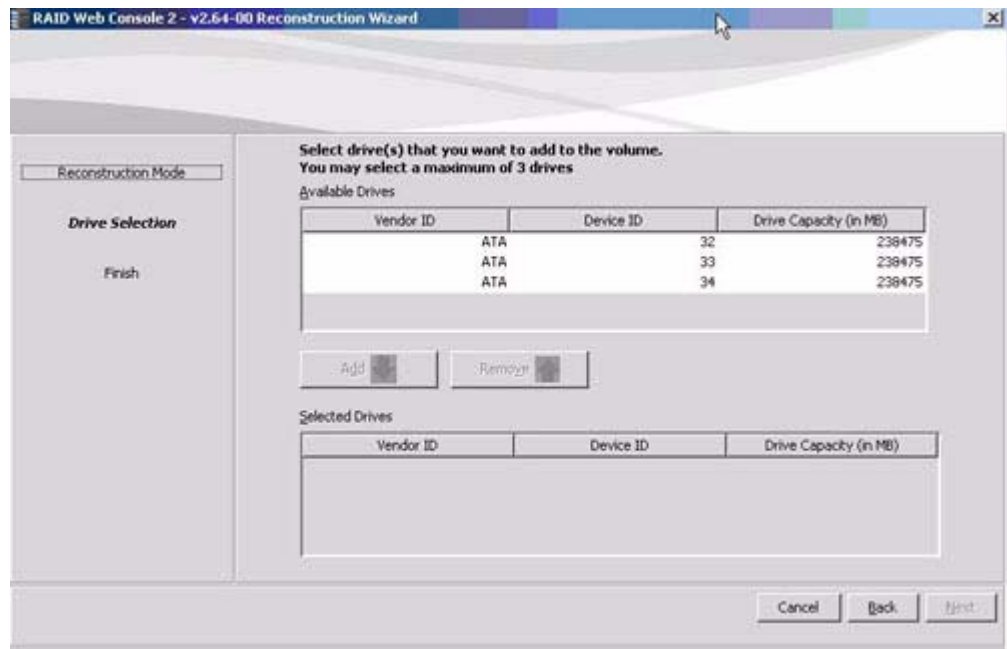


Figure 60. Selecting Drives to Add

3. In the top panel, select the disk drives that you want to add to the virtual disk.
4. Click the down-arrow button to add the drives. To remove a drive from your selection list, click the up-arrow button.

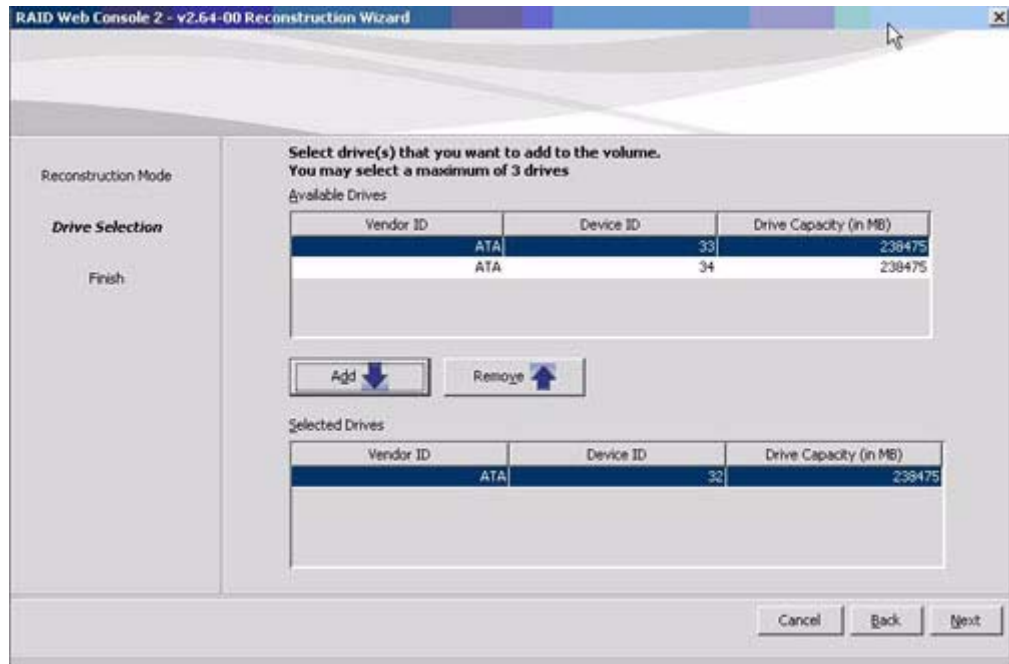


Figure 61. Drive Selected for Virtual Disk

5. When you are finished adding disk drives, click **Next**. The next screen displays, which allows you to select and change the RAID level as shown in [Figure 62](#).

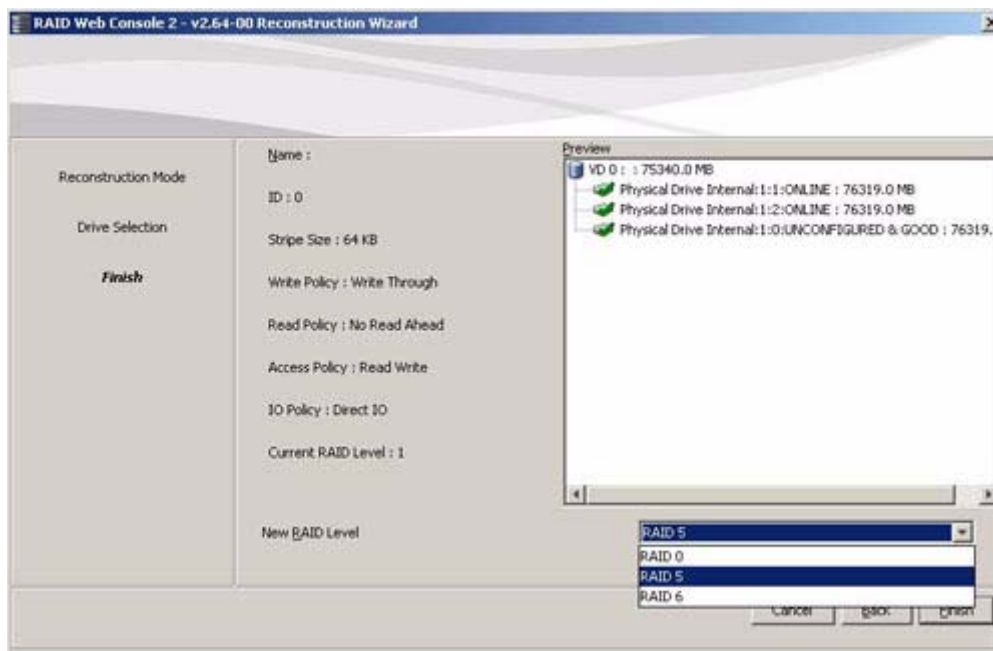


Figure 62. Changing RAID Level

6. If needed, select a new RAID level from the drop-down menu at the lower-right part of the window. Review the information for the newly expanded virtual disk.
7. When everything is acceptable, click **Finish** to accept the new configuration.

A Reconstruct operation begins on the virtual disk. You can monitor the progress of the reconstruction in the Group Show Progress window. Select **Group Operations | Show Progress**.

Removing a Drive from a Virtual Disk

You can use Intel® RAID Web Console 2 to remove a physical disk drive from a virtual disk. In order to do this, you must be logged on to the system in All Access mode.

Warning: Be sure to back up the data on the virtual disk before you change its capacity.

1. Select a controller icon and start the Reconstruction Wizard, as described in the previous section.
2. Click **Remove Drive**.
3. In the top panel, select the disk drives you want to remove from the virtual disk.
4. Click the down-arrow button to remove the drives.

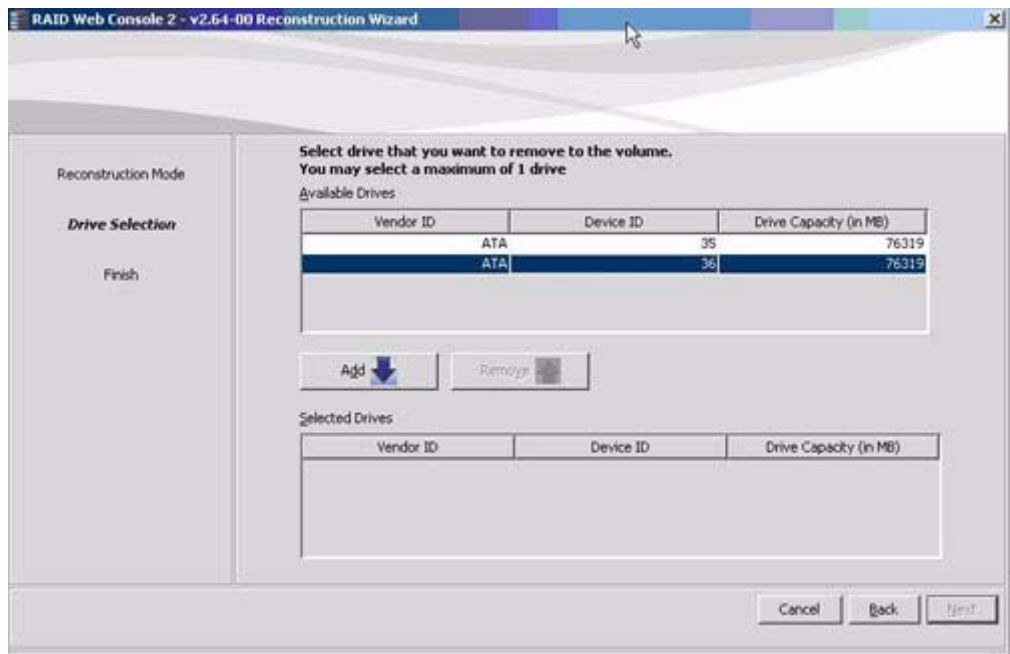


Figure 63. Select Drives to Remove from a Virtual Drive

- When you are finished removing disk drives, click **Next**.

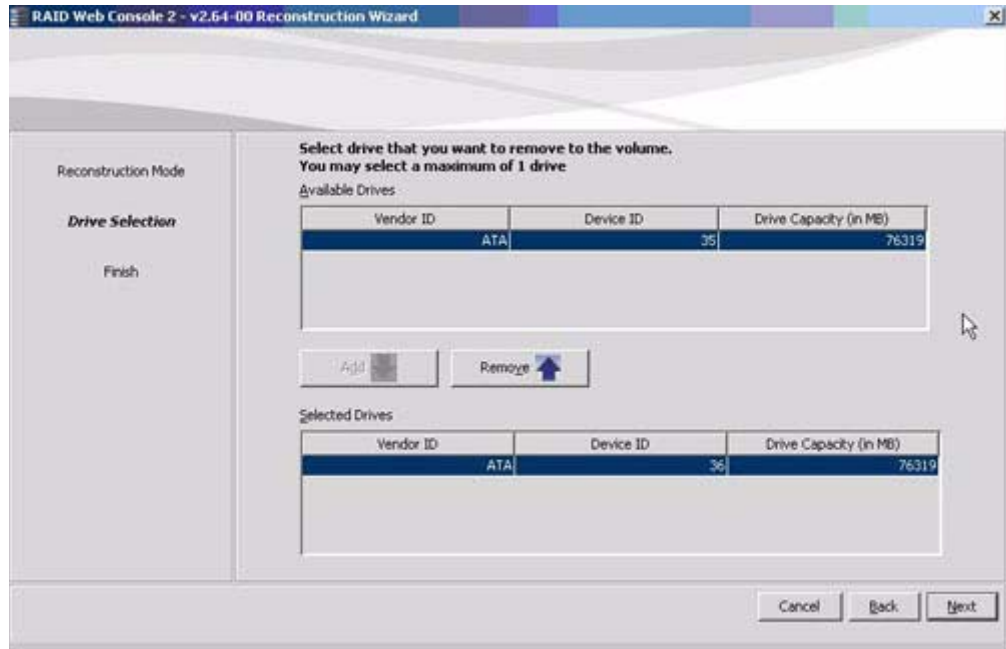


Figure 64. Drive Selected for Removal from a Virtual Drive

- When the next screen is displayed, you can select a new RAID level from the drop-down menu, if needed. Review the displayed information for the virtual disk.

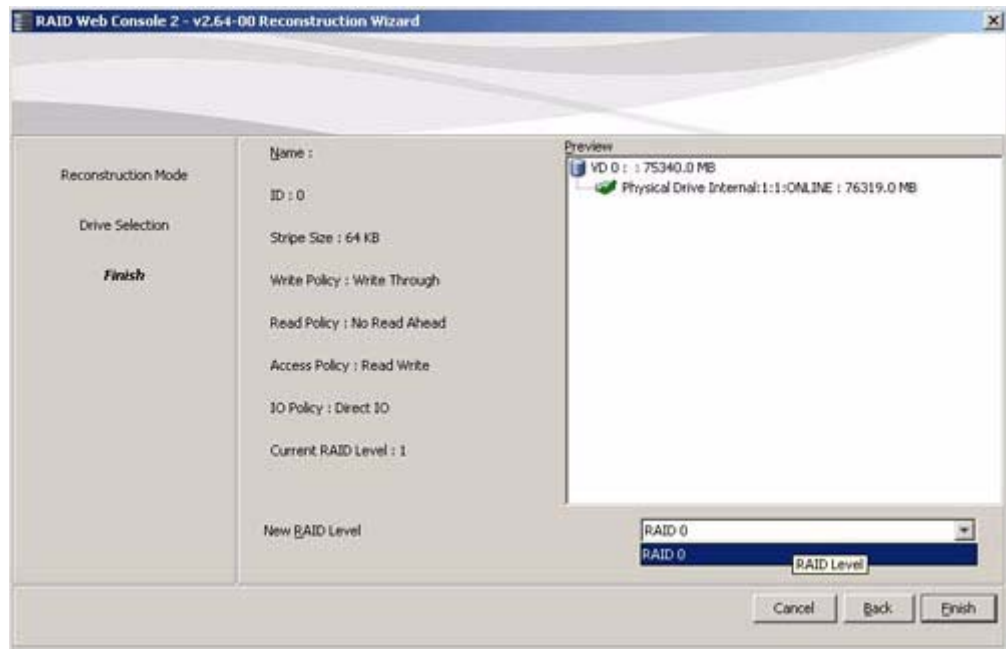


Figure 65. Select RAID Level

- When all updates are completed, click **Finish** to accept the new configuration.

A Reconstruct operation begins on the virtual disk. You can monitor the progress of the reconstruction in the Group Show Progress window. To do so, select **Group Operations | Show Progress**.

Changing the RAID Level of a Virtual Disk

Warning: Before you change the RAID level, back up the data on the virtual disk.

You can use Intel® RAID Web Console 2 to change the RAID level of an existing virtual disk. To do this, follow these steps:

1. Select a virtual disk icon in the left panel and then select **Operations | Advanced Operations | Configuration | Reconstruction Wizard**.
2. When the Reconstruction Wizard window is displayed, click **Change RAID Level**.
3. When the next screen displays, select the desired RAID level from the drop-down menu in the lower right corner.

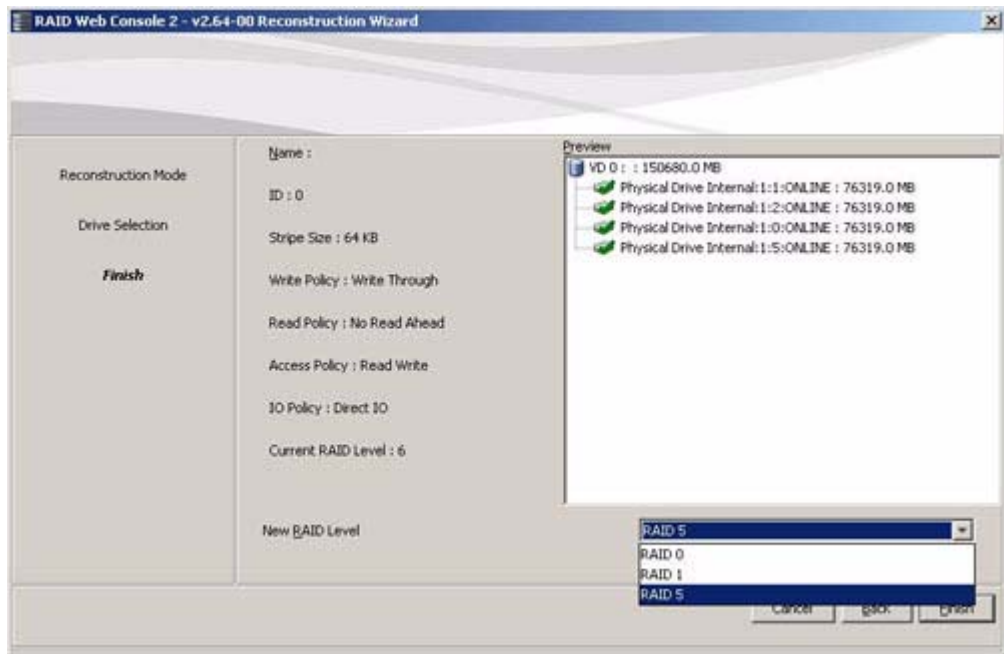


Figure 66. Selecting RAID Level

4. Click **Finish** to accept the new RAID level.

A Reconstruct operation begins on the virtual disk. You can monitor the progress of the reconstruction in the Group Show Progress window. To do so, select **Group Operations | Show Progress**.

Changing Virtual Disk Properties

You can change a virtual disk's Read Policy, Write Policy, and other properties after the disk is created. To do this, follow these steps:

1. Select a virtual disk icon in the left panel and then select **Operations | Set Virtual Disk Properties**. Alternatively, click the **Properties** panel and then click **Set Virtual Disk Properties**. Figure 67 shows the Set Virtual Disk Properties screen.

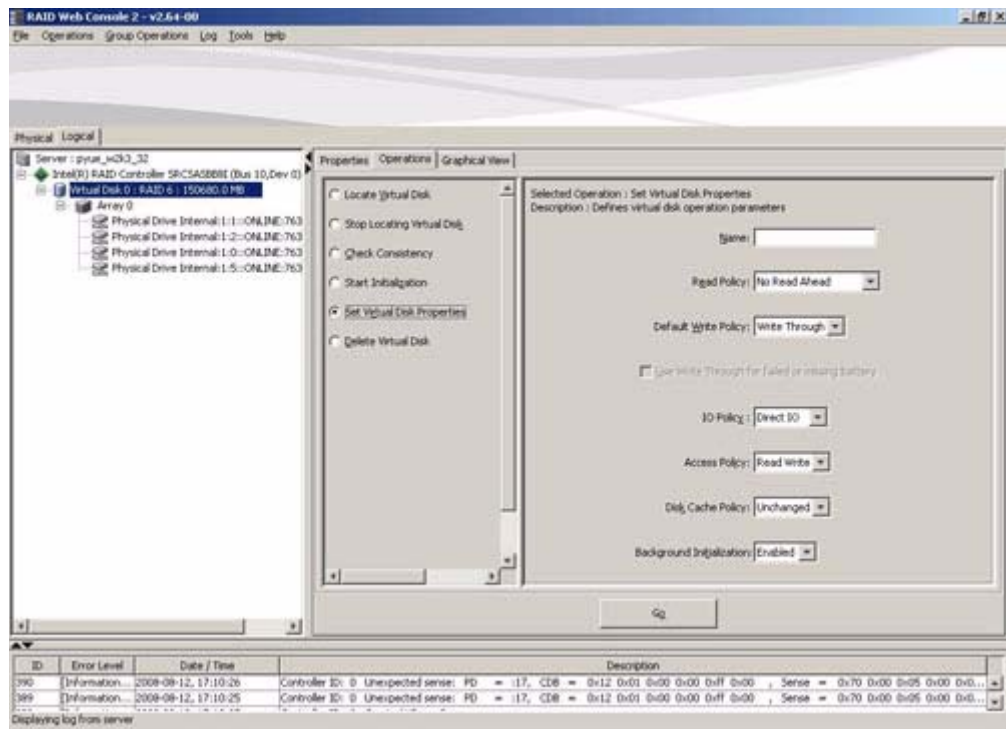


Figure 67. Set Virtual Disk Properties

2. As needed, change the properties in the right panel.
3. Click **Go** to accept the changes.

Deleting a Virtual Disk

Warning: Before you delete a virtual disk, back up the data on it.

You can delete one or more virtual disks. Before you can do this, you must be logged on to the system in All Access mode. To delete a virtual disk, follow these steps:

1. Back up all user data on the virtual disk you intend to delete.
2. In the left panel, select the **Virtual** tab and click the icon of the virtual disk you want to delete.
3. In the right panel, select the **Operations** tab and select **Delete Virtual Disk**. Click **Go**.

- When the warning message displays, click **Yes** to confirm that you want to delete the virtual disk.

Managing Configurations

You can use Intel® RAID Web Console 2 to manage the configurations that you create. For example, you can save a storage configuration that you have defined on a controller and load this configuration from the disk to another controller, after first clearing the existing configuration from that controller. In order to do this, you must be logged on to the system in All Access mode. This section explains how to do these tasks.

Saving a Configuration to Disk

You can save an existing controller configuration to a file so you can apply it to another controller. To save a configuration file, follow these steps:

- Select a controller icon in the left panel of the Intel® RAID Web Console 2 window.
- Select **Operations | Advanced Operations | Configuration | Save Configuration** as shown below.

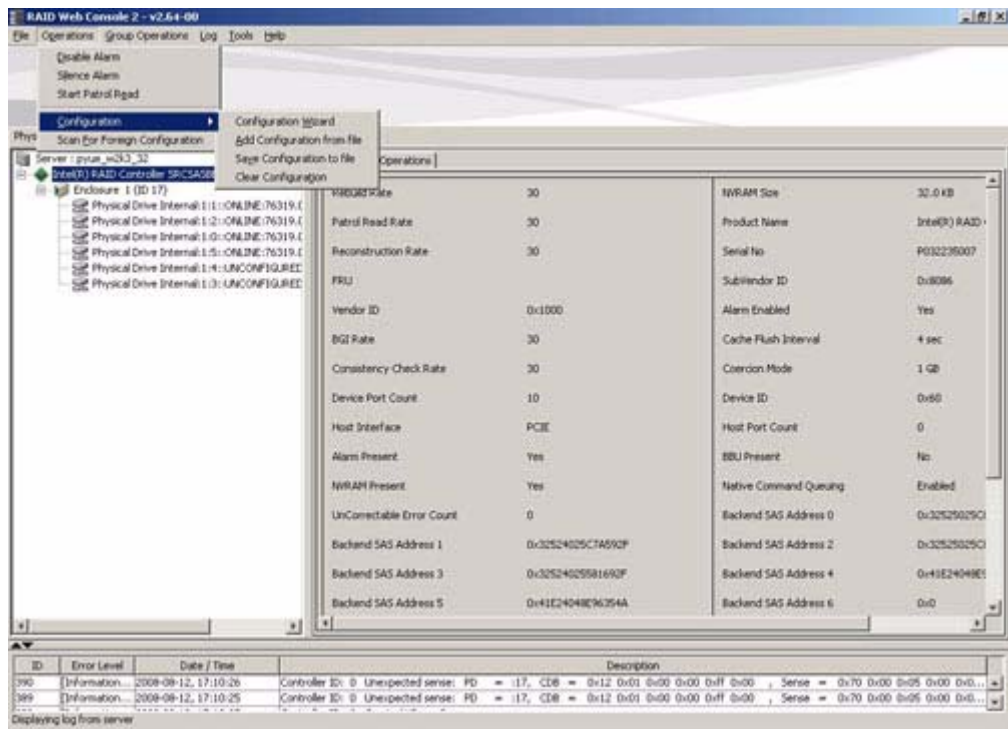


Figure 68. Save Configuration to File

The Save dialog box displays as shown in [Figure 69](#).

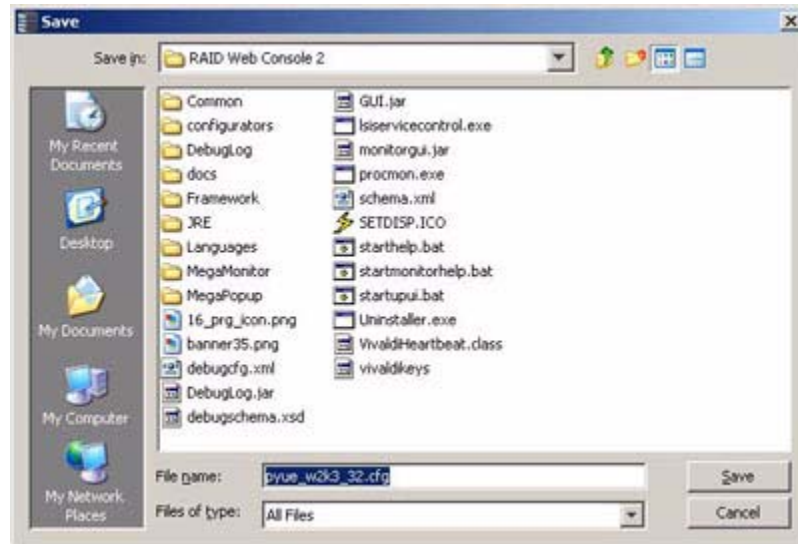


Figure 69. Save Configuration Dialog Box

3. In the dialog box, type a name for the configuration file.
4. Click **Save** to save the configuration file, or accept the default name:
hostname.cfg

Clearing a Configuration from a Controller

If you want to manually create a new storage configuration on a controller, or load a configuration file on a controller, you must first clear the existing configuration.

Warning: *Before you clear a configuration, make sure to save any data you want to keep! Clearing a configuration deletes all data from the disks in the existing configuration.*

To clear a configuration from a controller, follow these steps:

1. Select a controller icon in the left panel of the Intel® RAID Web Console 2 window.
2. Select **Operations | Advanced Operations | Configuration | Clear Configuration**.

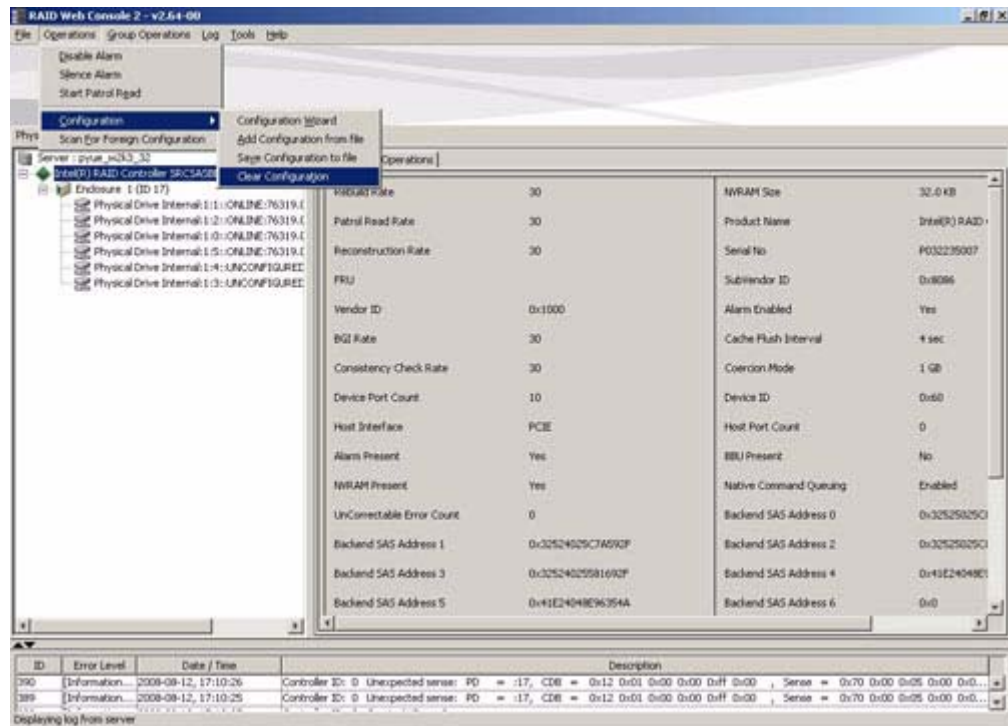


Figure 70. Clear Configuration

3. A Warning message displays. Click **Yes** to clear the configuration or **No** to cancel the operation.

Adding a Configuration from a File

When you replace a controller or when you want to duplicate an existing storage configuration on a new controller, you can add a saved configuration to the controller.

Warning: When you add a saved configuration to a replacement controller, make sure that the number and size of the physical disks connected to the controller is exactly the same as it was when the configuration was saved.

To add a saved configuration, follow these steps:

1. Select a controller icon in the left panel of the Intel® RAID Web Console 2 window.
2. Select **Operations | Advanced Operations | Configuration | Add Configuration from File**.

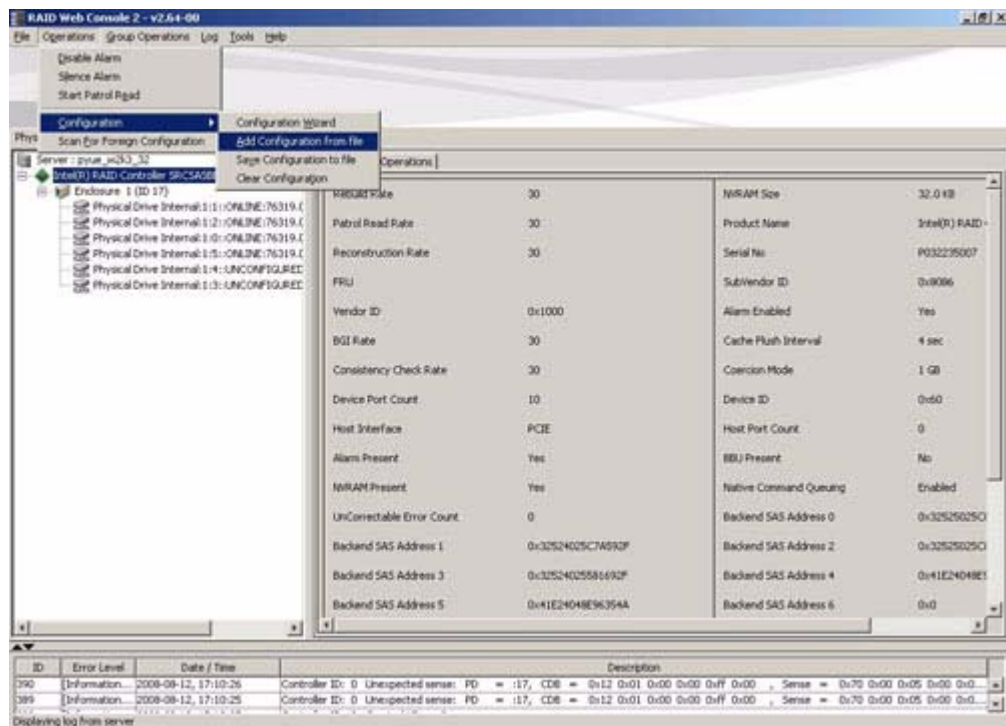


Figure 71. Add Saved Configuration

3. A Warning message displays. Click **Yes**. When the Open dialog box is displayed, select the configuration file and click **Open**.
4. View the configuration detail, then select **Apply**.
5. When prompted, confirm the new configuration.

Monitoring System Events and Devices

The Intel® RAID Web Console 2 enables you to monitor the status of disk drives, virtual disks, enclosures, and other devices. You can monitor the following:

- Monitoring System Events
- Monitoring Controllers
- Monitoring Disk Drives and Other Physical Devices
- Monitoring Virtual Disks
- Monitoring Enclosures
- Monitoring Battery Backup Units
- Monitoring Rebuilds and Other Processes

Monitoring System Events

Intel® RAID Web Console 2 monitors the activity and performance of all controllers in the system and the devices attached to them. When an “event” occurs—such as the completion of a consistency check or the removal of a physical drive—an event message displays in the log at the bottom of the Intel® RAID Web Console 2 screen, as shown in Figure 72. These event messages also display in the Microsoft Windows* application log (the Event Viewer).

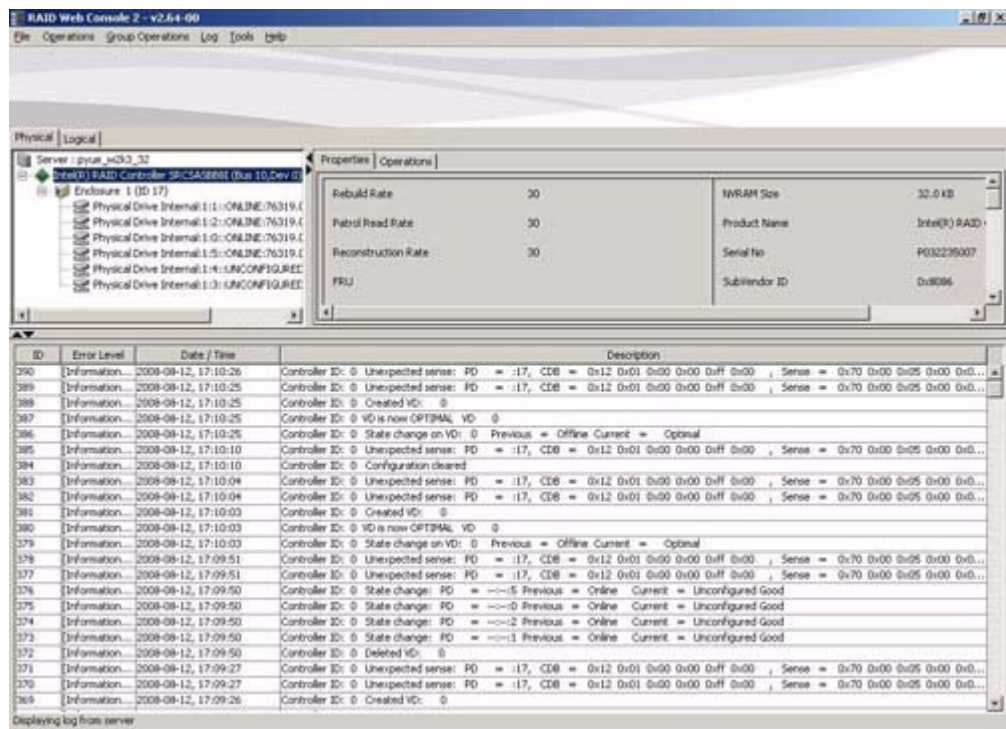


Figure 72. Event Information Window


Each event in the log includes an error level—Information, Warning, Critical, Fatal, or Dead—a date/time stamp, and a brief description. (For a list of all events, see [Appendix B: “Events and Messages.”](#)) The status bar at the bottom of the screen indicates whether the log is a system log (as in [Figure 72](#)) or a log from a locally stored file. (This file could have been generated by a previous “Save Log” action.)

When a system log displays, the Log menu has three options:

- **Save Log:** Saves the current log to a .log file.
- **Clear Log:** Clears the current log information, if you have full access (versus View-only access).
- **Load Log:** Enables you to load a local .log file.

When a local log is displayed, the status bar lists the name of the local log file, and the Log menu has an additional option, **Read Server Log**, which enables you to retrieve the system log. When a local log is displayed, the **Clear Log** option is disabled.

Monitoring Controllers

When Intel® RAID Web Console 2 is running, you can see the status of all controllers in the left panel. If the controller is operating normally, the controller icon looks like this: . If the controller has failed, a small red circle is displayed to the right of the icon.

To display complete controller Information, click on a controller icon in the left panel and click the **Properties** tab in the right panel. [Figure 73](#) shows the Controller Information window.

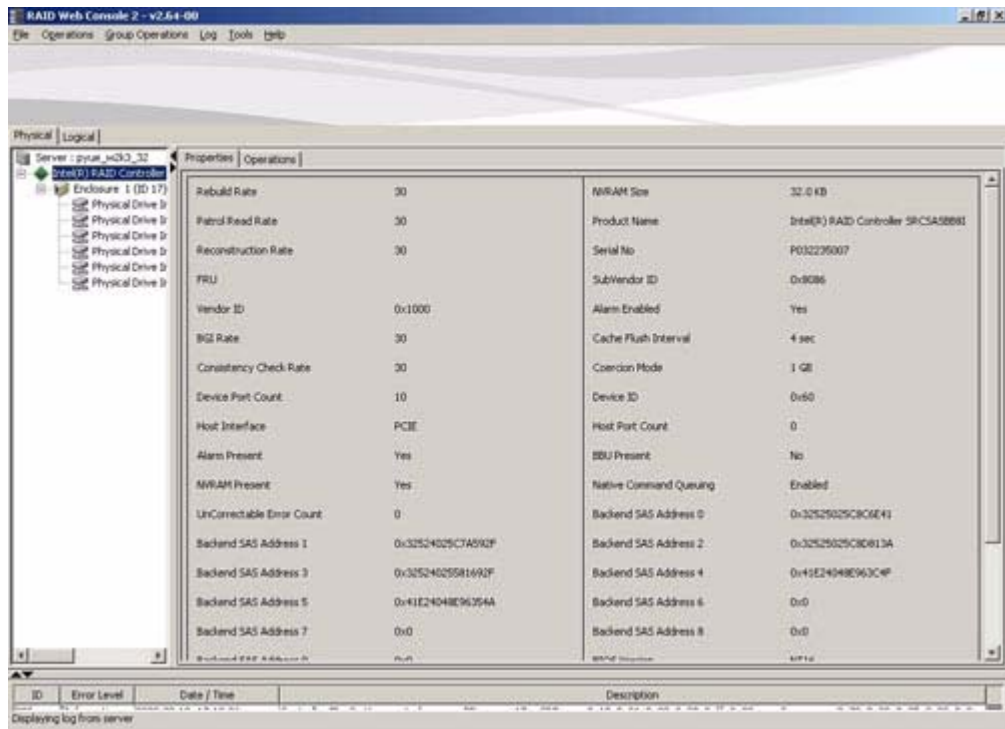



Figure 73. Controller Information

Note the following:

- The *Rebuild rate*, *Patrol read rate*, *Reconstruction rate*, *Consistency check rate*, and *BGI rate* (background initialization) are all user-selectable. For more information, see [“Setting Adjustable Task Rates,”](#) on page 100.

- The *BBU Present* field indicates whether a battery backup unit is installed.
- The *Alarm Present* and *Alarm Enabled* fields indicate whether the controller has an alarm to alert the user with an audible tone when there is an error or problem on the controller. There are options on the controller Properties tab for silencing or disabling the alarm. For more information, see “Setting Adjustable Task Rates,” on page 100.

Monitoring Disk Drives and Other Physical Devices

When the Intel® RAID Web Console 2 is running, you can see the status of all physical disk drives and other physical devices in the left panel. If the physical drive is operating normally, the controller icon looks like this: . If the physical drive has failed, a small red circle is displayed to the right of the icon.

To display complete physical drive Information, click on a physical drive icon in the left panel and click the **Properties** tab in the right panel. Figure 74 shows the Properties panel for a physical drive.

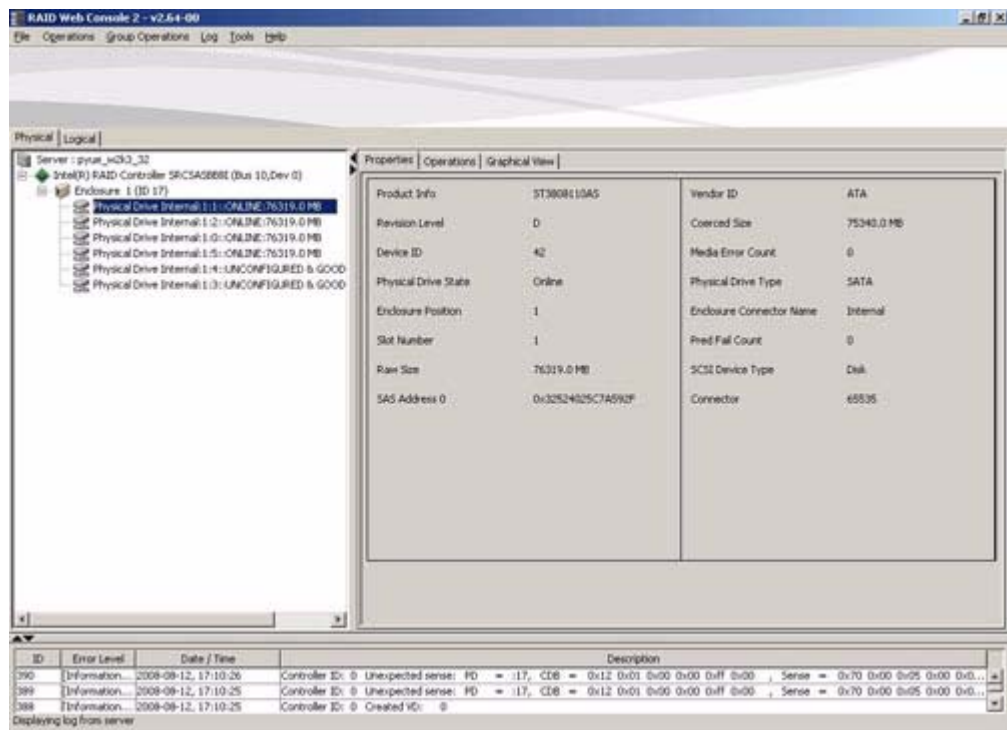


Figure 74. Physical Drive Information

There are no user-selectable properties for physical devices. Icons for other physical devices such as CD-ROM drives and DAT drives may also display in the left panel.

If the physical drives are in a disk enclosure, you can identify which physical drive is represented by a disk icon on the left. To do this, follow these steps:

1. Click the physical disk icon in the left panel.
2. Click the **Operations** tab in the right panel.
3. Select **Locate Physical Drive** and click **Go**. See [Figure 75](#).

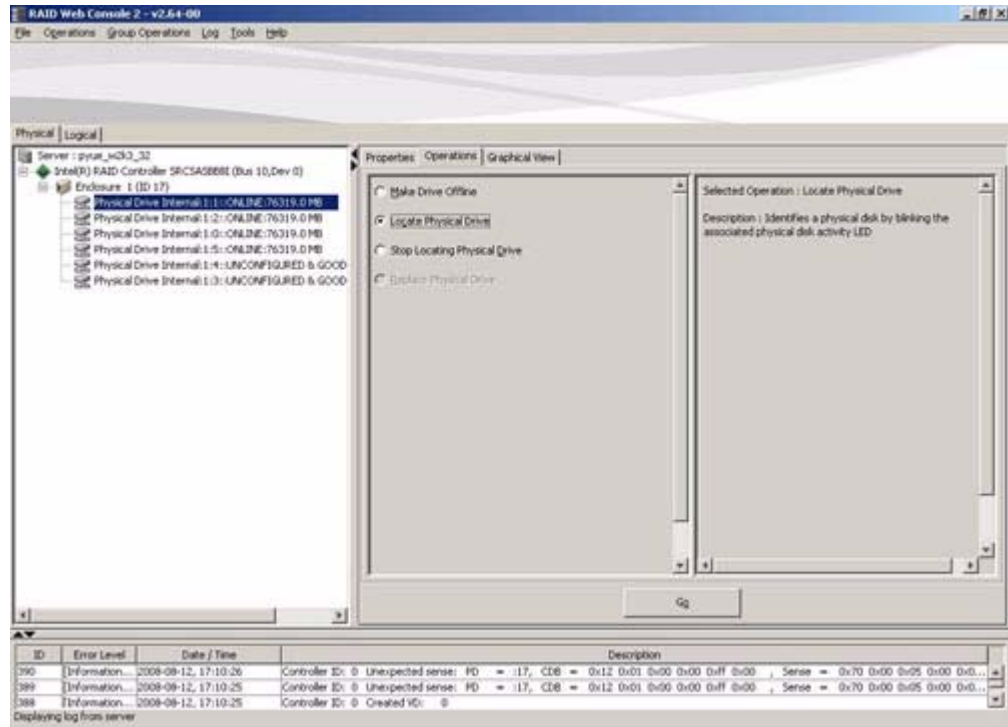


Figure 75. Locating a Physical Drive

The LED on the physical disk drive in the enclosure starts blinking to show its location.

Note: LEDs on global or dedicated hot-spare drives do not blink.

4. To stop the disk drive light from blinking, select **Stop Locating Physical Drive** and click **Go**.

Running a Patrol Read

A Patrol Read periodically verifies all sectors of physical disks that are connected to a controller, including the system reserved area in the RAID configured drives. Patrol Read works for all RAID levels and for all hotspare drives. A patrol read is initiated only when the controller is idle for a defined period and has no other background activities.

To enable and configure Patrol Read, follow these steps:

1. Click a controller icon in the left panel.
2. Select the **Operations** tab in the right panel, and select **Set Patrol Read Properties**, as shown in [Figure 76](#).

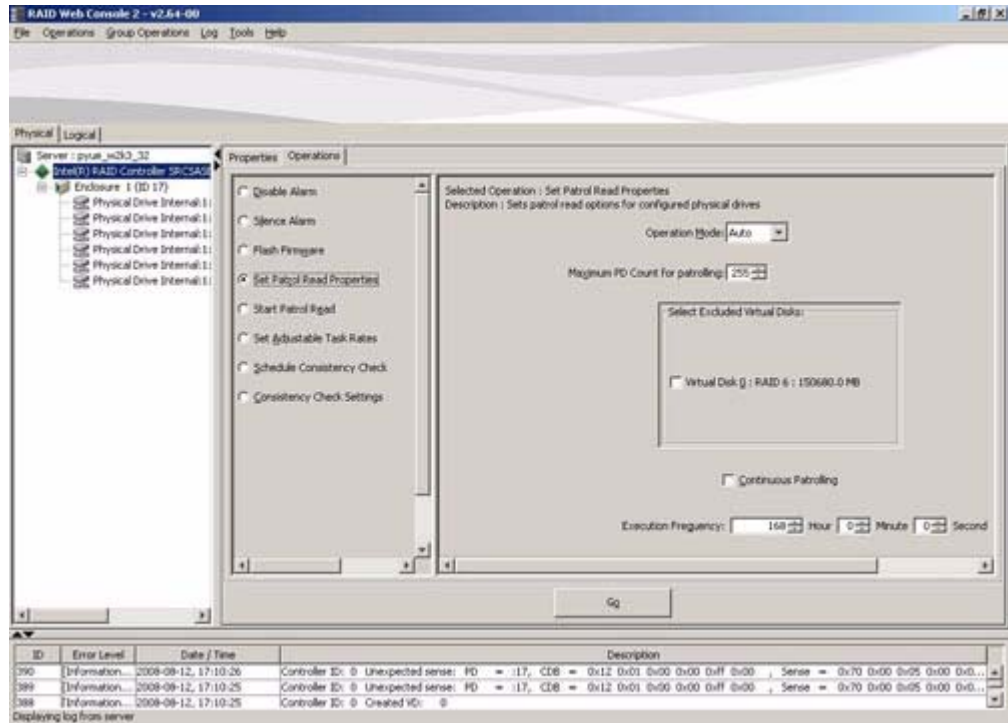




Figure 76. Patrol Read Configuration

3. Select an Operation Mode for patrol read. The options are:
 - **Auto:** Patrol Read runs automatically at the time interval you specify on this screen.
 - **Manual:** Patrol Read runs only when you manually start it by selecting **Start Patrol Read** from the controller options screen (see [Figure 76](#)).
 - **Disabled:** Patrol Read does not run at all.
4. (Optional) Specify a maximum count of physical drives to include in the patrol read. The default number is 255; if you want, you can specify a lower number.
5. (Optional) Select virtual disks on this controller to exclude from the Patrol Read. The existing virtual disks are listed in the gray box. To exclude a virtual disk, check the box next to it.
6. Enter the frequency (in seconds) at which the Patrol Read will run.

- Click **Go** to enable these Patrol Read options.

Monitoring Virtual Disks

When the Intel® RAID Web Console 2 is running, you can see the status of all virtual disks. If a virtual disk is operating normally, the icon looks like this: . If the virtual disk is running in degraded mode—for example, if a physical disk has failed—a small yellow circle is displayed to the right of the icon looks like this: .

When the Virtual tab is selected, the panel on the left shows which physical disks are used by each virtual disk. In [Figure 77](#) you can see that the virtual disk uses physical disks 1, 2, and 3. Multiple virtual disks can use the same physical disk.

To display complete virtual disk information, click the **Virtual** tab in the left panel, click on a virtual disk icon in the left panel, and click the **Properties** tab in the right panel. [Figure 77](#) shows the Properties tab for a virtual disk.

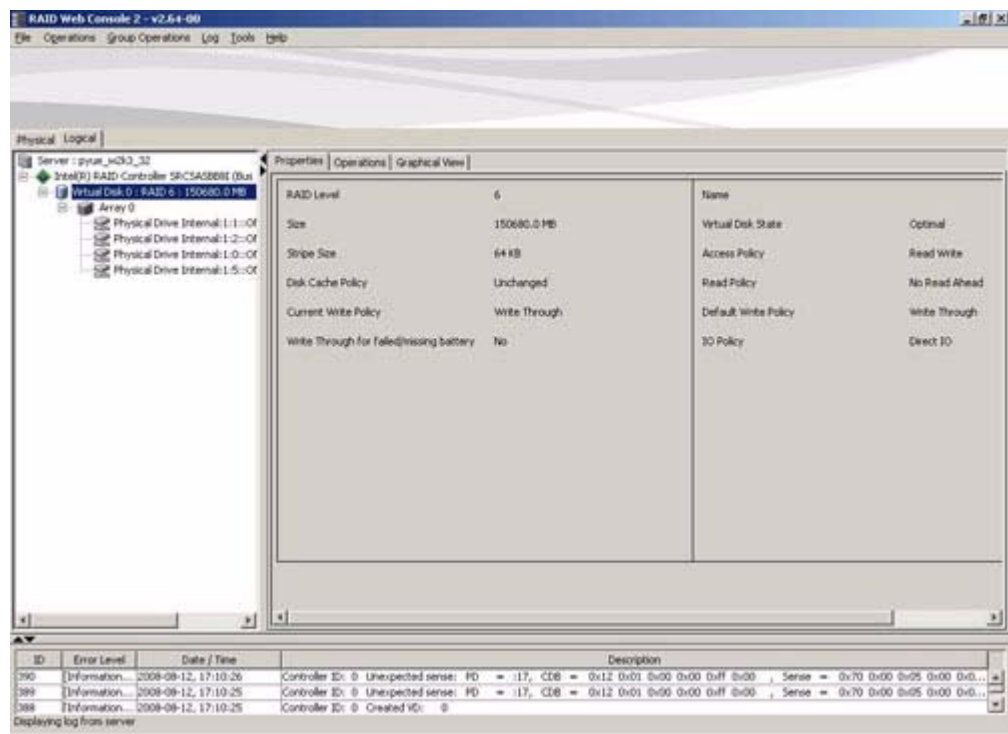


Figure 77. Virtual Disk Properties

The RAID level, stripe size, and access policy of the virtual disk are set when it is configured.

Note: You can change the Read Policy, Write Policy, and other virtual disk properties by selecting **Operations | Set Virtual Disk Properties**.

Monitoring Enclosures

When the Intel® RAID Web Console 2 is running, you can see the status of all enclosures that are operating normally. Information about the enclosure is displayed in the right panel when you select the **Properties** tab. [Figure 78](#) shows the more complete enclosure information that is displayed when you select the **Graphical View** tab.

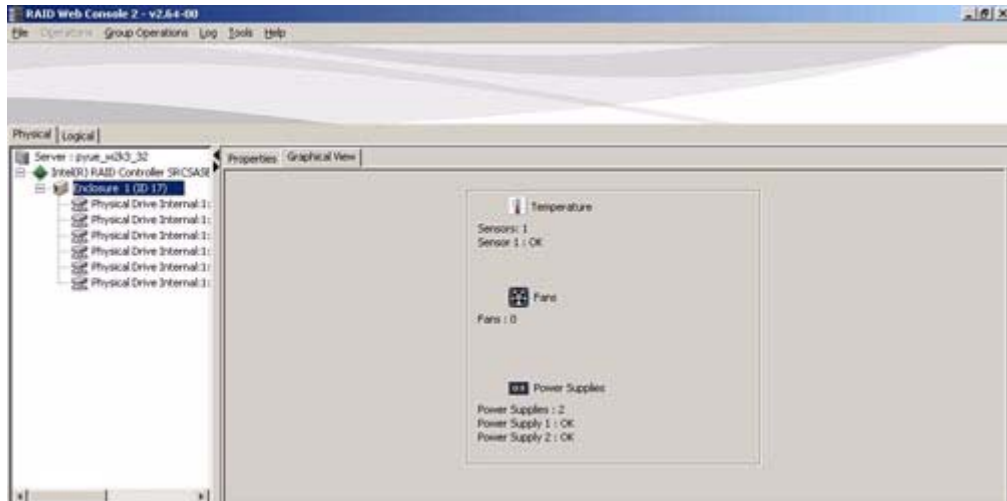



Figure 78. Enclosure Information - Graphical View

The display in the center of the screen shows how many slots of the enclosure are populated by disk drives, and the lights on the disk drives show the drive status. The information on the right shows you the status of the temperature sensors, fans, and power supplies in the enclosure.

Monitoring Battery Backup Units

When the Intel® RAID Web Console 2 is running, you can see the status of all battery backup units. When you select the Properties tab, the battery backup unit (BBU) information is displayed in the right panel. This information includes the number of times the battery has been recharged (cycle count), the remaining battery capacity and estimated run time to empty, the current battery temperature, and so on.

Figure 79 shows the BBU information that is displayed in the right panel when you select the Properties tab.

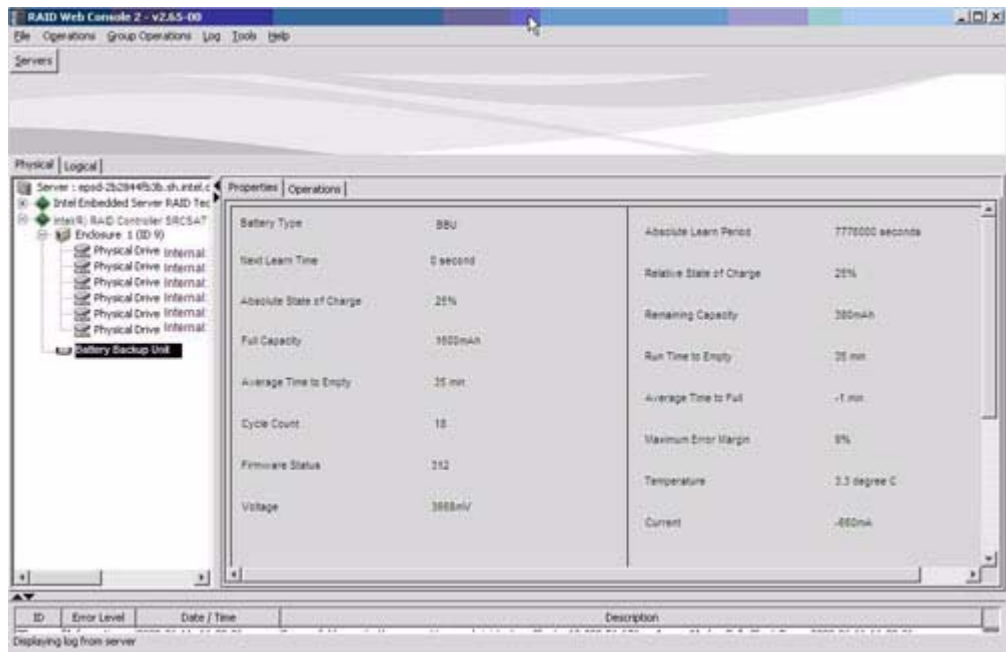

The screenshot displays the RAID Web Console 2 interface. The main window is titled "RAID Web Console 2 - v2.65-00". The left sidebar shows a tree view of the server components, including "Server: nps0-2S2949535.sh.intel.c", "Intel Embedded Server RAID Test", "Intel(R) RAID Controller S8CSA7", and "Enclosure 1 (ID 9)". Under "Enclosure 1", there are several "Physical Drive Internal" entries and one "Battery Backup Unit" entry, which is currently selected. The main area is divided into "Physical" and "Logical" tabs, with "Logical" selected. The "Properties" tab is active, showing a list of BBU parameters and their values. The "Operations" tab is also visible but not selected. At the bottom, there is a log display area with columns for "ID", "Error Level", "Date / Time", and "Description", and the text "Displaying log from server".

Parameter	Value
Battery Type	BBU
Absolute Learn Period	777000 seconds
Next Learn Time	0 second
Relative State of Charge	26%
Absolute State of Charge	26%
Remaining Capacity	385mAh
Full Capacity	3600mAh
Run Time to Empty	35 min
Average Time to Empty	35 min
Average Time to Full	-1 min
Cycle Count	18
Maximum Error Margin	8%
Firmware Status	112
Temperature	3.3 degree C
Voltage	3688mV
Current	-650mA

Figure 79. Battery Backup Unit Information

Monitoring Rebuilds and Other Processes

The Intel® RAID Web Console 2 allows you to monitor the progress of rebuilds and other lengthy processes in the Group Show Progress window, shown in Figure 80. You open this window by selecting **Group Operations | Show Progress**.

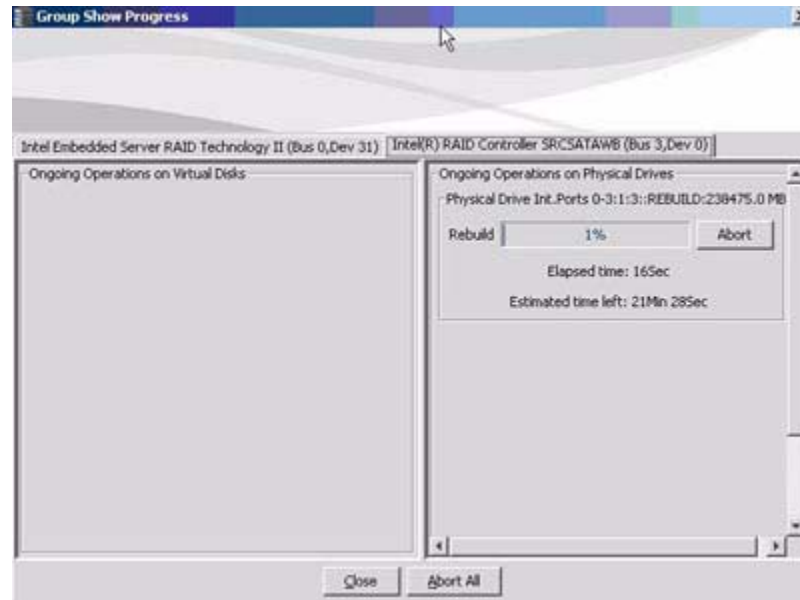


Figure 80. Group Show Progress Window

Operations on virtual disks appear in the left panel of the window, and operations on physical drives appear in the right panel. The types of operations that appear in this window are as follows:

- Initialization of a virtual disk (see “[Initializing a Virtual Disk,](#)” on page 125).
- Rebuild (see “[Rebuilding a Drive,](#)” on page 127).
- Reconstruction (see “[Adding a Drive to a Virtual Disk,](#)” on page 102).
- Consistency check (see “[Running a Consistency Check,](#)” on page 126).

Note: A Reconstruction process cannot be aborted. To abort any other ongoing process, click **Abort** next to the status indicator. Click **Abort All** to abort all ongoing processes. Click **Close** to close the window.

Maintaining and Managing Storage Configurations

This section explains how to use Intel® RAID Web Console 2 to maintain and manage storage configurations. You must log on to the system in Full Access mode to complete these maintenance and management tasks. This following maintenance and management functions can be done:

- Initializing a Virtual Disk
- Running a Consistency Check
- Rebuilding a Drive
- Removing a Drive
- Flashing the Firmware

Initializing a Virtual Disk

When you create a new virtual disk with the Configuration Wizard, you can choose to initialize the disk initialized immediately. To initialize a virtual disk after the configuration process, follow these steps:

1. Select the **Virtual** tab in the left panel, and click the icon of the virtual disk to initialize.
2. Select **Group Operations | Initialize**.

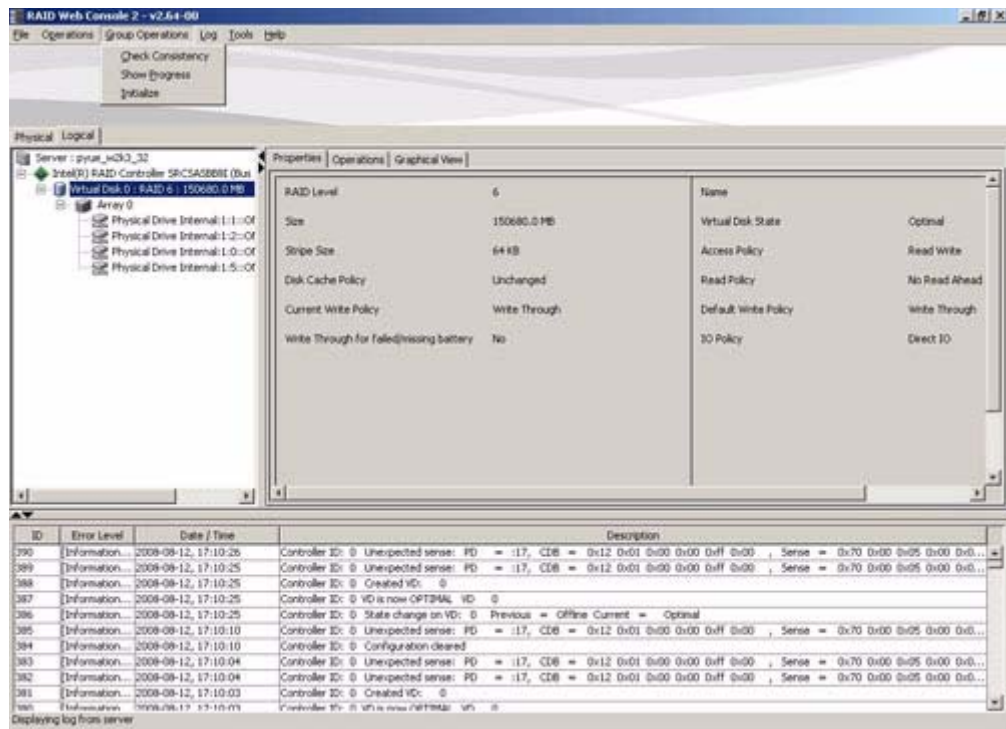


Figure 81. Selecting Initialize

3. The Group Initialize dialog box is displayed. Select the virtual disk(s) to initialize. If you want to use this option, select **Fast Initialization**.

Fast Initialization quickly formats the virtual disk by writing zeros to the first few sectors of the physical disks in the virtual disk. Depending on the number and size of the physical disks in the virtual disk, regular initialization takes longer.

4. Click **Start** to begin the initialization.

If needed, you can monitor the progress of the initialization. See [“Monitoring Rebuilds and Other Processes,”](#) on page 124 for more information.

Running a Consistency Check

You should periodically run a consistency check on fault-tolerant virtual disks. A consistency check scans the virtual disk to determine whether consistency data is corrupted and needs to be restored. It is especially important to do this if you suspect that the virtual disk consistency data is corrupted.

To run a consistency check, follow these steps:

1. Select **Group Operations | Check Consistency**. The Group Consistency Check window is displayed, as shown in [Figure 82](#).

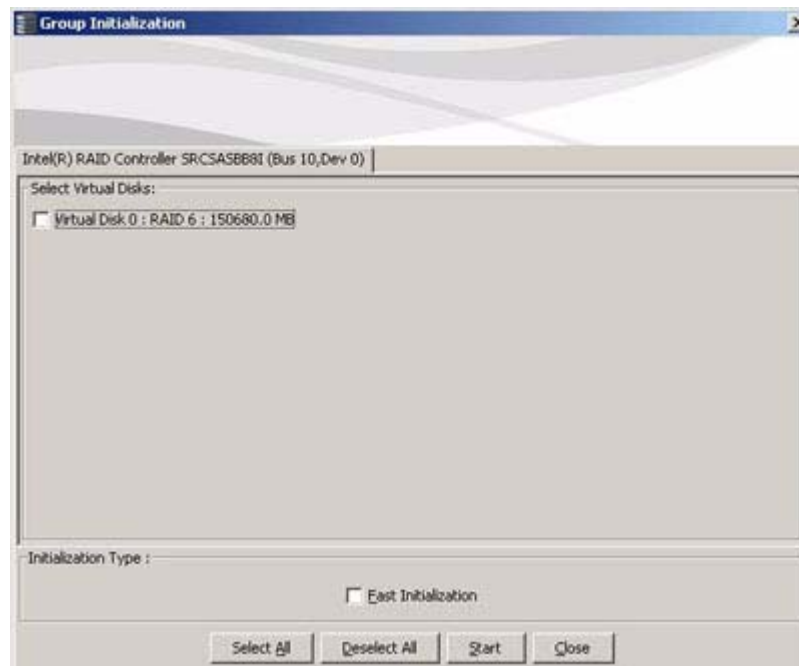


Figure 82. Group Consistency Check Window

2. Select the virtual disks you want to check, or click **Select All** to select all disks.
3. Click **Start** to begin. You can monitor the progress of the consistency check. See [“Monitoring Rebuilds and Other Processes,”](#) on page 124 for more information.

Note: You can also run a consistency check by selecting the virtual disk icon in the left panel and selecting the option on the Operation tab in the right panel.

Scanning for New Drives

The Intel® RAID Web Console 2 normally detects newly installed disk drives and other storage devices and displays icons for them on the main screen. If the Intel® RAID Web Console 2 does not detect a new drive, you can use the **Scan for Foreign Configuration** option to find it. To do this, follow these steps:

1. Select a controller icon in the left panel.
2. Select **Operations | Scan for Foreign Configuration**.

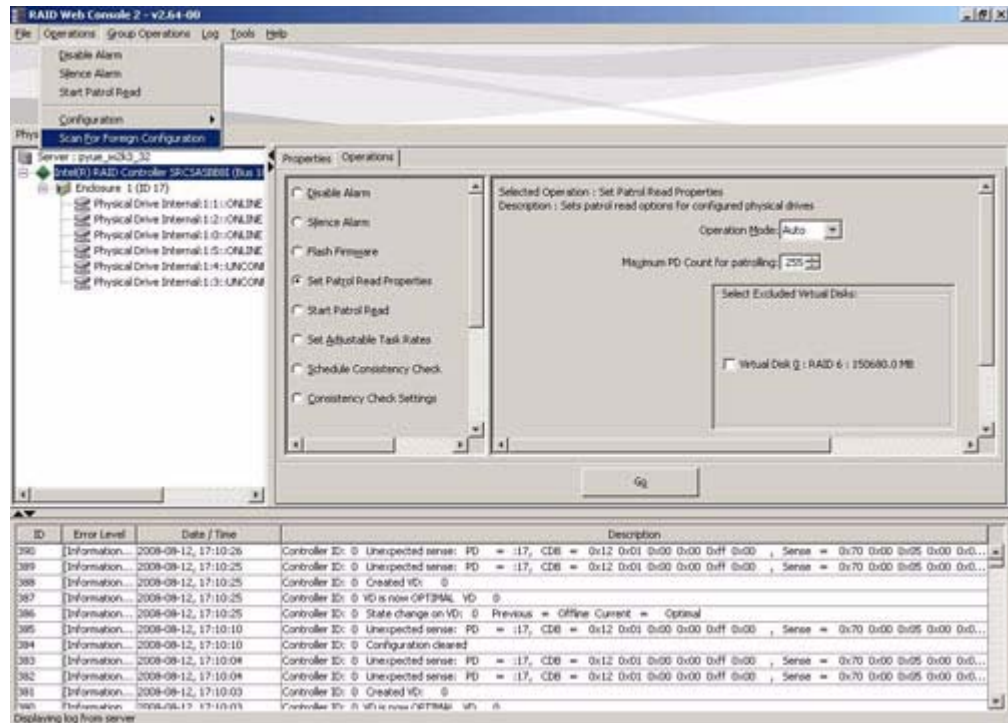


Figure 83. Scan for Foreign Configuration

If the Intel® RAID Web Console 2 detects any new disk drives, it displays a list of them on the screen.

Rebuilding a Drive

If a single drive in a fault tolerant system fails, the system is protected from data loss by the parity data (in RAID 5, RAID 50, or RAID 60) or by data redundancy (RAID 1, RAID 10). You must replace the failed drive and rebuild the drive's data on a new drive to restore the system to fault tolerance. (Or, if the drive is still operational, you can rebuild the data on the failed drive.) If dedicated or global hot-spare disks are available, the failed drive is rebuilt automatically without any user intervention.

If a drive has failed, a red circle is displayed to the right of the disk drive icon: 🟡🔴 . A small yellow circle is displayed to the right of the icon of the virtual disk that uses this physical disk: 🟡🟡 . This indicates that the virtual disk is in a degraded state, but the data is still intact.

If you need to rebuild a physical drive, follow these steps:

1. Right click the icon of the failed drive and select **Rebuild**.
2. When the warning message displays, click **Yes**. If the drive is still good, a rebuild starts.

You can monitor the progress of the rebuild in the Group Show Progress window by selecting **Group Operations | Show Progress**. If the drive cannot be rebuilt, an error message is displayed, and you must replace the drive before a rebuild can occur. Continue with the next step.

3. Click the icon of the failed drive in the left panel and select the **Operations** tab in the right panel.
4. Select **Prepare for Removal**.
5. Click **Go**.

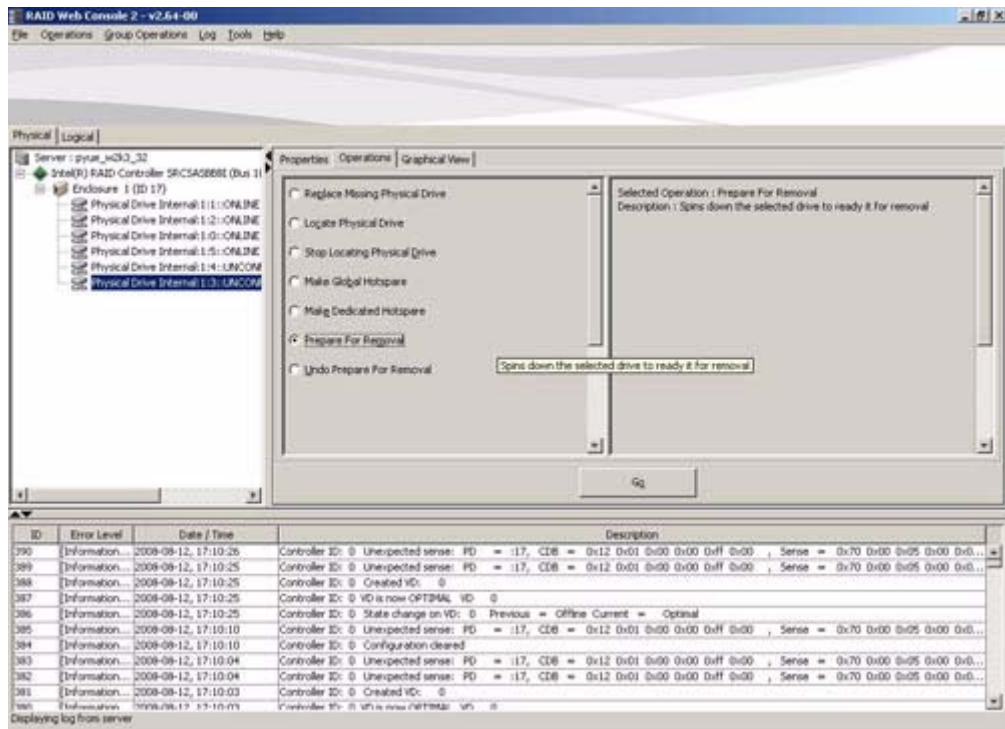


Figure 84. Preparing Drive for Removal

6. Physically remove the failed drive and replace it with a new drive of equal or greater capacity.

When the new drive spins up, the drive icon changes to green, and the rebuild begins automatically. You can monitor the progress of the rebuild in the Group Show Progress window by selecting **Group Operations | Show Progress**.

Note: If you want to force a disk drive into Fail status to trigger a rebuild, right-click the drive icon and select **Make Drive Offline**.

Removing a Drive

You may sometimes need to remove a non-failed drive that is connected to the controller. For example, you may need to replace the drive with a larger drive. Follow these steps to remove a drive safely:

1. Click the icon of the drive in the left panel and select the **Operations** tab in the right panel.
2. Select **Prepare for Removal** and click **Go**.
3. If you change your mind, select **Undo Prepare for Removal** and click **Go**. Otherwise, wait until the drive spins down and then remove it.

Warning: While the system is powered off, never replace a drive that has not failed (and is not marked by the controller as failed). A drive must always be failed before it is replaced in an array.

Flashing the Firmware

The Intel® RAID Web Console 2 enables you to easily upgrade the controller firmware. To flash the controller firmware, follow these steps:

1. In the left panel, click on the icon of the controller you need to upgrade.
2. In the right panel, click the **Operations** tab and select **Flash Firmware**.
3. Click **Go**.

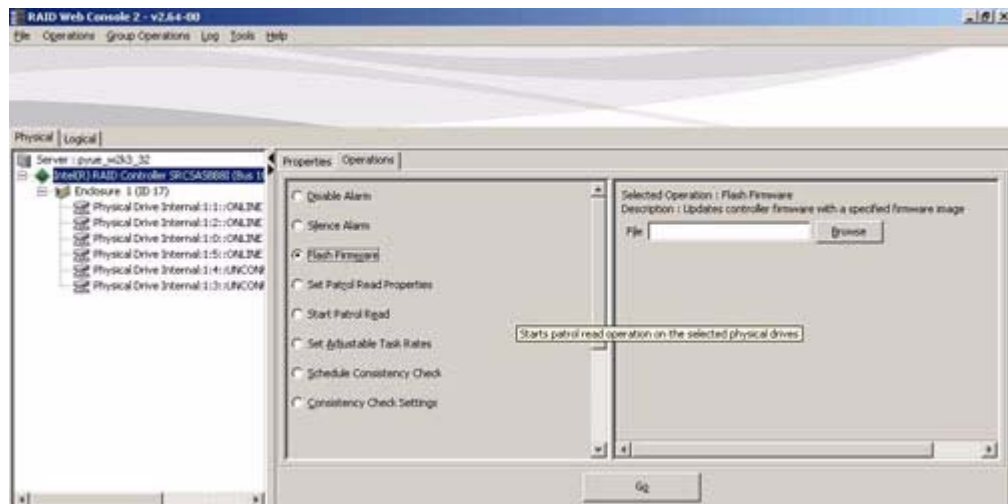


Figure 85. Flashing the Firmware

4. Browse for the .rom flash update file and click **OK**. The Intel® RAID Web Console 2 displays the version of the existing firmware and the version of the new firmware file.
5. When you are prompted to ask if you want to upgrade the firmware, click **Yes**. The controller is updated with the new firmware code contained in the .ROM file.

Appendix A: Configuring RAID 0, 1, 5, or 6 using Custom Configuration

1. Start the Intel[®] RAID Web Console 2 by selecting **Start | Programs | RAID Web Console 2**.
2. Double-click the icon on the system you want to access. The Server Login Window displays.
3. Select a full access mode from the drop-down menu.
4. Enter your user name and password and click **Login**.
5. Select a controller and select **Operations | Advanced Operations | Configuration | Configuration Wizard**.

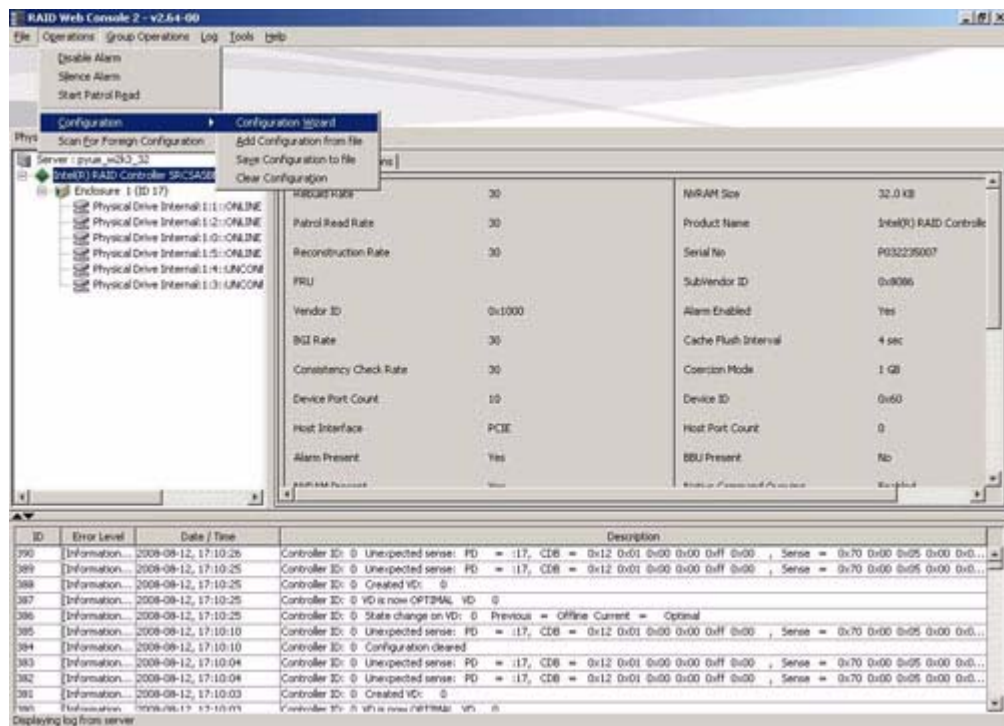


Figure 86. Starting Configuration Wizard

6. Select **Manual Configuration**.

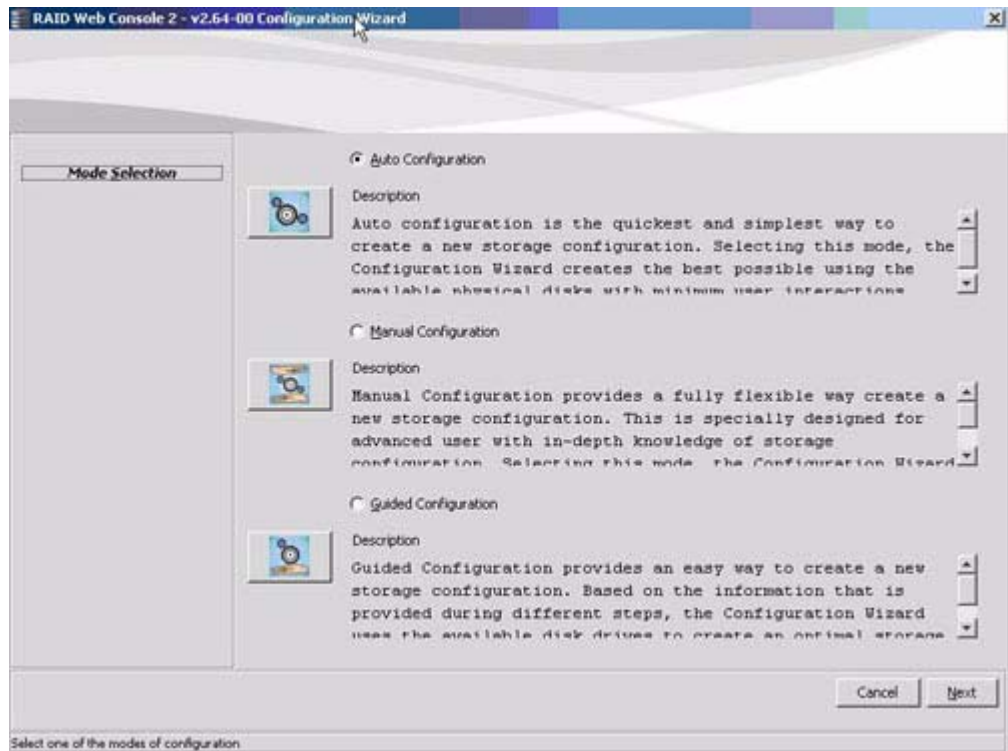


Figure 87. Selecting Manual Configuration

7. Select the drives:
 - RAID 0 or RAID 1: Select two drives by highlighting each drive individually and then clicking **Add** (right arrow button).
 - RAID 5: Select three drives by highlighting each drive individually and then clicking **Add** (right arrow button).
 - RAID 6: Select three or four drives by highlighting each drive individually and then clicking **Add** (right arrow button).

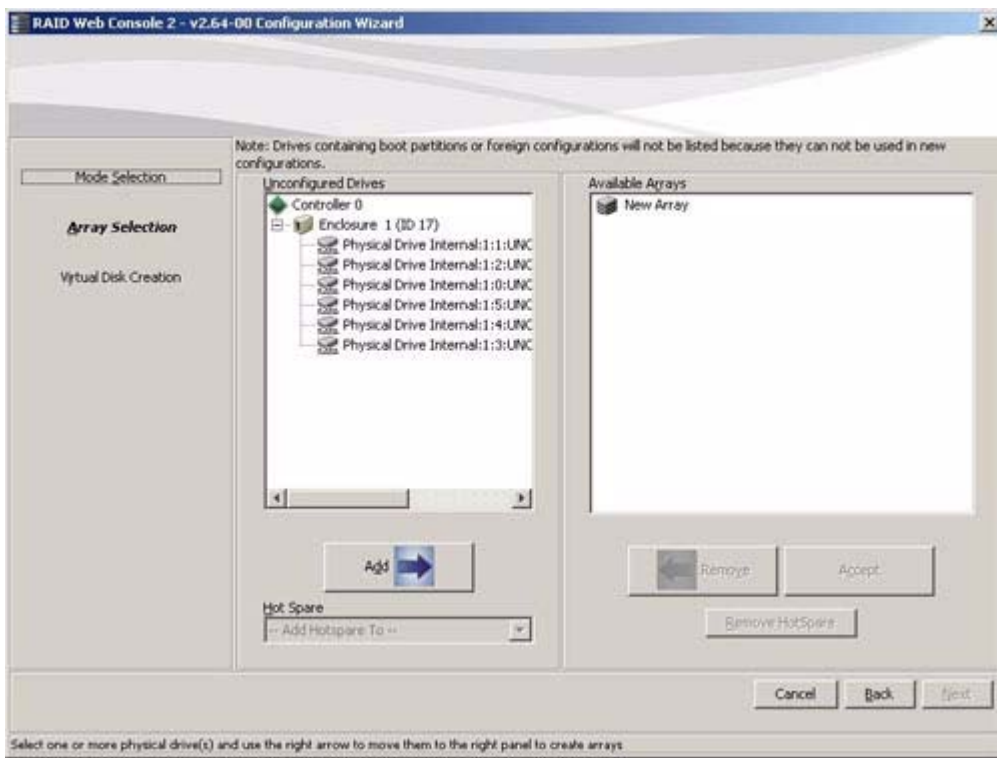


Figure 88. Selecting Drives for RAID 0

The selected drives are added to the right pane as shown:

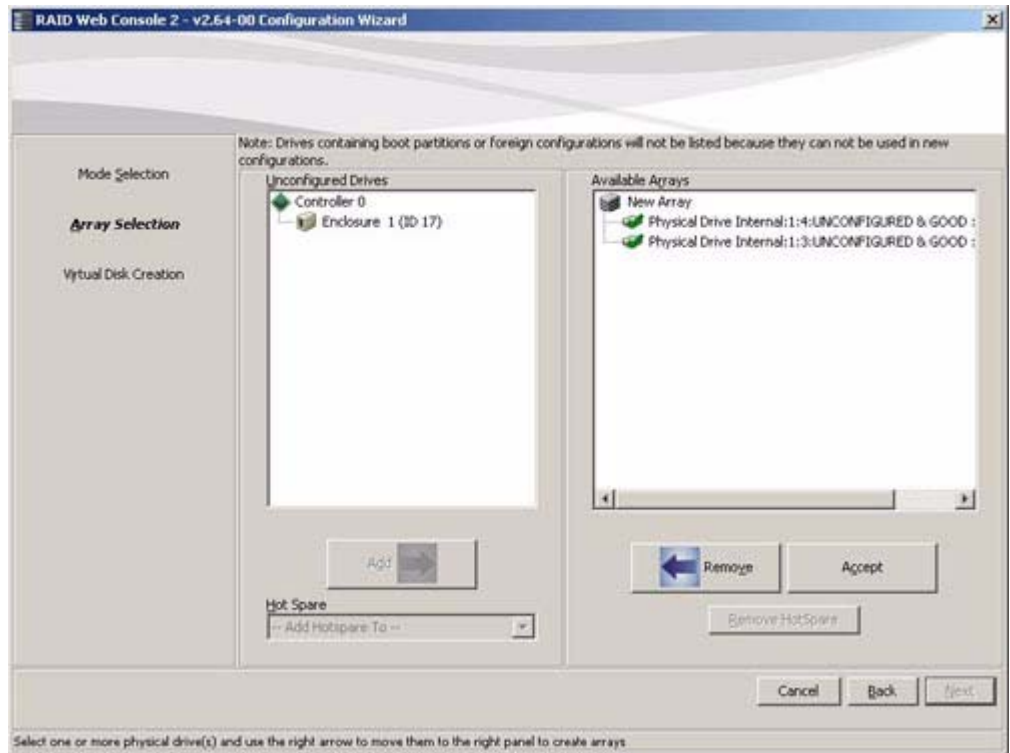


Figure 89. Drives Selected for RAID 0

8. Click **Accept** to accept the array or disk group.
9. Click **Next** to define the virtual disk created from the array or disk group. The scrolling menu in the upper middle panel shows the arrays or disk groups that have available space.
10. Select the newly created array "New Array 0" as shown by the example:

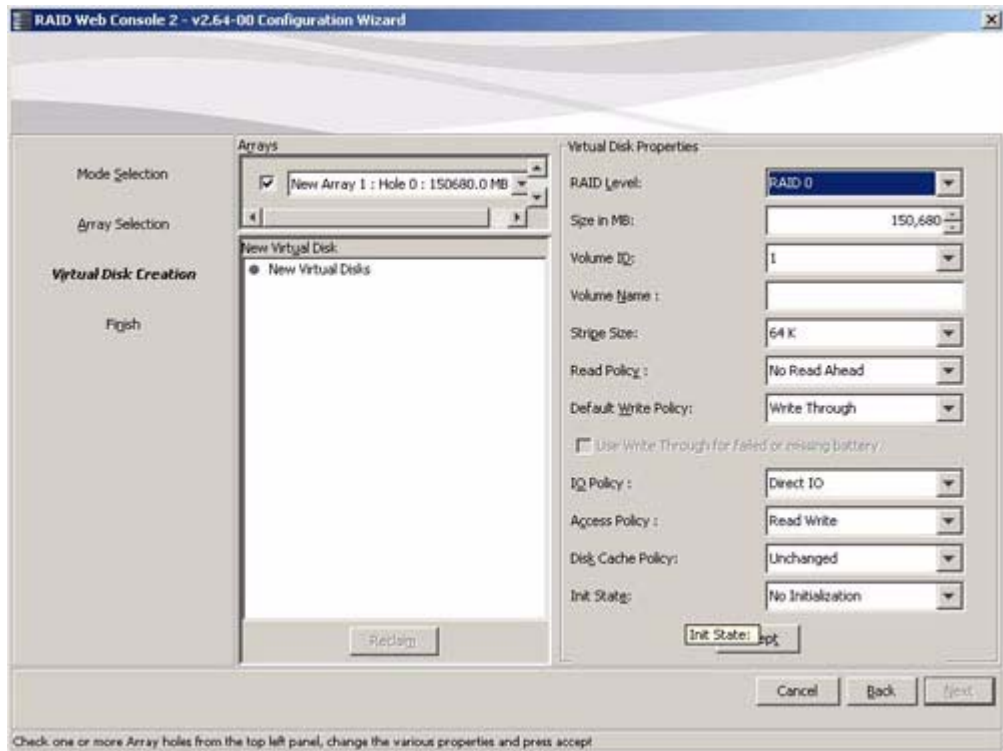


Figure 90. Configure RAID 0 Parameters

11. Select the array type (RAID 0, RAID 1, or RAID 5) and set the rest of the RAID parameters, Stripe Size, Read Policy, Write Policy, and other parameters according to the needs of your application. For more information on these parameters, see [“Manual Configuration,”](#) on page 86.
12. Click **Accept** to set the parameters and define the new array or disk group.

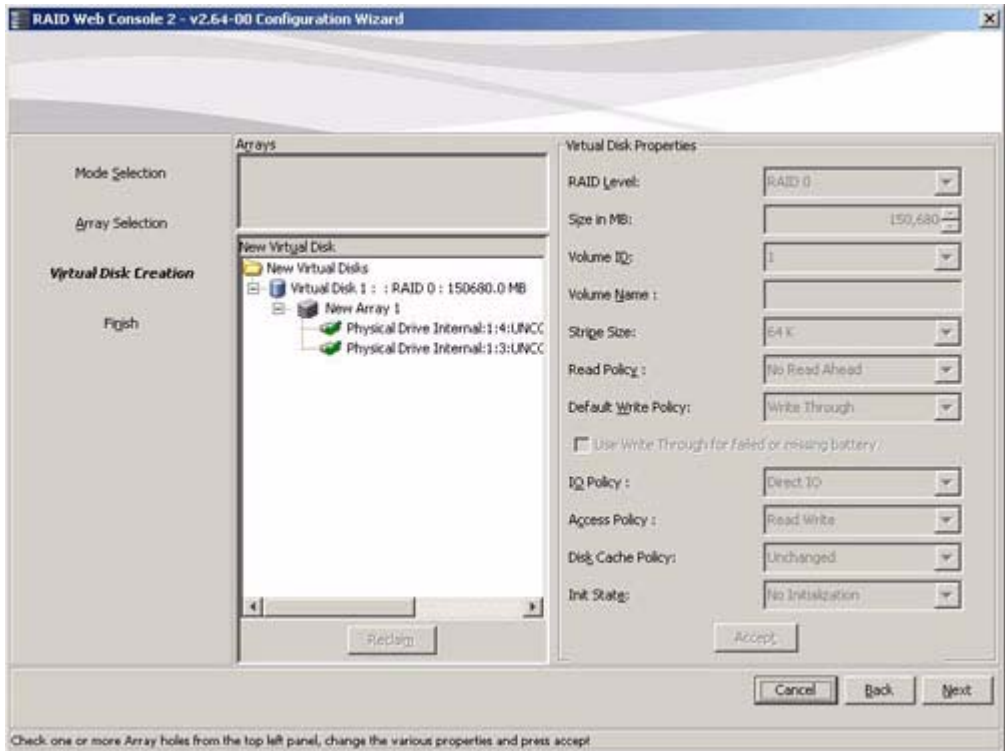


Figure 91. Accepting RAID 0 Parameters

13. Click **Finish** to define the new array or disk group.

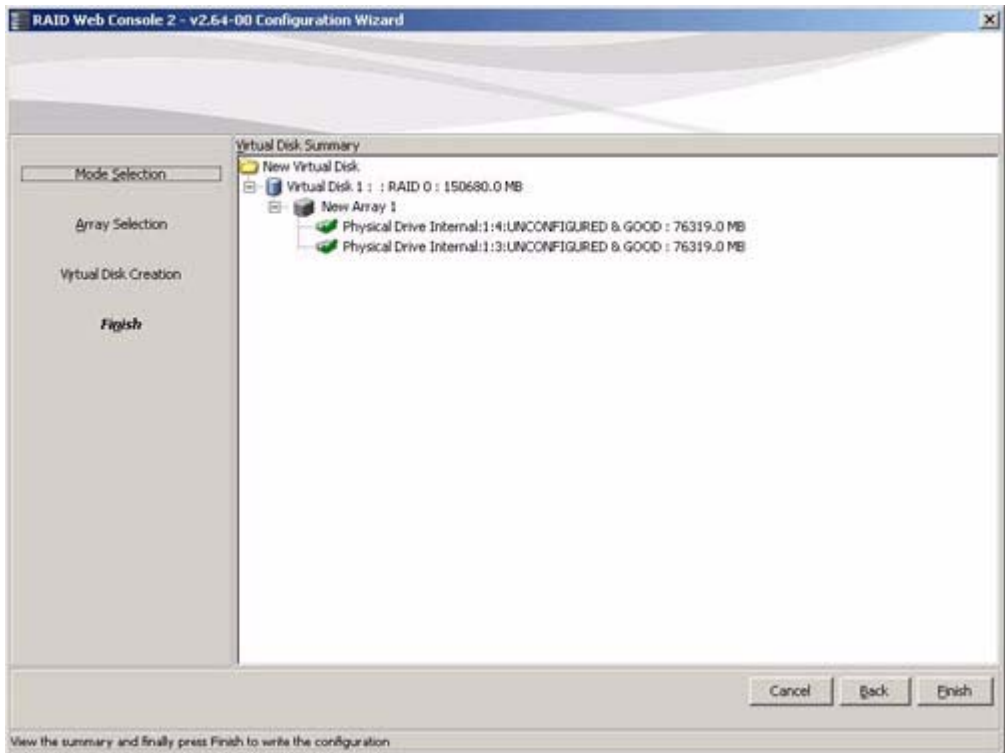


Figure 92. Completing RAID 0 Configuration

The new array or disk group is visible when you select the **Virtual** tab.

RAID Web Console 2 - v2.6.4-00

File Operations Group Operations Log Tools Help

Physical Logical

Server: pyrat_v33_32

Intel(R) RAID Controller SRCAS088E (Bus 10, Dev 0)

Virtual Disk 0 : RAID 0 : 150680.0 MB

Array 0

- Physical Drive Internal:1:1: ONLINE-763
- Physical Drive Internal:1:2: ONLINE-763
- Physical Drive Internal:1:0: ONLINE-763
- Physical Drive Internal:1:5: ONLINE-763

Virtual Disk 1 : RAID 0 : 150680.0 MB

Array 1

- Physical Drive Internal:1:4: ONLINE-763
- Physical Drive Internal:1:3: ONLINE-763

Properties Operations Graphical View

RAID Level	0	Name	
Size	150680.0 MB	Virtual Disk State	Optim
Stripe Size	64 KB	Access Policy	Read1
Disk Cache Policy	Unchanged	Read Policy	No Flt
Current Write Policy	Write Through	Default Write Policy	Write
Write Through for failed/missing battery	No	IO Policy	Direct

ID	Error Level	Date / Time	Description
394	Information	2009-09-12, 17:32:28	Controller ID: 0 Unexpected sense: PD = :17, CDB = 0x12 0x01 0x00 0x00 0x00 0x00 , Sense = 0x70 0x00 0x05 0x00 0x0...
393	Information	2009-09-12, 17:32:27	Controller ID: 0 Created VD: 1
392	Information	2009-09-12, 17:32:27	Controller ID: 0 VD is now OPTIMAL. VD 1
391	Information	2009-09-12, 17:32:27	Controller ID: 0 State change on VD: 1 Previous = Offline Current = Optimal
390	Information	2009-09-12, 17:10:26	Controller ID: 0 Unexpected sense: PD = :17, CDB = 0x12 0x01 0x00 0x00 0x00 0x00 , Sense = 0x70 0x00 0x05 0x00 0x0...
389	Information	2009-09-12, 17:10:25	Controller ID: 0 Unexpected sense: PD = :17, CDB = 0x12 0x01 0x00 0x00 0x00 0x00 , Sense = 0x70 0x00 0x05 0x00 0x0...
388	Information	2009-09-12, 17:10:25	Controller ID: 0 Created VD: 0
387	Information	2009-09-12, 17:10:25	Controller ID: 0 VD is now OPTIMAL. VD 0
386	Information	2009-09-12, 17:10:25	Controller ID: 0 State change on VD: 0 Previous = Offline Current = Optimal
385	Information	2009-09-12, 17:10:10	Controller ID: 0 Unexpected sense: PD = :17, CDB = 0x12 0x01 0x00 0x00 0x00 0x00 , Sense = 0x70 0x00 0x05 0x00 0x0...
384	Information	2009/09/12 17:10:10	Controller ID: 0 Controller status cleared

Displaying log from server

Figure 93. RAID 0 in Virtual Tab

Appendix B: Events and Messages

This appendix lists the Intel[®] RAID Web Console 2 events that may display in the event log.

The Intel[®] RAID Web Console 2 monitors the activity and performance of all controllers in the server and the devices attached to them. When an “event” occurs—such as the completion of a consistency check or the removal of a physical drive—an event message is displayed in the log displayed at the bottom of the Intel[®] RAID Web Console 2 screen. The messages are also logged in the Microsoft Windows* Application log (Event Viewer). Error event levels are:

- **Progress:** This is a progress posting event. Progress events are not saved in NVRAM.
- **Info:** Informational message. No user action is necessary.
- **Warning:** Some component may be close to a failure point
- **Critical:** A component has failed, but the system has not lost data
- **Fatal:** A component has failed, and data loss has occurred or will occur
- **Dead:** A catastrophic error has occurred and the controller has died. This is seen only after the controller has been restarted.

The following table lists all of the Intel[®] RAID Web Console 2 event messages:

Table 6. MFI Event Messages

Number	Type	Description
0	Info	Firmware initialization started (PCI ID %04x/%04x/%04x/%04x)
1	Info	Firmware version %s
2	Fatal	Unable to recover cache data from TBBU
3	Info	Cache data recovered from TBBU successfully
4	Info	Configuration cleared
5	Warning	Cluster down; communication with peer lost
6	Info	Virtual drive %s ownership changed from %02x to %02x
7	Info	Alarm disabled by user
8	Info	Alarm enabled by user
9	Info	Background initialization rate changed to %d%%
10	Fatal	Controller cache discarded due to memory/battery problems
11	Fatal	Unable to recover cache data due to configuration mismatch
12	Info	Cache data recovered successfully
13	Fatal	Controller cache discarded due to firmware version incompatibility
14	Info	Consistency Check rate changed to %d%%
15	Dead	Fatal firmware error: %s
16	Info	Factory defaults restored
17	Info	Flash downloaded image corrupt
18	Caution	Flash erase error
19	Caution	Flash timeout during erase
20	Caution	Flash error
21	Info	Flashing image: %s
22	Info	Flash of new firmware image(s) complete
23	Caution	Flash programming error
24	Caution	Flash timeout during programming
25	Caution	Flash chip type unknown
26	Caution	Flash command set unknown
27	Caution	Flash verify failure
28	Info	Flush rate changed to %d seconds
29	Info	Hibernate command received from host
30	Info	Event log cleared
31	Info	Event log wrapped
32	Dead	Multi-bit ECC error: ECAR=%x
33	Warning	Single-bit ECC error: ECAR=%x
34	Dead	Not enough controller memory
35	Info	Patrol Read complete
36	Info	Patrol Read paused
37	Info	Patrol Read Rate changed to %d%%
38	Info	Patrol Read resumed
39	Info	Patrol Read started

Table 6. MFI Event Messages (Cont.)

Number	Type	Description
40	Info	Rebuild rate changed to %d%%
41	Info	Reconstruction rate changed to %d%%
42	Info	Shutdown command received from host
43	Info	Test event: '%s'
44	Info	Time established as %s; (%d seconds since power on)
45	Info	User entered firmware debugger
46	Warning	Background Initialization aborted on %s
47	Warning	Background Initialization corrected medium error (%s at %lx
48	Info	Background Initialization completed on %s
49	Fatal	Background Initialization completed with uncorrectable errors on %s
50	Fatal	Background Initialization detected uncorrectable double medium errors (%s at %lx on %s)
51	Caution	Background Initialization failed on %s
52	Progress	Background Initialization progress on %s is %s
53	Info	Background Initialization started on %s
54	Info	Policy change due to BBU on %s from %s to %s
55	Info	Policy change due to user on %s from %s to %s
56	Warning	Consistency Check aborted on %s
57	Warning	Consistency Check corrected medium error (%s at %lx
58	Info	Consistency Check done on %s
59	Info	Consistency Check done with corrections on %s
60	Fatal	Consistency Check detected uncorrectable double medium errors (%s at %lx on %s)
61	Caution	Consistency Check failed on %s
62	Fatal	Consistency Check failed with uncorrectable data on %s
63	Warning	Consistency Check found inconsistent parity on %s at strip %lx
64	Warning	Consistency Check inconsistency logging disabled on %s (too many inconsistencies)
65	Progress	Consistency Check progress on %s is %s
66	Info	Consistency Check started on %s
67	Warning	Initialization aborted on %s
68	Caution	Initialization failed on %s
69	Progress	Initialization progress on %s is %s
70	Info	Fast initialization started on %s
71	Info	Full initialization started on %s
72	Info	Initialization complete on %s
73	Info	LD Properties updated to %s (form %s)
74	Info	Reconstruction complete on %s
75	Fatal	Reconstruction of %s stopped due to unrecoverable errors
76	Fatal	Reconstruct detected uncorrectable double medium errors (%s at %lx on %s at %lx)
77	Progress	Reconstruction progress on %s is %s
78	Info	Reconstruction resumed on %s

Table 6. MFI Event Messages (Cont.)

Number	Type	Description
79	Fatal	Reconstruction resume of %s failed due to configuration mismatch
80	Info	Reconstructing started on %s
81	Info	State change on %s from %s to %s
82	Info	PD Clear aborted on %s
83	Caution	PD Clear failed on %s (Error %02x)
84	Progress	PD Clear progress on %s is %s
85	Info	PD Clear started on %s
86	Info	PD Clear completed on %s
87	Warning	Error on %s (Error %02x)
88	Info	Format complete on %s
89	Info	Format started on %s
90	Caution	Hot Spare SMART polling failed on %s (Error %02x)
91	Info	PD inserted: %s
92	Warning	PD %s is not supported
93	Warning	Patrol Read corrected medium error on %s at %lx
94	Progress	Patrol Read progress on %s is %s
95	Fatal	Patrol Read found an uncorrectable medium error on %s at %lx
96	Caution	Predictive failure: CDB: %s
97	Fatal	Patrol Read puncturing bad block on %s at %lx
98	Info	Rebuild aborted by user on %s
99	Info	Rebuild complete on %s
100	Info	Rebuild complete on %s
101	Caution	Rebuild failed on %s due to source drive error
102	Caution	Rebuild failed on %s due to target drive error
103	Progress	Rebuild progress on %s is %s
104	Info	Rebuild resumed on %s
105	Info	Rebuild started on %s
106	Info	Rebuild automatically started on %s
107	Caution	Rebuild stopped on %s due to loss of cluster ownership
108	Fatal	Reassign write operation failed on %s at %lx
109	Fatal	Unrecoverable medium error during rebuild on %s at %lx
110	Info	Corrected medium error during recovery on %s at %lx
111	Fatal	Unrecoverable medium error during recovery on %s at %lx
112	Info	PD removed: %s
113	Warning	CDB: %s
114	Info	State change on %s from %s to %s
115	Info	State change by user on %s from %s to %s
116	Warning	Redundant path to %s broken
117	Info	Redundant path to %s restored
118	Info	Dedicated Hot Spare PD %s no longer useful due to deleted array
119	Caution	SAS topology error: Loop detected

Table 6. MFI Event Messages (Cont.)

Number	Type	Description
120	Caution	SAS topology error: Unaddressable device
121	Caution	SAS topology error: Multiple ports to the same SAS address
122	Caution	SAS topology error: Expander error
123	Caution	SAS topology error: SMP timeout
124	Caution	SAS topology error: Out of route entries
125	Caution	SAS topology error: Index not found
126	Caution	SAS topology error: SMP function failed
127	Caution	SAS topology error: SMP CRC error
128	Caution	SAS topology error: Multiple subtractive
129	Caution	SAS topology error: Table to table
130	Caution	SAS topology error: Multiple paths
131	Fatal	Unable to access device %s
132	Info	Dedicated Hot Spare created on %s (%s)
133	Info	Dedicated Hot Spare %s disabled
134	Caution	Dedicated Hot Spare %s no longer useful for all arrays
135	Info	Global Hot Spare created on %s (%s)
136	Info	Global Hot Spare %s disabled
137	Caution	Global Hot Spare does not cover all arrays
138	Info	Created %s}
139	Info	Deleted %s}
140	Info	Marking LD %s inconsistent due to active writes at shutdown
141	Info	Battery Present
142	Warning	Battery Not Present
143	Info	New Battery Detected
144	Info	Battery has been replaced
145	Caution	Battery temperature is high
146	Warning	Battery voltage low
147	Info	Battery is charging
148	Info	Battery is discharging
149	Info	Battery voltage is normal
150	Fatal	Battery needs to be replacement
151	Info	Battery relearn started
152	Info	Battery relearn in progress
153	Info	Battery relearn completed
154	Caution	Battery relearn timed out
155	Info	Battery relearn pending: Battery is under charge
156	Info	Battery relearn postponed
157	Info	Battery relearn will start in 4 days
158	Info	Battery relearn will start in 2 day
159	Info	Battery relearn will start in 1 day
160	Info	Battery relearn will start in 5 hours

Table 6. MFI Event Messages (Cont.)

Number	Type	Description
161	Info	Battery removed
162	Info	Current capacity of the battery is below threshold
163	Info	Current capacity of the battery is above threshold
164	Info	Enclosure (SES) discovered on %s
165	Info	Enclosure (SAF-TE) discovered on %s
166	Caution	Enclosure %s communication lost
167	Info	Enclosure %s communication restored
168	Caution	Enclosure %s fan %d failed
169	Info	Enclosure %s fan %d inserted
170	Caution	Enclosure %s fan %d removed
171	Caution	Enclosure %s power supply %d failed
172	Info	Enclosure %s power supply %d inserted
173	Caution	Enclosure %s power supply %d removed
174	Caution	Enclosure %s SIM %d failed
175	Info	Enclosure %s SIM %d inserted
176	Caution	Enclosure %s SIM %d removed
177	Warning	Enclosure %s temperature sensor %d below warning threshold
178	Caution	Enclosure %s temperature sensor %d below error threshold
179	Warning	Enclosure %s temperature sensor %d above warning threshold
180	Caution	Enclosure %s temperature sensor %d above error threshold
181	Caution	Enclosure %s shutdown
182	Warning	Enclosure %s not supported; too many enclosures connected to port
183	Caution	Enclosure %s firmware mismatch
184	Warning	Enclosure %s sensor %d bad
185	Caution	Enclosure %s phy %d bad
186	Caution	Enclosure %s is unstable
187	Caution	Enclosure %s hardware error
188	Caution	Enclosure %s not responding
189	Info	SAS/SATA mixing not supported in enclosure; PD %s disabled
190	Info	Enclosure (SES) hotplug on %s was detected, but is not supported
191	Info	Clustering enabled
192	Info	Clustering disabled
193	Info	PD too small to be used for auto-rebuild on %s
194	Info	BBU enabled; changing WT virtual disks to WB
195	Warning	BBU disabled; changing WB virtual disks to WT
196	Warning	Bad block table on PD %s is 80% full
197	Fatal	Bad block table on PD %s is full; unable to log block %lx
198	Info	Consistency Check Aborted Due to Ownership Loss on %s
199	Info	Background Initialization (BGI) Aborted Due to Ownership Loss on %s
200	Caution	Battery/charger problems detected; SOH Bad
201	Warning	Single-bit ECC error: ECAR=%x, ELOG=%x, (%s); warning threshold exceeded

Table 6. MFI Event Messages (Cont.)

Number	Type	Description
202	Caution	Single-bit ECC error: ECAR=%x, ELOG=%x, (%s); critical threshold exceeded
203	Caution	Single-bit ECC error: ECAR=%x, ELOG=%x, (%s); further reporting disabled
204	Caution	Enclosure %s Power supply %d switched off
205	Info	Enclosure %s Power supply %d switched on
206	Caution	Enclosure %s Power supply %d cable removed
207	Info	Enclosure %s Power supply %d cable inserted
208	Info	Enclosure %s Fan %d returned to normal
209	Info	BBU Retention test was initiated on previous boot
210	Info	BBU Retention test passed
211	Caution	BBU Retention test failed!
212	Info	NVRAM Retention test was initiated on previous boot
213	Info	NVRAM Retention test passed
214	Caution	NVRAM Retention test failed!
215	Info	%s test completed %d passes successfully
216	Caution	%s test FAILED on %d pass. Fail data: errorOffset=%x goodData=%x badData=%x
217	Info	Self check diagnostics completed
218	Info	Foreign Configuration Detected
219	Info	Foreign Configuration Imported
220	Info	Foreign Configuration Cleared

